




User Guide



BT Video Baby Monitor 1030

Welcome...

to your BT Video Baby Monitor 1030

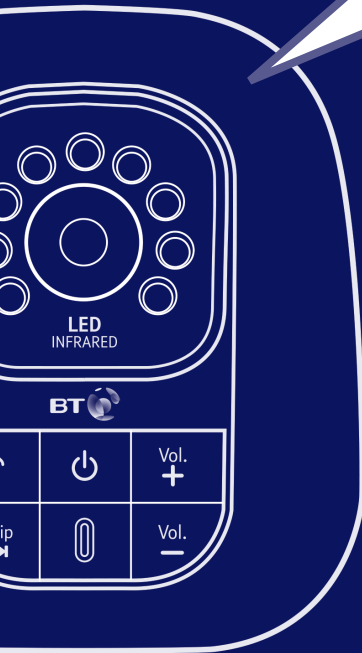

- Large 2.8" LCD screen so you can see your baby clearly
- Quality video experience with a high refresh rate for a smooth picture
- Digital sound quality lets you hear your baby breathe, gurgle, snuffle or cry with complete clarity
- Wireless range of up to 300m outdoors and up to 50m indoors (in ideal conditions) – giving you the freedom to move around with clear reception and no interference from other baby monitors
- Auto-adjusts between day and night modes so no need to press buttons in the dark
- Baby room temperature monitor
- 5 Lullabies
- Talk Back feature lets you instantly reassure and calm your baby
- Connect up to 4 cameras
- Out of range and battery low warnings

This User Guide provides you with all the information you need to get the most from your BT Video Baby Monitor 1030.

Please read this guide carefully and keep it for future reference.

Need help?

If you have any problems setting up or using your BT Video Baby Monitor 1030 (or would like any additional or replacement batteries), call our free BT Video Baby Monitor 1030 Helpline on 0808 100 6554*. Our dedicated advisors are more likely to be able to help you than the retailer where you made your purchase.

Alternatively, you may find the answer in the 'Help' section at the back of this guide.

Additional answers to Frequently Asked Questions are also available from bt.com/producthelp

Got everything?

- Baby unit
- Parent unit
- Rechargeable battery for your Parent unit
- 1 x battery compartment cover for your Parent unit
- 1 x power adaptor for your Parent unit (item code 064761)
- 1 x power adaptor for your Baby unit (item code 064785)
- Wall mounting bracket, screws (x2) and wall plugs (x2)

* Calls made from within the UK mainland network are free.
Mobile and international call costs may vary.

Important safety information

- Your BT Video Baby Monitor 1030 is designed to be an aid and should not be used as a substitute for responsible and proper adult supervision.
- Make sure the Baby unit, Parent unit and mains adaptor cables are kept out of reach of your baby – at least one metre away.
- Never place the Baby unit inside your baby's cot, bed or playpen.
- Never cover your Parent or Baby units (e.g. with clothes, towels or blankets).
- Never use or place your Parent or Baby units in moist places or near water.
- If travelling abroad, make sure that the voltage shown on the mains power adaptor corresponds to the local mains power before connecting to the power supply.
- There is a risk of explosion if the batteries are replaced by an incorrect type. Only use the supplied battery for the Parent unit (or a replacement as advised by the Helpline). Only use x4 AA batteries (not supplied) for the Baby unit. You can use rechargeable batteries but the Baby unit will not charge them.
- Dispose of used batteries according to the instructions. Do not dispose of batteries in a fire as they may explode.
- Only use the power adaptor cables supplied. Using an incorrect power adaptor could seriously damage the product.

-
- Do not try and disassemble, open or remove parts of the product. Contact the Helpline for any repairs.
 - During continual use the Baby unit and Parent unit power adaptors may become warm to the touch. This is normal and is not something to be concerned about.

In this guide

Important safety information..... 4

Your BT Video Baby Monitor 1030

Baby unit8

Back of Baby unit.....9

Parent unit10

Parent unit screen display icons12

Parent unit menu map14

Setting up 16

Parent unit16

Baby unit18

Positioning and operating range20

Testing the units before use21

Pairing the units21

Wall mounting the Baby unit –
optional22

Using your BT Video Baby Monitor 1030

Using the Baby unit.....25

Switch the Baby unit on/off.....25

Adjust the Baby unit loudspeaker
volume.....25

Play lullabies from the Baby unit.....25

To play lullabies26

Night vision26

Using the Parent unit26

Switch the Parent unit on/off.....26

Adjust the Parent unit loudspeaker
volume.....27

Zoom27

Zoom in or out in single-CAM mode..27

View28


To view different Baby units.....28

Zoom in or out in multi-CAM mode (if you have more than one Baby unit)...	28	Sound activated screen	38
To turn the screen on/off	28	Parent unit screen brightness.....	38
Talk to the Baby unit	29	Display language	39
Parent unit settings menu.....	30	Pair/unpair CAM	40
Using the menu	30	To pair a Baby unit to the Parent unit	40
Turn the battery low alert tone on/off	30	To unpair a Baby unit from the Parent unit	42
Turn the No link alert on the Parent unit on/off	31	Help.....	43
Sensitivity level.....	32	General information	46
To set the sound sensitivity level of the Baby unit.....	32	Cleaning.....	46
Room temperature monitor	33	Guarantee	46
Set the minimum room temperature	33	Product disposal instructions	47
Set the maximum room temperature.....	34	R&TTE	47
Turn the temperature alert on or off.....	35	Declaration of Conformance	47
Set the temperature format	36	User Guide formats	47
Vibrate.....	37		


Your BT Video Baby Monitor 1030

Baby unit


The Baby unit is also referred to as a CAM (camera) in this guide.

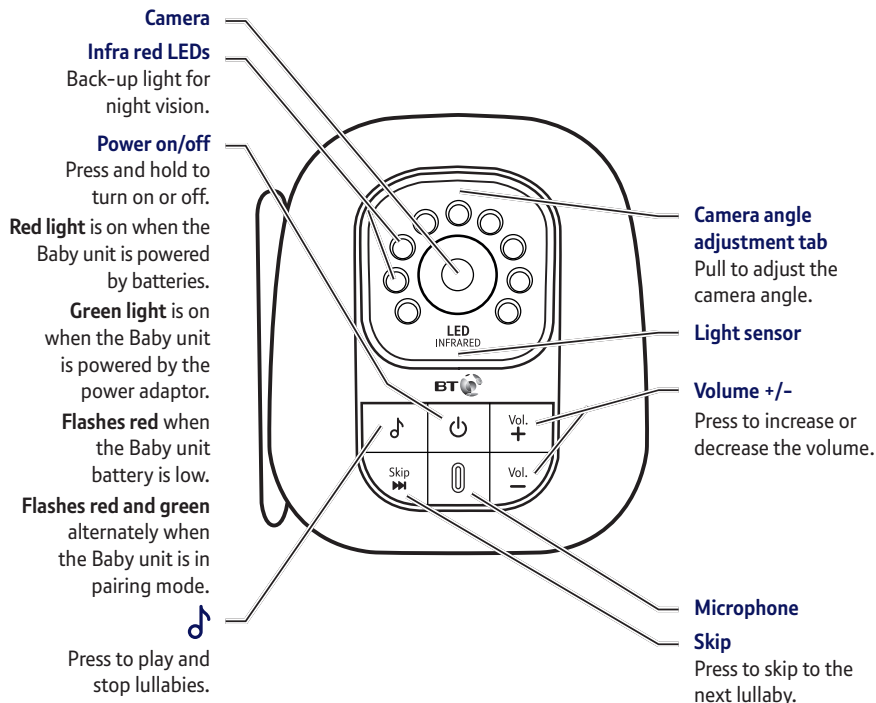


Back of Baby unit

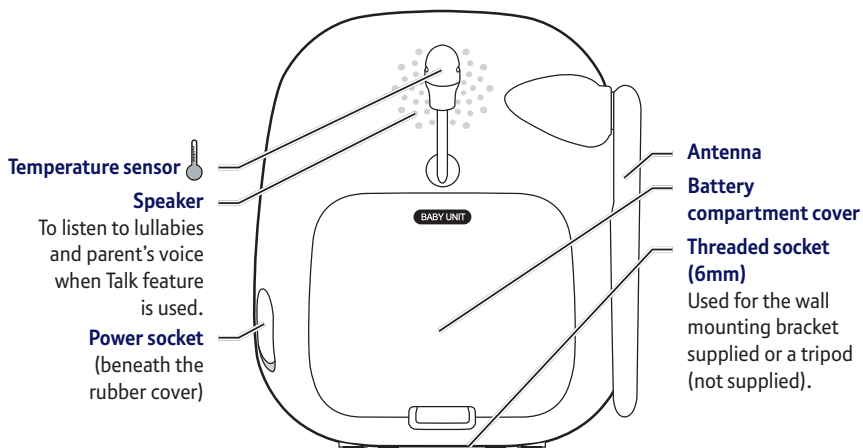

Parent unit

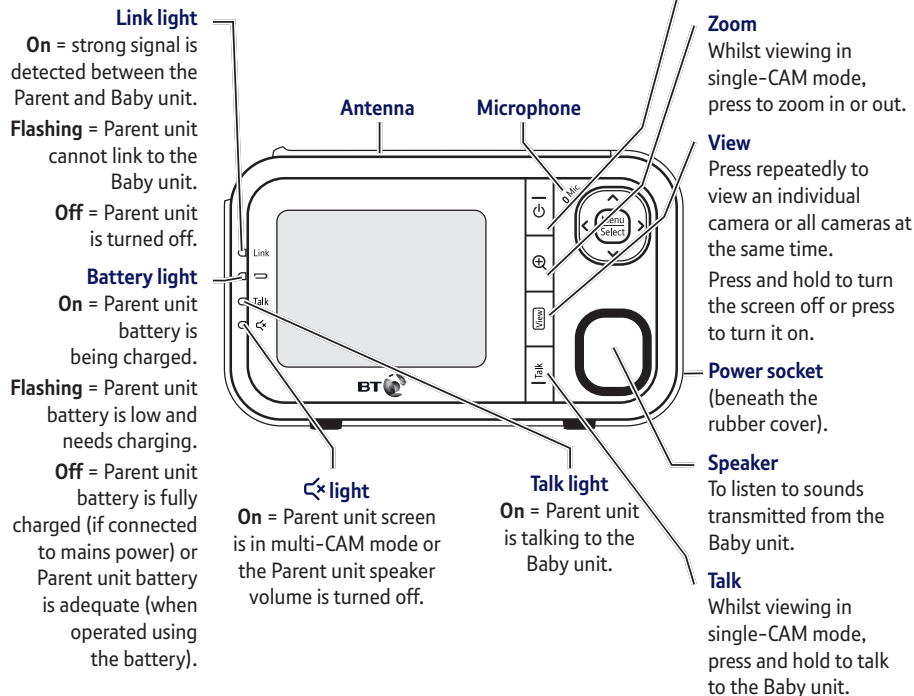

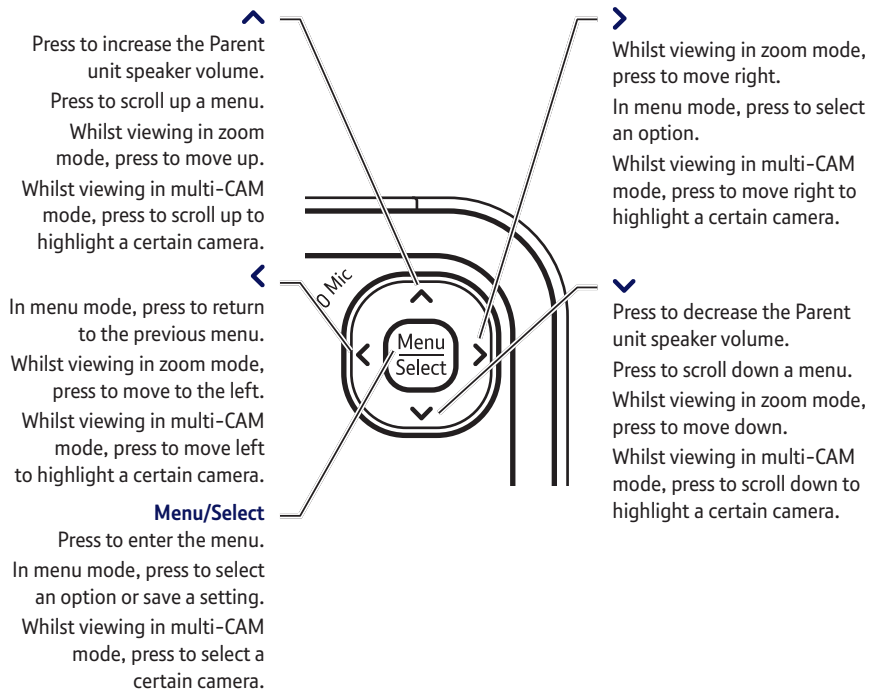


Parent unit continued




Parent unit screen display icons

Connection status

 displayed when strong signal strength is detected between the Baby and Parent unit.

 or  displayed when moderate signal strength is detected between the Baby and Parent unit.

 displayed when the link between the Baby and Parent unit is lost.

Zoom

Displayed when the camera at the Baby unit has been zoomed in.

Lullaby

Displayed when a lullaby is playing at the Baby unit.

Temperature alert

Displayed when the temperature alert is set to on.

18 °C Current temperature

Displays the temperature in the room where the Baby unit is.

Sound level indicators

Light up to indicate the level of sound being transmitted from the Baby unit.

Speaker volume

Light up when adjusting the speaker volume level.

Parent unit screen display icons continued

CAM 1, 2, 3, 4 Current view status


Displays the number of the Baby unit that is being viewed when in single-CAM mode.


Displays the highlighted Baby unit when in multi-CAM mode.


The icon does not appear when the Parent unit has no paired Baby unit.

Battery status


The battery icon will scroll when charging.


 Displayed when the battery is fully charged.

 Displayed when the battery is low and needs charging.

 Displayed when no battery is installed but is operating using the power adaptor, or the battery has been installed incorrectly.

Parent unit menu map

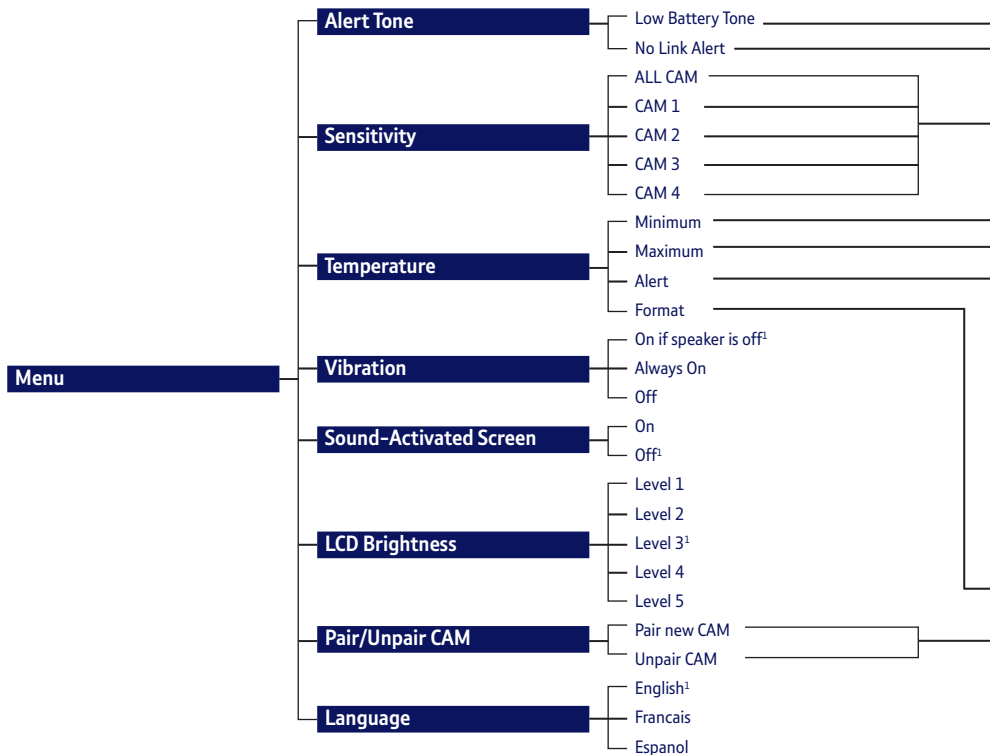

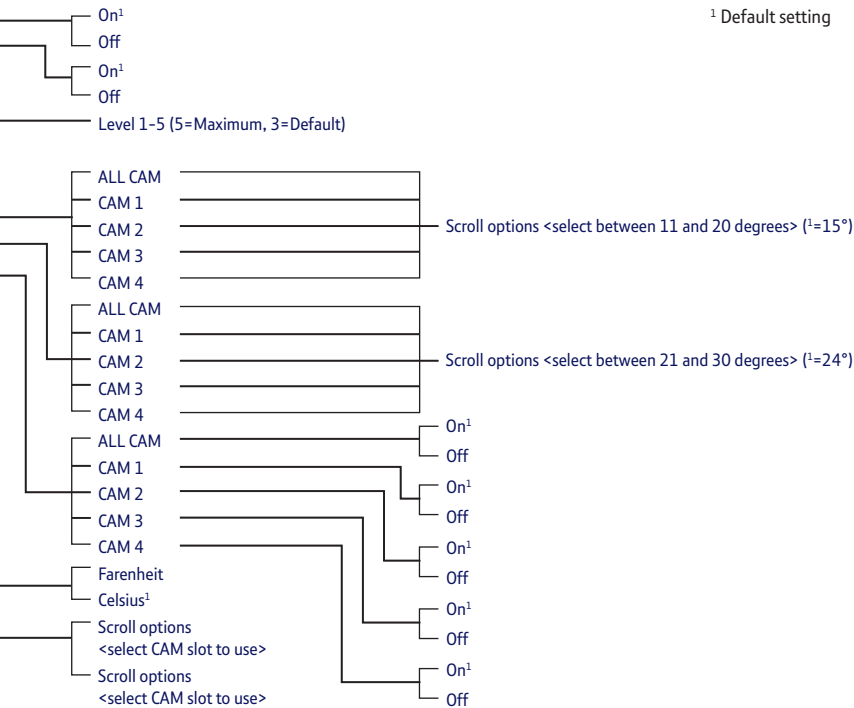

Setting up

WARNING

Only use the battery supplied. Using another type could permanently damage the unit.

Battery performance


The operating time for using the rechargeable battery is limited. It will last for approximately 6 hours in standby mode but this will vary depending on the sensitivity level you have set, your actual use and the age of the battery. Therefore, if you want to monitor your baby for long periods we strongly recommend you connect the power adaptor to the Parent unit, especially at night.

Please note that new batteries do not reach full capacity until they have been in normal use for several days. The charge capacity of rechargeable batteries will reduce with time as they wear out, so reducing the performance time of the Parent unit. Eventually they will need to be replaced. New batteries can be obtained from the BT Video Baby Monitor 1030 Helpline on 0808 100 6554*.


Parent unit

1. Remove the plastic protective film from the front of the unit.

Insert the battery supplied into the battery compartment. It will only fit one way round.

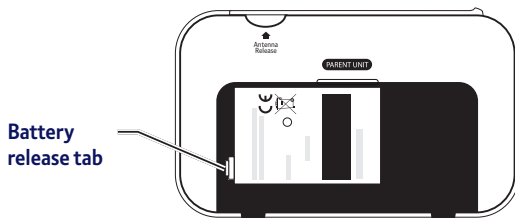

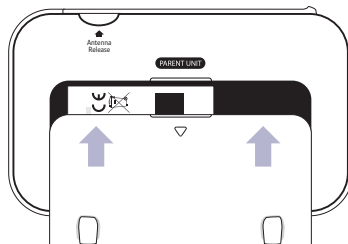


2. Replace the battery compartment cover by aligning the cover flat against the battery compartment, then slide it towards the centre of the Parent unit until it clicks into place.



Removing the battery

If you ever need to remove the battery, unplug the power adaptor and then open the battery compartment cover. Move the battery release tab (see diagram on page 16 for position) to the right to release the battery.

3. Plug the power adaptor cable (item code 064761) into the socket marked  on the side of the Parent unit and plug the other end into the mains power and switch on. The  light on the front of the Parent unit will turn on while the battery is charging.

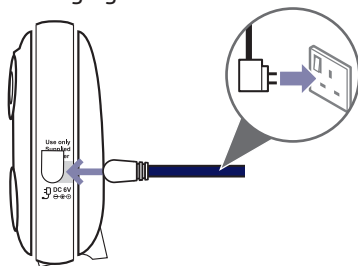



4. Leave the battery to charge continuously for 12 hours before you switch the Parent unit on. When the battery is fully charged the light on the side of the Parent unit will turn off.

The Parent unit rechargeable battery will lose charge over a period of time, even if switched off.

If the Parent unit is not going to be used for a long time, remove the battery to prevent any possible leakage.

Battery low warning

When the battery is low the screen will display **Battery low at Parent unit** and the  icon. The  light will also flash and you will hear a short alert beep. You will need to recharge the Parent unit without interruption for approximately 30 minutes to give the Parent unit enough charge to use for a short time. If the Parent unit is turned off during charging, the battery will charge more quickly.

WARNING

Only use the power adaptor supplied. Using an incorrect power adaptor could permanently damage your product.

18 Setting up

Make sure the Parent unit and power adaptor cable are kept away from the reach of children.



You can charge the battery when the Parent unit is switched on but this will extend the charging time.

WARNING

Do not mix old and new batteries. Only use the recommended type of 4 AA batteries. Using other types could permanently damage the unit.

Battery performance


The operating time for using AA batteries is approximately 8 hours depending on light conditions and feature usage. Therefore, if you want to monitor your baby for long periods we strongly recommend you connect the power adaptor to the Baby camera unit.

5. Once the Parent unit battery has fully charged, press the  button on the Parent unit until the screen becomes active. The battery icon on the top line of the screen will be solid to indicate that the battery is fully charged .

Baby unit


The Baby unit can be powered up using the power adaptor provided or using 4 AA batteries (not supplied). Even if the power adaptor is used, we recommend that you also install batteries to guarantee continual operation in the case of a power cut. Battery condition should be checked weekly to ensure leakage does not occur.


1. Install 4 AA batteries (not supplied) into the battery compartment as shown observing the polarity markings inside. Then replace the battery compartment cover.

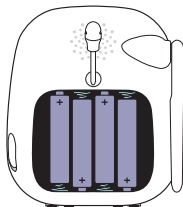

Removing the batteries

When you need to remove the batteries, unplug the power adaptor and then open the battery compartment cover and use the ribbon to gently pull them out.


2. Plug the power adaptor cable (item code 064785) into the socket marked  on the side of the Baby unit and plug the other end into the mains power and switch on.

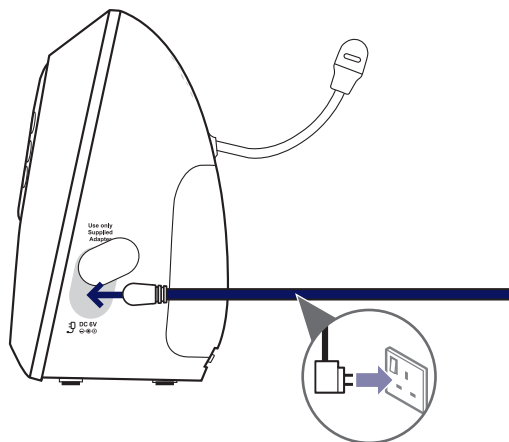

If the Baby unit is not going to be used for a long time, remove the batteries to prevent any possible leakage.

Rechargeable batteries can be used but the Baby unit cannot charge the rechargeable batteries.

Battery low warning

When the batteries are low the light on the  button of the Baby unit will flash red. You will need to replace the batteries.

Battery condition should be checked weekly to ensure leakage does not occur.

WARNING

Only use the power adaptor supplied. Using an incorrect power adaptor could permanently damage your product.

Make sure the Baby unit and power adaptor cable are kept away from the reach of children.

The Baby unit camera may be angled down by pulling the tab on top of the camera towards you.

Positioning and operating range

Positioning

We recommend you place the Baby unit between 1–2 metres away from your baby for best performance. Make sure the unit and cable is out of reach of your baby.

Do not place the Parent and Baby units too close together as you will hear a high-pitched noise, this is normal. The units are designed to be located at a distance from one another, e.g. in separate rooms.

Operating range




The operating range is up to 300 metres outdoors and 50 metres indoors. The actual operating range may vary depending on the environmental conditions and other interferences such as walls, doors and other obstructions.

The Baby unit may not detect sounds when the sensitivity level is set below a certain level so you may wish to increase the sensitivity level, see page 32. You may also need to turn the loudspeaker volume up on the Parent unit to hear the sounds transmitted from the Baby unit, see page 27.

Testing the units before use

It is important that you test the units before use and at regular times thereafter, especially if they have not been used for some time.

To test your units

1. Place the Parent and Baby units in the same room but make sure they are at least 2 metres apart.
2. Press and hold the  button on the Baby unit until the Power light on the button turns on.
3. Press and hold the  button on the Parent unit until the display shows **Waiting for linking** and the Link light flashes.
4. Press the  button on the Parent unit to view the image from the Baby unit.

Pairing the units

The Parent and Baby unit supplied are already paired. You can add or replace Baby units purchased separately to your baby monitor system. You can pair a maximum of four Baby units to your Parent unit. Each new Baby unit must be paired to the Parent unit before use, see page 40 for instructions.

If no connection can be established, the Parent unit will display **No link to CAM** for a few seconds, then **Waiting for linking...** The Link light will continue to flash.

Important

Before you wall mount, please check that:


- the wall can support the weight of the product
- the power adaptor will reach the power socket
- you are not drilling into any hidden wiring or plumbing

BT are not responsible for any damage/injury caused while attempting to wall mount your product.

Wall mounting the Baby unit – optional


The Baby unit is ready for tabletop use but you can wall mount it using the wall mounting bracket supplied if you wish to. Make sure you test the units (see page 21) from the proposed position before wall mounting.

1. Place the wall mounting bracket against the wall where you want to wall mount the Baby unit and use a pencil to mark the top two holes as shown.

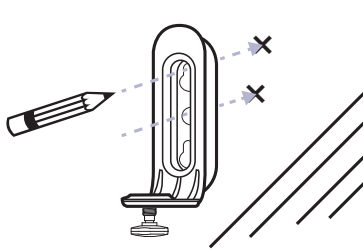


2. Remove the wall mounting bracket and check the reception strength of the Baby unit and camera angle before drilling two holes in the wall using a 5mm drill bit.

3. Align the wall mounting bracket and screws with the holes in the wall as shown. Make sure you attach the screw in the middle hole first so that the wall mounting position is fixed, then attach the other screw in the top hole.

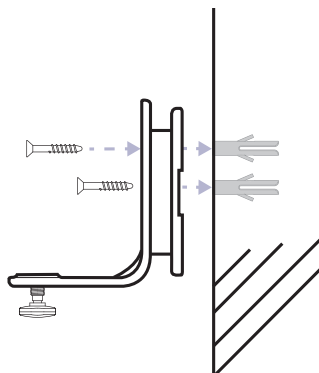

4. Place the Baby unit onto the wall mounting bracket and tighten the screw into the threaded socket at the bottom to secure the Baby unit in place.

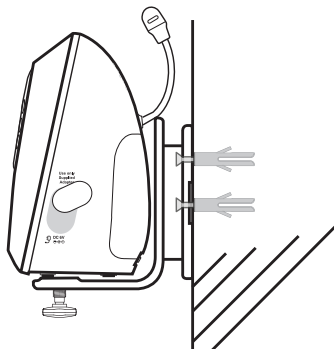



Your BT Video Baby Monitor 1030 is now ready for use.

Using your BT Video Baby Monitor 1030



Using the Baby unit

Switch the Baby unit on/off

1. Press and hold the  button until the light on the button turns on.
2. To turn the Baby unit off, press and hold the  button for 2 seconds. The light will turn off.

Adjust the Baby unit loudspeaker volume

You can adjust the loudspeaker volume from Level 1 to Level 5. The default setting is Level 3. If you adjust the loudspeaker volume it will also adjust the parent voice (Talk) playback volume.

1. Press the  or  button on the Baby unit at any time to increase or decrease the loudspeaker volume.

Play lullabies from the Baby unit

The Baby unit has five lullabies that can be played to gently soothe your baby. The total lullaby playback time is about 15 minutes and it starts from where you stopped it last time.

When the maximum or minimum volume levels have been reached you will hear an error tone.

Lullaby playback will be paused if the Talk feature is being used, when finished lullaby playback will resume.

The infrared LED's may glow red slightly when viewed in dark conditions. This is normal.

To play lullabies

Press the  button to play.

Press the  button to skip to the next lullaby.



Press the  button to stop playback.

Night vision



To help you monitor your baby at night, the Baby unit automatically uses the light from its infrared LEDs when it is turned on in a dark room. However, it only transmits black and white images in this mode.


Using the Parent unit

Switch the Parent unit on/off

1. Press and hold the  button until the display screen turns on.
2. To turn the Parent unit off, press and hold the  button until the display screen turns off.

Adjust the Parent unit loudspeaker volume







You can adjust the loudspeaker volume from Volume 1 to Volume 7 or you can switch it off. The default setting is Volume 4. When the loudspeaker volume is set to off, the  icon appears on the screen and the  light turns on.

1. Press the  or  button on the Parent unit to increase or decrease the loudspeaker volume.

Zoom

You can zoom in or out while viewing images transmitted from the Baby unit.

Zoom in or out in single-CAM mode

1. Press the  button to zoom in. Use the , ,  or  button to move the zoomed image up, down, left or right.
2. To zoom out again, press the  button.

Multi-CAM mode is not available if only one Baby unit is paired to the Parent unit.













View

You can change the screen to view images from different Baby units (if you have more than one Baby unit), or you can turn the screen off.


To view different Baby units

1. Press the  button to select the Baby unit you want: **CAM 1**, **CAM 2**, **CAM 3**, **CAM 4** or **multi-CAM**.

Zoom in or out in multi-CAM mode (if you have more than one Baby unit)

1. Use the , ,  or  button to choose the Baby unit you want, then press the  or  button.
2. Press the  button again to zoom in. Use the , ,  or  button to move the zoomed image up, down, left or right.
3. To zoom out again, press the  button.

To turn the screen on/off

1. Press and hold the  button until the screen turns off.
2. To turn the screen back on, press any button.

Talk to the Baby unit

You can use the Parent unit Talk feature as a one-way intercom to comfort and reassure your baby. By speaking into the Parent unit your baby will hear your voice from the Baby unit. Please note that when using the Talk feature you will not be able to hear your baby until you release the **Talk** button.

1. If you have more than one Baby unit you may need to press the **View** button first to select the Baby unit you want to talk to.
2. Press and hold the **Talk** button to speak to your baby, you should speak towards the MIC (microphone) on the Parent unit. Your voice will be heard from the Baby unit and while the **Talk** button is depressed the Talk light will be on.


When using the Talk feature, hold the Parent unit approximately 30cm in front of your mouth when talking to baby.

The Talk feature will not work in multi-CAM view mode. You will need to select a Baby unit in single-CAM view mode to use Talk.

If the loudspeaker volume on the Parent unit is set to off, it will be reset to the default volume setting after you press and hold the **Talk** button.

Lullaby playback will be paused if the Talk feature is being used, when finished lullaby playback will resume.


Parent unit settings menu










To return to the previous menu at any time, press the  button.

The default setting is on.

The Baby unit low battery alert will only work when viewing that particular Baby unit in single-CAM or multi-CAM mode.






Using the menu






The  button on the Parent unit can be used to select and change settings on the Baby and Parent units. You can access the menu by:

1. Press the .
2. Press the  or  button to scroll through the menu options. When the menu option you want is highlighted on the left, press the  or  button to enter it.
3. Press the  or  button until the feature or option you want is highlighted on the right, then press the  or  button to enter the feature menu or to confirm your selection. You will hear a confirmation tone.

Turn the battery low alert tone on/off













The Parent unit will emit an alert tone when the Parent or Baby unit battery is low.

1. Press .
2. Press  or  to highlight **ALERT TONE**, then press  or .

3. Press  or  again to select **Low Battery Tone**.
4. Use  or  to select **On** or **Off**, then press  to confirm. You will hear a confirmation tone.


Turn the No link alert on the Parent unit on/off

The Parent unit will beep whenever the link between the Parent and Baby unit is lost. You can turn this alert beep on or off.

1. Press .
2. Press  or  to highlight **ALERT TONE**, then press  or .
3. Use  or  to highlight **No Link Alert**, then press  or .
4. Use  or  to select **On** or **Off**, then press  to confirm. You will hear a confirmation tone.

The default setting is on.

The No link alert will only work when viewing that particular Baby unit in single-CAM or multi-CAM mode.

To briefly override the sensitivity setting, to hear all sounds in baby's room (for 15 seconds), briefly press the  **Talk** button on the Parent unit.






The Baby unit(s) must be turned on in order to enter the sensitivity menu of the Parent unit.








Sensitivity level

You can change the sensitivity level of sounds being received from the Baby unit from Level 1 to Level 5 (maximum). The default setting is Level 3. The higher the sound sensitivity level is set, the more sensitive the Baby unit is in detecting sounds transmitted from the Baby unit to the Parent unit.

If you want the Baby unit to be very sensitive in detecting sounds, you may wish to set the sensitivity to Level 5 (maximum) so that the Baby unit will detect any sounds including background noises. If you want it to be less sensitive in detecting sounds, you may wish to set the sensitivity to a lower level (Level 1 – 4), so that the Baby unit will transmit sounds to the Parent unit only when your baby is making a noise.

To set the sound sensitivity level of the Baby unit

1. Press .
2. Press  or  to highlight **SENSITIVITY**, then press  or .





3. Press  or  to choose the Baby unit you want or all Baby units, then press  or .
4. Use  or  to select the level you want from Level 1 to Level 5, then press  to confirm. You will hear a confirmation tone.

Room temperature monitor

There is a temperature sensor on the Baby unit to monitor the temperature in your baby's room. When the temperature alert is set to On, an alert beep will sound to warn you when the temperature is out of the range you have set.

Set the minimum room temperature

You can set the minimum temperature between 11°C (52°F) and 20°C (69°F). The pre-set minimum temperature is 15°C (57°F).

1. Press .
2. Press  or  to highlight **TEMPERATURE**, then press  or .

IMPORTANT!

The temperature sensor used in this BT Video Baby Monitor 1030 is intended as a guide, to provide parents with an indication of the room temperature in which the unit has been placed.

It is designed to operate within an approximate tolerance of 2°C and is not intended to be as accurate as some medical devices.










Please note that your own temperature reference e.g. your central heating thermostat may not be as accurate, possibly due to tolerances and positioning of the thermostat in relation to the Baby monitor sensor.

Pre-set temperature alert range

The Baby unit comes with pre-set maximum and minimum temperatures, **as recommended by the UK Department of Health as part of the recommendations to reduce the risk of cot death.**














If the temperature falls below or goes above the setting an alert will sound on the Parent unit if the temperature alert is set to On. The temperature alert pre-set temperatures are 15°C (and below) and 24°C (and above).




Healthcare professionals advise that the ideal temperature for your baby's room is between 16°C and 20°C.

3. Press  or  again to select **Minimum**.
4. Press  or  to choose the Baby unit you want or all Baby units, then press  or .
5. Use  or  to select the temperature you want, then press  to confirm. You will hear a confirmation tone.

















Set the maximum room temperature

You can set the maximum temperature between 21°C (70°F) and 30°C (86°F). The pre-set maximum temperature is 24°C (85°F).

1. Press .
2. Press  or  to highlight **TEMPERATURE**, then press  or .
3. Press  or  to highlight **Maximum**, then press  or .
4. Press  or  to choose the Baby unit you want or all Baby units, then press  or .

5. Use  or  to select the temperature you want, then press  to confirm. You will hear a confirmation tone.

Turn the temperature alert on or off













1. Press .
2. Press  or  to highlight **TEMPERATURE**, then press  or .
3. Press  or  to highlight **Alert**, then press  or .
4. Press  or  to choose the Baby unit you want or all Baby units, then press  or .
5. Use  or  to select **On** or **Off**, then press  to confirm. You will hear a confirmation tone.

The default setting is On.

The temperature alert will only work when viewing that particular Baby unit in single-CAM or multi-CAM mode.









Set the temperature format

You can set the temperature format as either Celsius or Fahrenheit. The default setting is Celsius.

1. Press .
2. Press  or  to highlight **TEMPERATURE**, then press  or .
3. Press  or  to highlight **Format**, then press  or .
4. Press  or  to choose **Celsius** or **Fahrenheit**, then press  to confirm. You will hear a confirmation tone.

Vibrate


You can set whether you want the Parent unit to vibrate. The vibrate setting is pre-set to On if speaker is off.

1. Press .
2. Press  or  to highlight **VIBRATION**, then press  or .
3. Press  or  to choose **On if speaker is off, Always on** or **Off**, then press  to confirm. You will hear a confirmation tone.

The following events will cause the Parent unit to vibrate (when set to do so):

- Low battery alert (Parent or Baby unit).
- Loss of link alert.
- Temperature alert.
- Sensitivity level exceeded.









38 Parent unit settings menu

Even when enabled, the sound activated screen functionality will temporarily be suspended if you press any button on the Parent unit. To resume sound activated screen functionality, press and hold the  button until the screen turns off.

The Parent unit will only turn On if the sounds detected are from the last viewed camera, or any camera if the view was multi-CAM mode.

Sound activated screen








When the Parent unit screen is turned off (see page 28), you can set the screen to turn on automatically whenever there are sounds detected from the Baby unit(s). The Parent unit screen will turn off automatically when no sounds are detected from the Baby unit(s) within 30 seconds. The default setting is Off.

1. Press .
2. Press  or  to highlight **SOUND-ACTIVATED SCREEN**, then press  or .
3. Press  or  to choose **On** or **Off**, then press  to confirm. You will hear a confirmation tone.

Parent unit screen brightness









You can change the brightness of the Parent unit screen from between Level 1 to Level 5. The default setting is Level 3.

1. Press .

2. Press  or  to highlight **BRIGHTNESS**, then press  or .
3. Press  or  to select the brightness you want from **Level 1** to **Level 5**, then press  to confirm. You will hear a confirmation tone.

Display language

You can select the language to be displayed on screen: **English**, **French** or **Spanish**. The default setting is English.

1. Press .
2. Press  or  to highlight **LANGUAGE** (or **LANGUE** if French is set or **IDIOMA** if Spanish is set), then press  or .
3. Press  or  to choose **ENGLISH**, **FRANCAIS** or **ESPANOL**, then press  to confirm. You will hear a confirmation tone.

If pairing fails, the screen will display **Pairing failed**. Try the pairing procedure again.

If you pair a new Baby unit to an already occupied Baby unit slot it will unpair the current Baby unit.

Only one Baby unit can be paired at a time.











If you have any problems pairing or need additional cameras, call us on 0808 100 6554* or go to bt.com/mybabymonitor for more information.







Pair/unpair CAM



The Parent and Baby unit supplied are already paired but you can add or replace Baby units you purchase separately. You can pair a maximum of four Baby units to your Parent unit. Each new Baby unit must be paired to the Parent unit before you can use it.

To pair a Baby unit to the Parent unit

Firstly, make sure the Baby and Parent units are turned on, see pages 25 and 26.
















1. Press  on the Parent unit.
2. Press  or  to highlight **PAIR/UNPAIR CAM**, then press  or .
3. Press  or  again to select **Pair new CAM**.
4. Press  or  to choose a Baby unit slot, then press .

5. When the display shows **Please press both**  and  **keys on CAM unit until POWER indicator flashes Red and Green light**, press and hold the  and  buttons for 5 seconds on the new Baby unit. The light on the  button of the new Baby unit will flash red and green alternately.
6. When pairing has been successful, the screen will display the image from the newly paired Baby unit. The light on the  button of the new Baby unit will turn red when it is powered by AA batteries or green when powered by the power adaptor.

You have 60 seconds to complete the pairing process once the Parent unit display shows **Please press both**  and  **keys on CAM unit until POWER indicator flashes Red and Green light.**

To unpair a Baby unit from the Parent unit

Firstly, make sure the Baby and Parent units are turned on, see pages 25 and 26.

1. Press  on the Parent unit.
2. Press  or  to highlight **PAIR/UNPAIR CAM**, then press  or .
3. Press  or  to select **Unpair CAM**, then press .
4. Press  or  to select the Baby unit you want to unpair, then press .
5. When the display shows, **To unpair CAM # from the system**, press  key, press the  button.
6. When the display shows, **Press  key to confirm**, press .
7. When unpairing has been successful, the screen will display the image from the next paired Baby unit. If there is no paired Baby unit, the screen will display **NO CAM paired**.


Help

If you have any problems setting up or using your BT Video Baby Monitor 1030, firstly see the answers below to frequently asked questions. If you still have difficulties, call the Helpline on 0808 100 6554*.

My Parent and Baby units do not work at all

- check that the power adaptor cables are inserted correctly into the Parent and Baby unit(s) and switched on at the wall socket, see pages 17 and 19.
- check that the batteries are installed correctly in the Parent and Baby unit(s) and that the Parent unit battery has been charged correctly, see pages 16 and 18. If the Parent unit battery is completely flat, it may take up to 30 minutes to charge before it can be used for a short time.
- check that the Parent and Baby unit(s) are turned on, see pages 25 and 26.
- the Parent unit may be too far from the Baby unit(s), move the Parent unit closer.
- large obstructions may affect the signal between the Parent and Baby unit(s). Try to position the Baby unit(s) away from large obstructions.
- other electrical products may cause interference. Try to position your Parent and Baby unit(s) as far as possible from other electrical devices such as wireless routers, radios, mobile phones, televisions, personal computers, cordless phones etc.
- try unplugging the power adaptor cables from both units, wait 15 seconds, then plug them back in. Turn the units on and allow 1 minute for the Parent and Baby unit(s) to link.

My Parent and Baby unit(s) are producing a high-pitched noise

- the Parent and Baby unit(s) may be too close together. Make sure they are at least two metres apart.
- you may be too close to the Baby unit when you press and hold the  button. Make sure they are at least two metres apart.
- you may have set the sensitivity level too high. Try adjusting to a lower level to avoid audio feedback, see page 32.

The Parent unit plays all sounds from the Baby unit and I think it is too noisy

- you may have set the sensitivity level to Level 5 (maximum). If so, the Baby unit will transmit any sound detected to the Parent unit. To lower the sensitivity level, see page 32.
- you may need to adjust the loud speaker volume on the Parent unit, see page 27.

The Parent unit doesn't play any sound when there is noise from the Baby unit

- make sure the Parent unit has power. Check that the power adaptor cable is correctly connected and the power is turned on at the wall socket, see page 17. Make sure that the battery in the Parent unit is fully charged, see page 16–17.
- make sure the Parent unit is turned on, see page 26 and that the loud speaker volume is not set to off, see page 27.
- make sure the Parent unit is not monitoring in multi-CAM mode, see page 28.
- check that the sensitivity level is not set too low, see page 32.

The link between the Baby and Parent unit is lost every now and then and I'm experiencing sound or video interruptions

- move the Parent and Baby unit closer together (but not less than 2 metres) as the Parent unit may be out of range.
- Reset the units by turning them off and unplugging the power adaptor cables. Wait for 15 seconds and plug them back in. Turn the units on and allow up to one minute for them to link.
- if the battery is completely flat, it may take up to 30 minutes to charge the Parent unit before it can be used for a short time.
- after time the battery may begin to wear out so you might need to purchase a new battery, contact the Helpline.

The battery does not charge in the Parent unit

- make sure the battery is installed correctly, see page 16. The battery light on the Parent unit should be on when charging.
- try removing the battery completely and installing it again, then charge for up to 12 hours.

General information

Cleaning

Your units have a durable plastic casing that should retain their lustre for many years. To clean, use only a soft cloth slightly dampened with water or a mild soap. Do not use excess water or cleaning solvents of any kind.

Guarantee

Your BT Video Baby Monitor 1030 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the BT Video Baby Monitor 1030 or any component thereof, which is identified as faulty or below standard, or as a result of inferior workmanship of materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is required.
- The equipment is returned to BT or its agent as instructed.

- This guarantee does not cover the batteries and any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.
- This guarantee does not affect your statutory rights.

Within the 12 month guarantee period

Prior to returning your product, please read the Help section beginning on page 43 or contact the BT Video Baby Monitor 1030 Helpline on 0808 100 6554* for assistance. Additional answers to Frequently Asked Questions are available from bt.com/producthelp

In the unlikely event of a defect occurring, the Helpdesk will issue a Fault Reference Authorisation (FRA) number and instructions for replacement or repair. Please note you will need the FRA number before returning the product. This does not affect your statutory rights.

Outside of the 12 month guarantee period:

If your product needs repair after the guarantee period has ended or if you require technical assistance outside of the 12 month guarantee period, please call BT's approved technical support agent, Discount Communications Ltd on 0800 980 8999.

Returning your product

If the Helpline is unable to remedy your problem they will issue a Fault Reference Authorisation number and ask you to return the product to your original place of purchase. Where possible, pack the product in its original packaging. Please remember to include all parts, including the power supply adaptors and the original batteries.

For guarantee purposes proof of purchase is required so please keep your receipt.

Product disposal instructions

The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.



The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimize the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product as per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

R&TTE

This product is intended for use within the UK.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

Declaration of Conformance

Hereby, BT declares that this BT Video Baby Monitor 1030 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The Declaration of Conformance for the BT Video Baby Monitor 1030 is available from bt.com/producthelp.

User Guide formats

This document is also available in other formats, such as Large print, Braille and Audio CD. If you would like a copy, please call 0808 100 6554*.

For a Better Future

We're always looking to make our products last longer and use less power, so we don't have such a big impact on the environment.

To find out about what we are doing, visit
bt.com/betterfuture

Offices worldwide

The services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2015.
Registered Office: 81 Newgate Street, London EC1A 7AJ.
Registered in England No. 1800000.
Printed in China.

Designed and produced by The Art & Design Partnership Ltd.
BT Video Baby Monitor 1030 (04/15) Issue 1

