



Bringing it all together

BT Freestyle 210

User Guide



Welcome...

to your BT Freestyle 210
Digital Cordless Telephone

- 
- Digital call clarity with up to 300m range outdoors and up to 50m indoors (in ideal conditions).
 - Directory – lets you store up to 50 names and numbers for easy dialling.
 - Caller Display – lets you see who's calling and your phone stores details of the last 20 callers in a Calls list.¹
 - Use the handsfree facility to talk to callers without holding the handset.
 - Whilst on a call use the secrecy feature to talk to someone in the same room without your caller hearing you.

¹ Requires subscription to a Caller Display service.
A quarterly fee may be payable

This User Guide provides you with all the information you need to get the most from your phone.

You must first set up your phone before you can use it. This doesn't take long as it is easy to do. Just follow the simple instructions on the next few pages.

Need help?

If you have any problems setting up or using your BT Freestyle 210, contact the Helpline on 0870 240 3962 or email bt.helpdesk@vtecheurope.com

Alternatively, you may find the answer in the 'Help' section at the back of this guide.

Hearing aid?

Please note that the BT Freestyle 210 works by sending radio signals between the base and handset. These signals may interfere with some hearing aids, causing a humming noise.

Got everything?

- BT Freestyle 210 handset
- BT Freestyle 210 base
- 2 x NiMH AAA rechargeable batteries (already fitted)
- Mains power adaptor
- Telephone line cord

If you have purchased a BT Freestyle 210 multiple pack you will also have the following for each additional handset:

- BT Freestyle 210 handset
- BT Freestyle 210 charger
- 2 x AAA NiMH rechargeable batteries (already fitted)
- Mains power adaptor (for the charger)

In this guide

Getting started

Location	6
Setting up	6
Set the day and time	8
To change the time or date format	9
Setting up the charger	10

Getting to know your phone

Handset buttons	12
Handset display icons	13
Base and Charger	14
Navigating the menus	15
Handset menu map	16
Menu navigation	16

Using the phone

Make a call	17
Preparatory dialling	17
End a call	17
Receiving calls	17
Earpiece volume	18
Handsfree	18
Make a call in handsfree	18
Answer a call in handsfree	19
Switch to handsfree during a call	19
Secrecy	19
Redial	20

To copy a redial number to the directory ...	20
To delete a number from the redial list.	21
To delete the entire redial list	21
Keypad lock	22
Ringer volume on/off	22
Find the handset(s)	22
Making internal calls	23
Receiving internal calls	23
Transferring calls	24
3-Way conference calls	24
Switching a handset off	25

Directory

Store a number	26
Entering names	26
Dial/view a number	27
Edit a directory entry	27
Delete a directory entry	28
Delete directory	28

SMS text messages

Subscribe to the SMS service	29
Cost of the fixed line service	29
Send/save text messages	30
Receiving and reading text messages	31
Reply to a text message	31
Delete a text message	32

Delete a list	32
Call the sender's phone number	32
Send/edit/delete text messages in the outbox	33
Message alert beep on/off	34
SMS Service Centre numbers	34
Adding or changing SMS Service Centre numbers	35
Select a Send Service Centre number	35

Handset settings

Ringer melody	36
Ringer volume	36
Handset tones on/off	37
Handset name	38
Registering handsets	38
De-registering a handset	39
Restore default settings	40
Language	40

Base settings

Ringer volume	41
Ringer melody	41
Change PIN code	41
Dial mode	42
Restore default settings	43
PBX access	44

Caller Display

Calls list	45
View/dial a number	45
To copy a Calls list number to the directory	46
Delete a number	46
Delete the entire Calls list	47

BT Calling Features

BT Directory Enquiries	48
BT Helpdesk	48
Call Divert On	48
Call Divert Off	49
Check Divert	49
Call Waiting On	49
Call Waiting Off	50
Check Call Waiting	50
Add/edit a service	50
Delete a service	51

Help 52

General information

Safety	54
Product disposal instructions	55
Connecting to a switchboard	55
Guarantee	55

Getting started

WARNING

Do not place your BT Freestyle 210 in the bathroom or other humid areas.

Handset range

The BT Freestyle 210 has a range of 300 metres outdoors when there is a clear line of sight between the base and the handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and handset either indoors or outdoors, the range will normally be up to 50 metres. Thick stone walls can severely affect the range.

Signal strength

The  icon on your handset indicates when you are in range. When you are out of range, the  symbol flashes, and the screen displays Searching. You should move closer to the base if this happens to ensure the full functionality of your phone.

IMPORTANT

Do not connect the telephone line until at least one of the handsets is fully charged.

The base station must be plugged into the mains power at all times.


Location

You need to place your BT Freestyle 210 base within 2 metres of a mains power and telephone socket so that the cables will reach.

Make sure it is at least 1 metre away from other electrical appliances to avoid interference. Your BT Freestyle 210 works by sending radio signals between the handset and base. The strength of the signal depends on where you site the base. Putting it as high as possible ensures the best signal.

Setting up


1. Plug the mains power cable into the power socket on the back of the base. Plug the other end into the mains socket and switch on.

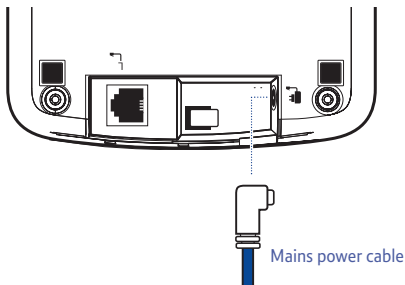

- Batteries will come inserted in the battery compartment. Pull the plastic tag as instructed to activate the batteries.
- Place the handset on the base to charge the batteries for at least 16 hours.

The main handset is pre-registered to the base as –1– (Handset 1). This is shown on the display. When the handset is fully charged the display shows the  symbol.

- After 16 hours, connect the telephone line cord to the base and plug the other end into the wall socket.

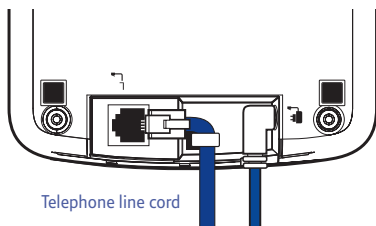

Talk/Standby time

Under ideal conditions, fully charged handset batteries should give about 10 hours talk time or 100 hours standby time on a single charge.

Battery low warning

If the  symbol is flashing, you will need to recharge your handset before using it.

Battery performance

To keep your batteries in the best condition, leave the handset off the base for a few hours at a time (after the initial 16 hour charge).

New NiMH batteries do not reach full capacity until they have been in normal use for several days. Running the batteries right down at least once a week will help them last as long as possible.

IMPORTANT

Only use the power supply and telephone line cord supplied with your BT Freestyle 210 otherwise the telephone may not work.

The charge capacity of rechargeable batteries will reduce with time as they wear out, so reducing the talk/standby time of the handset. Eventually they will need to be replaced. New batteries can be obtained from the BT Freestyle Helpline 0870 240 3962.

Batteries and handset may become warm during charging. This is normal.

If you have more than one handset registered to your base, you only need to set the date and time on one handset and the other handsets will be automatically updated.

Set the day and time

1. Press  to open the main menu.
2. Press  or  until the display shows **Date/Time** and press .
3. Set **date/time** is displayed, press .
4. The current year setting is displayed, enter the last 2 digits of the year (e.g. press  then  for 2006) and press .
5. Enter 2 digits for the date and 2 for the month (e.g. for 5th August, press    ) and press .
6. Enter 2 digits for the hour and 2 for the minute (e.g. for 10.54pm, press    ) and press . **Saved** is displayed.
7. Press and hold  to return to standby.

To change the time or date format

1. Press  to open the main menu.
2. Press  or  until the display shows `Date/Time` and press .
3. Press  or  until `Time format` or `Date format` is displayed, as required.
4. Press  and choose between `24hr/12hr` or `dd.mm/mm.dd` as appropriate.
5. Press  to confirm and press and hold  to return to standby.

Your BT Freestyle 210 is now ready for use.

Under no circumstances use non-rechargeable batteries. Only use NiMH rechargeable batteries with a capacity of 600mAh or higher. Using inappropriate batteries will invalidate your guarantee and may damage the telephone.

Helpline

If you are having any difficulties setting up or using your BT Freestyle 210, please call the BT Freestyle Helpline on 0870 240 3962 or email bt.helpdesk@vtecheurope.com


BT Freestyle 210 multiple pack owners only

Location

You need to place your BT Freestyle 210 charger close enough to a mains power socket so that the cable will reach.

Setting up the charger

1. Plug the power adaptor cable into the underside of the charger, plug the other end into the mains wall socket and switch the power on.

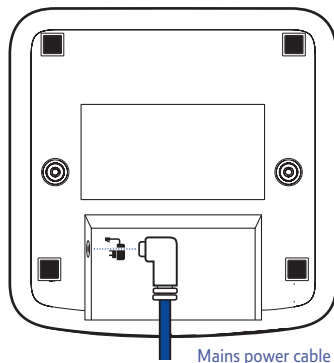


Mains power cable

2. Batteries will come inserted in the battery compartment. Pull the plastic tag as instructed to activate the batteries.
3. Place the handset on the charger and charge for at least 16 hours.

Your BT Freestyle 210 multiple pack is now ready for use.


Getting to know your phone

Handset buttons

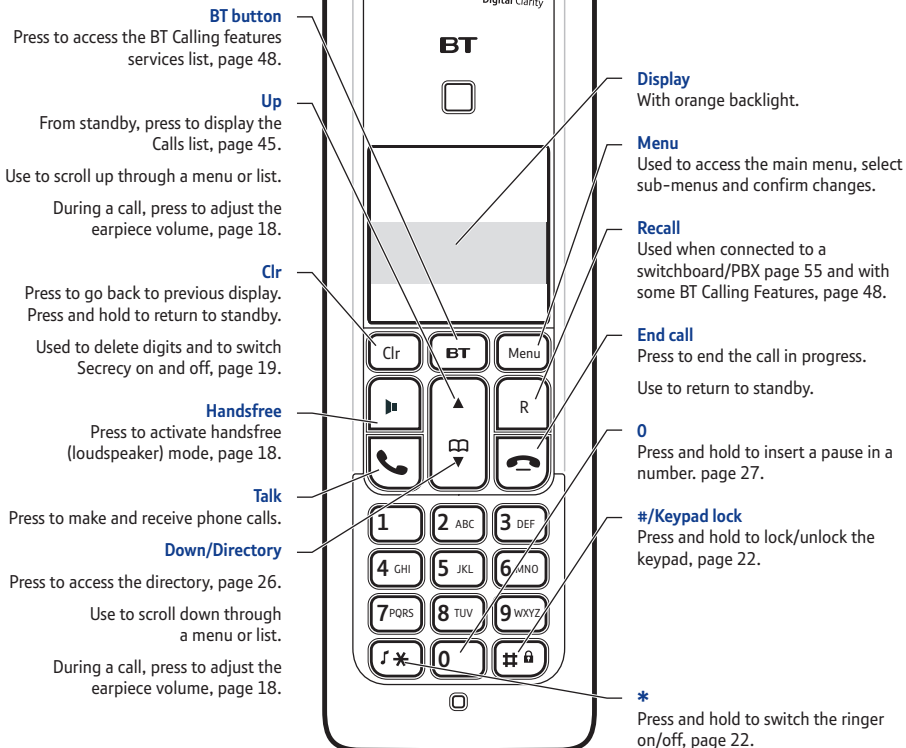

Handset display icons

These are the symbols you will see on your handset's display.

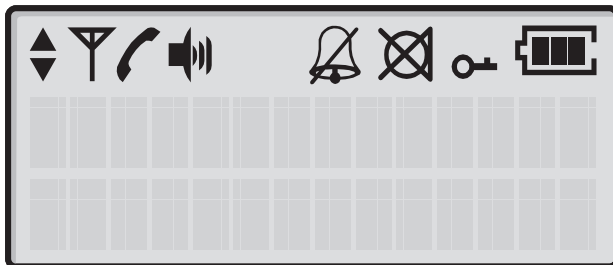

UP/DOWN

When scrolling through the menu



HANDSFREE

Handsfree on



KEY

Keypad lock on



ANTENNA

Steady when in range.
Flashing when out of range.



CROSSED BELL

Ring volume off



MUTE

Secrecy on



BATTERY

Battery empty



Battery low



Battery half full




Battery full



HANDSET

Handset in use Incoming call

Base

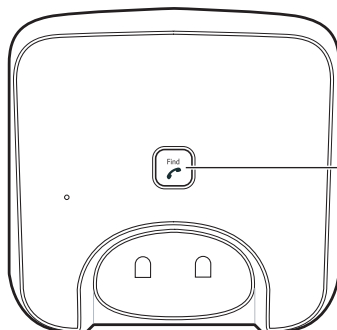


Find

Press to page/locate a handset, see page 22.

Charger

(For multiple pack users only)

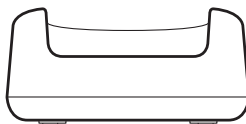

Navigating the menus

Your BT Freestyle 210 handset features an easy to use menu system. Have a look at the menu map on the next page.


When the handset is switched on and in standby:

1. Press  to open the main menu and select the function you want by pressing the  or  button.

For example, to change the ringer melody:

1. Press  to open the main menu.
2. Press  or  until the display shows Setup h/ set and press .
3. Ring melody is displayed, press  to select. The current melody is played for 5 seconds.
4. Press  or  to select your preferred melody.
5. Press  to save. You hear a confirmation tone and Saved is displayed.
6. Press and hold  to return to standby.

Handset menu map

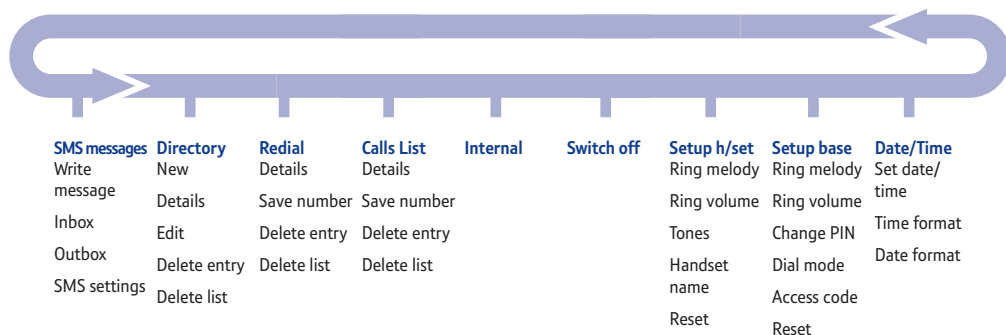

Menu navigation

Press **▲** or **▼** to scroll through the menu options.

Press **Menu** to select an option.

Press **Cr** to go back to the previous display screen.

Press and hold **Cr** to return to the standby display screen.

Using the phone

Make a call

1. Press .

Enter the telephone number and the number is dialled.

Preparatory dialling

Use preparatory dialling to see and check the number on the display before you dial out.

1. Enter the number first then press  or  to dial.

End a call

1. Press  or place the handset back on the base.

Receiving calls

When you receive an incoming call, the telephone will ring and the  icon will flash.

1. If the handset is not in the base/charger, press  or  to answer the call.

Or

If the handset is on the base/charger, lift the handset to answer the call.

Call timer

Your handset automatically displays the duration of every external call. The call time will remain on the display until 2 seconds after the call has ended.

Press  to delete an incorrect digit.

If you have subscribed to a Caller Display service, your caller's number will also be shown. If the number is withheld the display will show Withheld. If an exact number match is found in the Directory, the name will be displayed instead of the number. See page 45 for more information.

Internal calls

When you receive an internal call, the calling handset number will be shown on the handset display.

The earpiece volume can only be changed when you are on a call.

Earpiece volume

During a call:

To increase the volume

Press  .

To decrease the volume

Press  .

Handsfree

Handsfree lets you talk to your caller without holding the handset. It also enables other people in the room to listen to your conversation over the loudspeaker.

Make a call in handsfree

1. Dial the number then press  .
2. Press  to end the call.

Answer a call in handsfree

When the phone rings:

1. Press  and the call is transferred to the loudspeaker.

Switch to handsfree during a call

During a call:

1. Press . The call is transferred to the loudspeaker.
2. Press  to toggle between Handsfree and the handset.
3. Press  to end the call.

Secrecy

During a call, you can talk to someone nearby without your caller hearing.

1. Press . The display shows the  symbol and your caller cannot hear you.
2. Press  again to return to your caller.

Range Indicator

The  icon on the display indicates when you are in range of the base. If Searching is displayed, you are out of range and will need to move closer to the base.

If a redial number is stored in the Directory, the caller's name will be displayed instead of the number.

If there are no redial numbers stored, Empty will be displayed.

If you dial the same number on more than one occasion, only the most recent call details will be stored, any previous occurrence will be deleted.

For help with entering names see page 26.

Redial

Your BT Freestyle 210 stores the details of the last 10 calls made into a redial list. Stored redial numbers can be up to 20 digits long.

1. Press , to open the main menu.
2. Press  or  until the display shows Redial, press  to display the redial list.
3. Press  or  to select any of the last 10 numbers called.
4. Press  or  to dial the number displayed.

To copy a redial number to the directory

1. Press , to open the main menu.
2. Press  or  until the display shows Redial, press  to display the redial list.
3. Press  or  to display the number you want and press  to select.
4. Press  or  to display Save number and press  to select.
5. Name is displayed. Enter a name using the keypad and press  to confirm.
6. Saved is displayed. Press and hold  to return to standby mode.

To delete a number from the redial list

1. Press , to open the main menu.
2. Press  or  until the display shows Redial, press  to display the redial list.
3. Press  or  to display the number you want and press  to select.
4. Press  or  to display Delete entry and press  to select.
5. Delete? is displayed, press  again to confirm.
6. Deleted is displayed. Press and hold  to return to standby mode.

To delete the entire redial list

1. Press , to open the main menu.
2. Press  or  until the display shows Redial, press  to display the redial list.
3. With any of the redial numbers displayed, press .
4. Press  or  to display Delete list and press  to select.
5. Delete list? is displayed, press  again to confirm.
6. Deleted is displayed. Press  to return to standby mode.

When the keypad is locked incoming calls can still be answered. Once the call has ended, the keypad lock is re-activated.

IMPORTANT

Emergency calls CAN be made when the keypad lock is on.

You cannot answer the ringing as you would a call.

Stopping the ring at a handset stops the ring at that handset only.

Keypad lock

You can lock the keypad to prevent accidentally dialling numbers while carrying the handset around.

1. Press and hold  for 1.5 seconds until the  icon is displayed.
2. To unlock the keypad, press and hold  again.

Ringer volume on/off

1. Press and hold  for 1.5 seconds to switch the ringer on or off.

If you switch the ringer off, the  icon will be displayed.

Find the handset(s)

You can alert handset users that they are wanted or locate a missing handset.

1. Press  on the base. The handset(s) ring.
2. Press  on the base again or press  on the handset to stop the handset ring.

Making internal calls

If you purchased a BT Freestyle 210 multi-pack, you can make internal calls between handsets.

1. Press  then  or  until the display shows **Internal**.
2. Press  and enter the number of the handset you want to call. The other handset will ring and display your handset number to let the handset user know who is calling. When the other handset answers hold your conversation as normal.
3. Press  to end the call.

Receiving internal calls

When you receive an internal call, the calling handset number will be shown on the handset display.

1. Press  or  to answer the call,

Transferring calls

If using a BT Freestyle 210 multi-pack, you can transfer an external call to the other handset.

1. During an external call, press , the external caller will be put on hold.
2. Press  or  until the display shows Internal and press  to confirm.
3. Enter the number of the handset you want to call. The other handset will ring and display your handset number to let the handset user know who is calling.
4. When the other handset answers, press  to transfer the call.

3-Way conference calls

If using a BT Freestyle 210 multi-pack, you can hold a 3-way conference call with an external caller and the other internal handset.

1. During an external call, press , then  or  until the display shows Internal. Press  to confirm.
2. Enter the number of the other handset you wish to join the call. The other handset will ring.
3. The other handset answers the call by pressing .

To put an external call on hold during a conference, press  Int/Ext call will be displayed. Press  to confirm.

To take the external caller off hold, press . Conference will be displayed, press  to confirm.

4. Press , the display shows **Conference**. Press  to confirm. The external call, and the two internal handsets are all connected to the conference.
5. Any caller can leave the conference by pressing .

Switching a handset off

1. Press  then  or  until the display shows **Switch off**.
2. Press  and the display shows **Switch off?**, pressing  again will confirm and the handset will turn off.

To turn your handset back on just press the  button

Directory

If there are no stored entries, **Empty** will be displayed.

If you try to store a new entry and the directory is full, you will hear an error tone and **Full** will be displayed.

Press **Clr** to delete an incorrect digit.

Writing tips

If you make a mistake, press **Clr** to delete the last character or digit.

Press **L** repeatedly to enter the following: SPACE ? £ \$ % & < >

Press **0** repeatedly to enter the following symbols: . , ? ! 0 + - : ' "

Press **#** repeatedly to enter the following symbols: # * @ \ / _ () = \$

Press **Fw** to toggle between lower and upper case.

If the next letter is on the same button that you have just pressed, wait until the cursor moves to the right before trying to enter it.

You can store up to 50 numbers in the directory of each of your BT Freestyle 210 handsets for quick and easy dialling. Numbers can be up to 20 digits long. Directory entries are stored alphabetically.

Store a number

1. Press **Dir** to open the directory. The first entry is displayed.
2. Press **Menu**, **New** is displayed, press **Menu** again to select.
3. **Number** is displayed, enter the number for the entry using the keypad and press **Menu** to store.
4. **Name** is displayed, enter a name for the entry using the keypad and press **Menu** to save.
5. **Saved** is displayed. Press and hold **Clr** to return to standby mode.

Entering names

Use the keypad to enter the letters shown on the buttons, e.g. to store TOM:

1. Press **8 T O P** once to enter T.
2. Press **6 M O** three times to enter O.
3. Press **6 M O** once to enter M.

Dial/view a number

1. Press  to open the directory. The first entry is displayed.
2. Press  or  to scroll through the directory to the entry you want.

Or, search alphabetically, using the keypad to enter the first letter of the name you want, then scroll to the exact entry using the  and  buttons.

3. To dial press  or to view press , then  to display **Display** and  to confirm.
4. The selected entry will be displayed ready to be dialled out. Press  or  to dial.

Edit a directory entry

1. Press  to open the directory. The first entry is displayed.
2. Press  or  to scroll through the directory to the entry you want.
3. Press  then  or  to display **Edit** and press  again to select.
4. The stored number is displayed followed by a flashing cursor. Edit the number using  to delete incorrect digits and enter new ones using the keypad, then press .

Insert a pause in a number

You may need to do this if you are connected to a switchboard. When entering a number, usually after entering the switchboard access code (e.g. 9) press and hold 0 until P appears in the display.

Searching for a name

Example: To search for Oliver, press 6 three times to display the first entry beginning with O, then use  and  to scroll to Oliver.

See page 26 for help with entering names.

If you have purchased a BT Freestyle 210 multiple pack, entries are only deleted on the handset you are using.

5. The name is displayed followed by a flashing cursor. Edit the name using  to delete incorrect characters and enter new ones using the keypad, then press  to save.
6. Saved is displayed. Press and hold  to return to standby mode.

Delete a directory entry

1. Press  to open the directory. The first entry is displayed.
2. Press  or  to scroll through the directory to the entry you want.
3. Press  then  or  to display Delete entry and press  to select.
4. Delete? is displayed. Press  to confirm.
5. Deleted is displayed. Press and hold  to return to standby mode.

Delete directory

1. Press  to open the directory. The first entry is displayed.
2. Press  then  or  to display Delete list and press  to select.
3. Delete list? is displayed. Press  to confirm.
4. Deleted is displayed. Press and hold  to return to standby mode.

SMS text messages

Welcome to the BT SMS Service on your BT Freestyle 210. The service is provided by BT.

Your BT Freestyle 210 can send and receive SMS messages from participating mobile networks and compatible landline telephones in the UK.

The fixed line SMS service is provided under BT's terms and conditions for telephone service. These can be found by visiting the BT.com website at: www.bt.com/terms/tor.htm

Subscribe to the SMS service

When you send your first SMS text message from your BT Freestyle 210 you will automatically be registered for the service.

On receipt of your first SMS through the service, the system will send you a welcome SMS message back.

You may also register by sending the word 'Register' to 00000 upon which you will receive a confirmation message.

Cost of the fixed line service

There is no subscription charge (other than the subscription to Caller Display). Visit the BT.com website (www.bt.com) to find out how much it costs to send a SMS text message (prices depend upon your current call package).

SMS stands for Short Messaging Service

IMPORTANT

You must subscribe to your Network Provider's Caller Display service so that you can use SMS text messaging. A quarterly fee may be payable, please contact your network provider for more details.

When you are using SMS text messaging you must not withhold your telephone number or the service will not allow you to connect.

You may also send messages to landline phones that are NOT SMS compatible. Messages to non-compatible lines will be connected to voice text and delivered in spoken words to the telephone as a call. Please note that the conversion can translate common abbreviations and smileys etc, but to ensure maximum clarity of message deliver, abbreviations etc should be used sparingly.

Entering text

Use the keypad to enter characters. When you press a button on the keypad, the characters available are shown at the bottom of the display. Press the button repeatedly to move through the characters shown.

For example, press **2 ABC** twice to enter b. Press **8 *w** once to enter t.

If the next character you want to enter is on the same button, wait for the cursor to move right.

Writing tips

If you make a mistake, use **←** and **→** to move left and right through the message and press **Del** to delete characters.

Press **␣** to enter a space.

Press **↵** to switch between upper and lower case letters and numbers.

Use **0**, **1** and **␣** to enter other punctuation characters.

If you have more than one handset, all handsets use the same inbox and outbox.

Your BT Freestyle 210 can only hold ten messages, in the Inbox, Outbox or a combination of both. When full the display will show SMS mem. full. No more messages can be received until you delete old messages, see Delete a text message or Delete a list (page 32).

Send/save text messages

1. Press **Menu**, SMS messages will be displayed, press **Menu**.
2. Write message is displayed. Press **Menu**.
3. The display shows Enter message. Begin typing your message using the keypad. When you have finished press **Menu**.
4. The display shows Number: . Enter the phone number you want to send the message to. Alternatively:

Press **Menu** to send to a number in the directory, calls list or redial list.

5. Press **Menu** and then press **▲** or **▼** to scroll to Send to send the message or Save message to save the message.

The display will show Send message followed by MMS transfer or Saved as appropriate.

Receiving and reading text messages

When you receive new text messages, you will hear the message alert beep and the display will show **New SMS msg.**

1. Press **Menu**, **SMS messages** will be displayed, press **Menu**.
2. Scroll **⬇** to **Inbox** and press **Menu**.
3. Scroll **⬆** or **⬇**, if required, to the message you want to read first and press **Menu**.
4. Press **Clr** to return to the inbox.

Reply to a text message

1. When reading a text message, press **Menu**.
2. **Reply** is highlighted. Press **Menu**.
3. To use the sender's message in your reply, press **Menu**.
Or, press **Clr** to start with a blank message.
4. Enter your message and press **Menu**.
5. The sender's number will be displayed, press **Menu** to accept then scroll **⬆** or **⬇** to **Sent to** and press **Menu**.

If you include the sender's message, the text will be inserted at the beginning of your message. You can then edit it as normal.

Delete a text message

1. Press , SMS messages will be displayed, press .
2. Scroll  to Inbox or Outbox and press .
3. Scroll  or  to the message you want to delete and press .
4. Scroll  to Delete entry and press .
5. Press  to confirm or  to cancel.

Delete a list

1. Press , SMS messages will be displayed, press .
2. Scroll  to Inbox or Outbox and press .
3. Press  and scroll  to Delete list, press .
4. Press  to confirm or  to cancel.

Call the sender's phone number

1. Press , SMS messages will be displayed, press .
2. Scroll  to Inbox and press .
3. Scroll  or  to the message you want and press .
4. Scroll  to Call number and press .
5. The number is displayed and dialled. Press  to dial the number.

Send/edit/delete text messages in the outbox

1. Press , SMS messages will be displayed, press .
2. Scroll  to Outbox and press .
3. Scroll  or  to the message you want and press .
4. Press  to read the message or press  or  to choose from:

Send to

Press  to view the phone number, then either ,  or  to send to or  to edit.

Edit

Press  to edit the message and phone number or  to accept.

Delete entry

Press , then  to confirm or  to cancel.

Delete list

Press , then  to confirm or  to cancel.

Messages in the outbox are labelled according to their status. For example, **Saved msg** indicates a saved message or **Msg failed** which indicates a message that failed to be sent.

Press  to exit the menu and return to standby at any time.

Message alert beep on/off

When you have new messages, your handset will beep. The default setting is on. You can switch the setting off.

1. Press , SMS messages will be displayed, press .
2. Scroll  to SMS settings and press .
3. Scroll  to New msg alert and press .
4. Scroll  or  to select On or Off. Press .
5. Press and hold  to return to standby mode.

SMS Service Centre numbers

To send and receive SMS text messages you need the telephone number of your Network's SMS Centre.

If you accidentally delete the Send or Receive SMS Service Centre numbers you will need to re-enter them in order for your SMS Service to work.

The **Send** SMS Service number is: **1470P17094009**.

The **Receive** SMS Service number is: **0800587529**.

Adding or changing SMS Service Centre numbers

Your BT Freestyle 210 is pre-set to send using Service Centre 1 and receive using Service Centre 2.

1. Press , SMS messages will be displayed, press .
2. Scroll  to SMS settings and press .
3. Svc centres is highlighted. Press .
4. Scroll  or  to select the centre you want and press .
5. Enter the service centre number you want and press .
6. Press and hold  to return to standby mode.

Select a Send Service Centre number

If you have entered additional Service Centre numbers, you can choose which send Service centre you want to use. Your BT Freestyle 210 is pre-set to send using Service Centre 1 and receive using Service Centre 2.

1. Press , SMS messages will be displayed, press .
2. Scroll  to SMS settings and press .
3. Scroll  to Send service. Press .
4. Scroll  or  to the centre you want and press .
5. Press and hold  to return to standby mode.

Handset settings

Ringer melody

There are 6 different ringer melodies to choose from.

1. Press  to open the main menu.
2. Press  or  until the display shows Setup h/set and press .
3. Ring melody is displayed, press  to select. The current melody is played for 5 seconds.
4. Press  or  to select your preferred melody.
5. Press  to save. You hear a confirmation tone and Saved is displayed.
6. Press and hold  to return to standby.

Ringer volume

There are 5 different ringer volume levels to choose from.

1. Press  to open the main menu.
2. Press  or  until the display shows Setup h/set and press .
3. Press  or  until Ring volume is displayed, press  to select. The selected ringer melody is played at the current volume for 5 seconds.
4. Press  or  to select your preferred volume.

5. Press  to save. You hear a confirmation tone and **Saved** is displayed.
6. Press and hold  to return to standby.

Handset tones on/off

Your BT Freestyle 210 has a series of tones designed to alert you to certain situations. A tone will sound: when the battery is low; when you move out of range of the base and there is no coverage; to confirm each button press (key beeps). You can switch the handset tones on or off.

1. Press  to open the main menu.
2. Press  or  until the display shows **Setup h'set** and press .
3. Press  or  until **Tones** is displayed, press  to select.
4. Press  or  to select the tone you want and press  to select.
5. Press  or  to display either **On** or **Off** and press  to confirm.
6. You hear a confirmation tone and **Saved** is displayed.
7. Press and hold  to return to standby.

Your BT Freestyle 210 is not GAP compatible and registration is therefore generally limited to other BT Freestyle 210 or 250 handsets. The Registration and De-registration menu's are therefore "hidden" and can only be accessed after entering the code **OK *# 14 14 14 14 14 14**.

Handset name

You can give each handset a name up to a maximum of 11 characters, for example "Kitchen". It will still display its number.

1. Press **Menu** to open the main menu.
2. Press **Up** or **Down** until the display shows Setup handset and press **Menu**.
3. Press **Up** or **Down** until Handset name is displayed, press **Menu** to select.
4. Press **Clr** to delete characters and use the keypad to enter the name you want, then press **Menu** to confirm.

Registering handsets

If you have purchased a Twin, Trio or Quad, the handsets in these packs are already pre-registered to the main base.

1. Press **Menu** and enter ***# 14 14 14 14 14 14** using the keypad.
2. Registration is displayed, press **Menu**.
3. Register is displayed, press **Menu** and Enter PIN will be displayed.
4. Enter the base PIN (original setting 0000) and press **Menu**.
5. The handset will display Searching, press and hold the **End** button on the base until you receive a confirmation tone.

6. The handset will temporarily display **Registered** then will display **Handset** and will be automatically assigned the next handset number.

De-registering a handset

You can de-register any handset from a base using any of the handsets that are registered to it.

1. Press **Menu** and enter **1*1*1*1*1*1*** using the keypad.
2. **Registration** is displayed, press **Menu**.
3. Press **▲** or **▼** until **Deregister** is displayed, press **Menu** and **Enter PIN** will be displayed.
4. Enter the base PIN (original setting 0000) and press **Menu**.
5. Use **▲** or **▼** to display the handset number you wish to de-register, then press **Menu**.
6. **Deregister?** will be displayed, press **Menu** again to confirm.

Restore default settings

You can reset your BT Freestyle 210 handset to its default (original) settings.

1. Press  to open the main menu.
2. Press  or  until the display shows Setup h/set and press .
3. Press  or  until Reset is displayed and press .
4. Reset? is displayed. Press . Saved is displayed.

Language

You can change the default language used by your BT Freestyle 210 from English to German or Turkish.

1. Press  to open the main menu.
2. Press  or  until the display shows Setup h/set and press .
3. Press  or  until Language is displayed and press .
4. Scroll  or  to choose the default language and press  to confirm.
5. Press and hold  to return to standby.

Base settings

Ringer volume

1. Press , scroll  or  to Setup base and press .
2. Scroll  to Ringer volume and press .
3. Scroll  or  to the volume level then press .
4. Press and hold  to return to standby.

Ringer melody

1. Press , scroll  or  to Setup base and press .
2. Ring melody is highlighted, press .
3. Scroll  or  to the melody you want and press .
4. Press  to return to standby.

Change PIN code

Your System PIN can help prevent unauthorised users from changing the settings on your phone.

1. Press  to open the main menu.
2. Press  or  until the display shows Setup base and press .
3. Press  or  until Change PIN is displayed, press  to select. Enter PIN is displayed.

There are 5 volume levels.

There are 5 base ringer melodies.

You will hear a sample as each melody is highlighted.

The default PIN setting is 0000.

If you change your PIN, keep a note of the new number by writing it in the space provided on page 56.

If you enter the wrong PIN code Wrong PIN will be displayed.

Tone is the default setting for the UK. You should only have to change this if connected to a switchboard that requires Pulse dialling.

4. Enter the existing PIN code using the keypad and press . New PIN is displayed.
5. Enter a new 4 digit PIN code using the keypad and press . Repeat PIN is displayed.
6. Re-enter the new PIN code and press . Saved is displayed.
7. Press and hold  to return to standby.

Dial mode

Your BT Freestyle 210 is pre-set to tone dialling (DTMF). You can set the dial mode to pulse dialling if your switchboard requires.

1. Press  to open the main menu.
2. Press  or  until the display shows Setup base and press .
3. Press  or  until the display shows Dial mode and press  to select.
4. Press  or  to display either DTMF or Pulse and press . You hear a confirmation tone and Saved is displayed.
5. Press and hold  to return to standby.

Restore default settings

You can reset your BT Freestyle 210 base to its default (original) settings.

1. Press  to open the main menu.
2. Press  or  until the display shows Setup base and press .
3. Press  or  until Reset is displayed, press  to select.
4. Enter PIN is displayed. Enter the 4 digit PIN code using the keypad and press .
5. Reset? is displayed. Press  to confirm, Saved is displayed.
6. Press and hold  to return to standby.

The access code only applies when you dial using the keypad. It will not be automatically dialled when using the Directory, therefore it is recommended that you enter the PBX access code at the start of all directory entries.

PBX access

If your BT Freestyle 210 is connected to a switchboard, you may need to enter an access code (e.g. 9) to get an outside line. You can store the access code in the base so that all handsets registered to your BT Freestyle 210 will dial the access code automatically before each number.

1. Press , scroll  or  to Setup base and press .
2. Scroll  or  to Access code and press .
3. Enter the access number and press .
4. Press  to return to standby.

Caller Display

If you subscribe to Caller Display, you can see your caller's number (provided it is not withheld) on your handset display before you answer the call.

If you have stored a name for the calling number in your handset directory, the name will be displayed instead.

Calls list

When a call is not answered, the display shows **New calls** and your caller's telephone number will be stored in the Calls list. The Calls list holds up to 20 missed calls.

When the Calls list is full, the oldest call will be replaced by a new call, the most recent call will always be at the top of the list. If a caller rings again their number will move to the top of the list.

View/dial a number

1. Press  , to open the main menu.
2. Press  or  to display **Calls list** and press  to select.
3. The most recent missed call is displayed. Press  or  to scroll through the **Calls list**.
4. Press  or  to dial the number displayed.

IMPORTANT

To use Caller Display you must first subscribe to your network provider's Caller Display service. A quarterly fee may be payable.

For more information on BT Calling Features, call BT free on 0800 800 150.

If the caller has withheld their number the display shows **Withheld**.

If a call is received from an international number **INTERNATIONAL** is displayed.

Instead of accessing the Calls list via the menu, you can press **☐** from standby.

If a number is stored in the Directory, the caller's name will be displayed instead of the number.

If there are no Calls list numbers stored, **Empty** will be displayed.

To copy a Calls list number to the directory

1. Press **Menu**, to open the main menu.
2. Press **▲** or **▼** to display **Calls list** and press **Menu** to select. The most recent missed call is displayed.
3. Press **▲** or **▼** to scroll through the Calls list to the entry you want and press **Menu** to select.
4. Press **▲** or **▼** to display **Save number** and press **Menu** to select.
5. **Name** is displayed. Enter a name using the keypad and press **Menu** to confirm.
6. **Saved** is displayed. Press and hold **Clr** to return to standby mode.

Delete a number

1. Press **Menu**, to open the main menu.
2. Press **▲** or **▼** to display **Calls list** and press **Menu** to select. The most recent missed call is displayed.
3. Press **▲** or **▼** to scroll through the Calls list to the entry you want and press **Menu** to select.
4. Press **▲** or **▼** to display **Delete entry** and press **Menu** to select.

5. Delete? is displayed, press **Menu** again to confirm.
6. Deleted is displayed. Press and hold **Clr** to return to standby mode.

Delete the entire Calls list

1. Press **Menu**, to open the main menu.
2. Press **↓** to display Calls list and press **Menu**, press **Menu** to select. The most recent missed call is displayed.
3. Press **↑** or **↓** to display Delete list and press **Menu** to select.
4. Delete list? is displayed, press **Menu** again to confirm.
5. Deleted is displayed, then Empty. Press and hold **Clr** to return to standby mode.

BT Calling Features

The BT Calling Features works in exactly the same way as the main name and number directory and can store up to 10 entries.

If you prefer, you can delete the pre-stored entries and replace them with your own numbers.

If you experience any problems, please call the Helpline on 0870 240 3962 or email bt.helpdesk@vtecheurope.com

By pressing the  button on the handset your BT Freestyle 210 gives you easy access to a range of pre-stored BT Calling Features.

These are:

- Helpdesk.
- Dir. enquiries.
- Divert on.
- Divert off.
- Check divert.
- Call wait on.
- Call wait off.
- Chk call wait.

BT Directory enquiries

1. Press , Dir enquiries is displayed. Press  or .

BT Helpdesk

1. Press , then scroll  to Helpdesk, then  or . The BT Helpdesk will be automatically dialled.

Call Divert On

Divert all incoming calls to another number of your choice.

1. Press , then scroll  to Divert on and press  or .
2. Follow the spoken instructions.

Call Divert Off

1. Press  then scroll  to Divert off and press  or .
2. Listen for confirmation of your instructions.

Check Divert

1. Press  then scroll  to Check divert and press  or .
2. Listen to hear the status of your Call Divert.

Call Waiting On

Call Waiting lets you know if another person is trying to contact you whilst on a call. If a second caller rings you will hear a beep in the handset. Pressing the  button allows you to switch between callers.

1. Press  then scroll  to Call wait on and press  or .
2. Listen for confirmation of your instructions.

Call Diversion services may allow other divert options. Check with your network provider for details.

For further information, see the BT Calling Features User Guide supplied when you subscribe to the services of your choice.

For this feature to work you must subscribe to a Call Waiting service from your network provider. A quarterly fee is payable.

Call Waiting Off

1. Press **BT** then scroll **▼** to Call wait off and press **☎** or **▶**.
2. Listen for confirmation of your instructions.

Check Call Waiting

1. Press **BT** then scroll **▼** to Chk call wait and press **☎** or **▶**.
2. Listen to hear the status of your Call Waiting.

Add/edit a service

1. Press **BT** then scroll **▼** to the service you want to edit or to display Empty and press **Menu**.
2. Scroll **▼** to display Edit and press **Menu**. If there is a previously stored number, this will be displayed.
3. If necessary edit the number, pressing **Clr** to delete any existing digits, then enter the new service number using the keypad and press **Menu**. If there is a previously stored name, this will be displayed.
4. If necessary edit the name, pressing **Clr** to delete any existing characters, then enter the new service name using the keypad and press **Menu**.

For help with entering names, see page 26.

5. Saved is displayed. Press and hold **Clr** to return to standby mode.

Delete a service

1. Press **BT** then scroll **↓** to the service you want and press **Menu**.
2. Scroll **↓** to display Delete and press **Menu**. Delete? is displayed.
3. Press **Menu** to confirm. Deleted is displayed. After 2 seconds the display shows Empty.
4. Press and hold **Clr** to return to standby mode.

If you are not connected to the BT network, some of these services may not be available. Please contact your Network Provider.

If you experience any problems, please call the Helpline on 0870 240 3962 or email bt.helpdesk@vtecheurope.com

If you experience any problems, please call the Helpline on 0870 240 3962 or email bt.helpdesk@vtecheurope.com

Handset not registering?

- Is Searching displayed on the handset?
- Check that the base is plugged into the mains power and switched on.
- Check that there are charged batteries in the handset and that they are fitted correctly.

Forgotten your PIN number

- Try entering the default PIN = 0000. If you have changed the number and cannot remember it, contact the BT Freestyle Helpline on 0870 240 3962 or email bt.helpdesk@vtecheurope.com

No display

- Check that the handset batteries are charged and correctly fitted. If necessary, replace the batteries.

Nothing happens when you press any button

- Is the  symbol displayed? If so, the key lock is on, press and hold  for 1.5 seconds to unlock the keypad.

No connection between handset and base

- You may be out of range, is the  symbol flashing? If so, move closer to the base.

Handset is not charging properly

- Make sure the handset is placed properly on the base/charger. When charging, the battery symbol is shown filling up.
- Clean the charging contacts with a soft, slightly damp (not wet) cloth.

Handset does not ring

- Check that the batteries are inserted correctly.
- Check that the handset ringer has not been switched off, see page 22.

Your caller cannot hear you

- Is the  symbol displayed? If so, secrecy is switched on. Press the  button to speak to your caller again.

Incoming caller's number is not displayed even though you have Caller Display

- Caller has to allow their number to be sent. It has been withheld or is unavailable.

General information

IMPORTANT

The BT Freestyle 210 digital cordless telephone is not designed for making emergency telephone calls when the power fails.

This product is intended for connection to analogue public switched telephone networks and private switchboards in the United Kingdom.

Safety

- Only use the power supply supplied with your BT Freestyle 210. Using an unauthorised power supply will invalidate your guarantee and may damage the telephone.
- Only use the telephone line cord supplied with your BT Freestyle 210, otherwise your telephone may not work correctly.
- For the handset, use only AAA Nickel Metal Hydride (NiMH) rechargeable batteries with a minimum capacity of 600mAh. Never use other batteries or conventional alkaline batteries as this could lead to a short circuit or destroy the battery casing.
- If the keylock is switched on, it is only possible to make calls to emergency numbers (999/112).
- Do not open the handset (except to replace the handset batteries). This could expose you to high voltages or other risks.
- Radio signals transmitted between the handset and base may cause interference to hearing aids.
- It is recommended that advice from a qualified expert be sought before using this product in the vicinity of emergency/intensive care medical equipment.

- It is recommended that if you have a pacemaker fitted you check with a medical expert before using this product.
- Never dispose of batteries in a fire. There is a serious risk of explosion and/or the release of highly toxic chemicals.

Cleaning

Simply clean the handset and base with a damp (not wet) cloth, or an anti-static wipe. Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock.

Environmental

- Do not expose to direct sunlight.
- The BT Freestyle 210 handset may become warm when the batteries are being recharged. This is normal. We recommend that you do not place the product on antique/veneered wood to avoid damage.
- Do not stand your product on carpets or other surfaces which generate fibres or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- Do not expose your product to fire, explosive or other hazardous conditions.
- There is a slight chance your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm.

Product disposal instructions



The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.

The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product as per your local authority's recycling processes.

For more information please contact your local authority or the retailer where the product was purchased.

Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

Connecting to a switchboard

Switchboard compatibility

This telephone may be connected to most types of switchboard, however in the event of any difficulties, consult your switchboard Service Provider.

Dialling mode

Your BT Freestyle 210 is set to DTMF (Tone) dialling. Some switchboards may require

Pulse dialling. To change the dialling mode, see Dial mode page 42.

Recall (R)

Recall is used when connected to certain switchboards/PBXs and some BT Calling Features, or those services available via your network provider.

Guarantee

Your BT Freestyle 210 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the BT Freestyle 210, or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship of materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is required.
- The equipment is returned to BT or its agent as instructed.
- This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.
- This guarantee does not affect your statutory rights.

Within the 12 month guarantee period:

Prior to returning your product, please read the Help section beginning on page 52 or contact the Helpdesk on 0870 240 3962 or email bt.helpdesk@vtecheurope.com for assistance. In the unlikely event of a defect occurring, please follow the Helpdesk's instructions for replacement or repair.

Outside of the 12 month guarantee period:

If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network.

We recommend that you contact BT's approved repair agent Helpdesk Solutions on 0870 204 5029 or a local qualified repairer.

Returning your product

If the Helpline is unable to remedy your problem they will ask you to return the product. Where possible, pack the product in its original packaging. Please remember to include all parts, including the line cords, power supply units and the original batteries. Please note that we cannot take responsibility for goods damaged in transit. Please obtain and keep proof of posting from the Post Office or other carrier.

For your records

Date of purchase:

.....

Place of purchase:

.....

Serial number:

.....

For guarantee purposes proof of purchase is required so please keep your receipt.

Enter your base PIN here:

[/ / /]

(See page 41 for more information)

Technical information

How many telephones can I have?

All items of equipment have a Ringer Equivalence Number (REN) which is used to calculate the number of items that may be connected to any one telephone line. The BT Freestyle 210 has a total REN of 1, i.e. for a base and up to 4 handsets. Any other instrument provided by BT may be assumed to have a REN of 1 unless stated otherwise.

A total REN of 4 is allowed per telephone line. If the total REN of 4 is exceeded, the telephone may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 4.

- Only use approved power supply, item code 030648.
- Only use approved AAA NiMH rechargeable batteries.

Additional handsets

The BT Freestyle 210 is NOT GAP compatible.

R&TTE Directive

This product is intended for use within the UK for connection to the public telephone network and compatible switchboards.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive (1999/5/EC).

If you would like a copy of the Declaration of Conformity please visit:

bt.helpdesk@vtecheurope.com

Offices worldwide

The services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2006.
Registered Office: 81 Newgate Street, London EC1A 7AJ.
Registered in England No. 1800000.

Designed and produced by The Art & Design Partnership Ltd.
Printed in China

BT Freestyle 210 (10/06) 3

