

## Your BT Graphite 1100 is now ready for use.

**ⓘ** If you ever need to remove the batteries, simply slide open the battery compartment cover and using the finger grip the batteries and pull them out.

- Place handset on the charger to charge for 24 hours.
- Activate batteries as explained above.
- Activate the batteries by pulling the plastic tab away from the back of the handset.

### Set up your additional handsets (multi-packs only)

**ⓘ** Important: Charge the handset batteries for 24 hours or your phone may not work.

- Activate the batteries by pulling the plastic tab away from the back of the handset.
- Place handset on base to charge.
- After 24 hours, plug the telephone line cord into the telephone wall socket.



## 2 Charge

## General information

For information on safety instructions, cleaning, technical information or connecting to a switchboard, please refer to the 'General Information' section in the full user guide at [www.bt.com/producthelp](http://www.bt.com/producthelp)

### Guarantee

Your BT Graphite 1100 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the BT Graphite 1100, or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is required.
- The equipment is returned to BT or its agent as instructed.

This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

This guarantee does not affect your statutory rights.

For further information within and outside the 12 month guarantee, please refer to the full user guide at [www.bt.com/producthelp](http://www.bt.com/producthelp)

### Product disposal instructions

The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.

The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

#### Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product as per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

#### Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

 
#### Warning

This equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

### R&TTE Directive & Declaration of Conformity

This product is intended for use within the UK for connection to the public telephone network and compatible switchboards.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive (1999/5/EC).

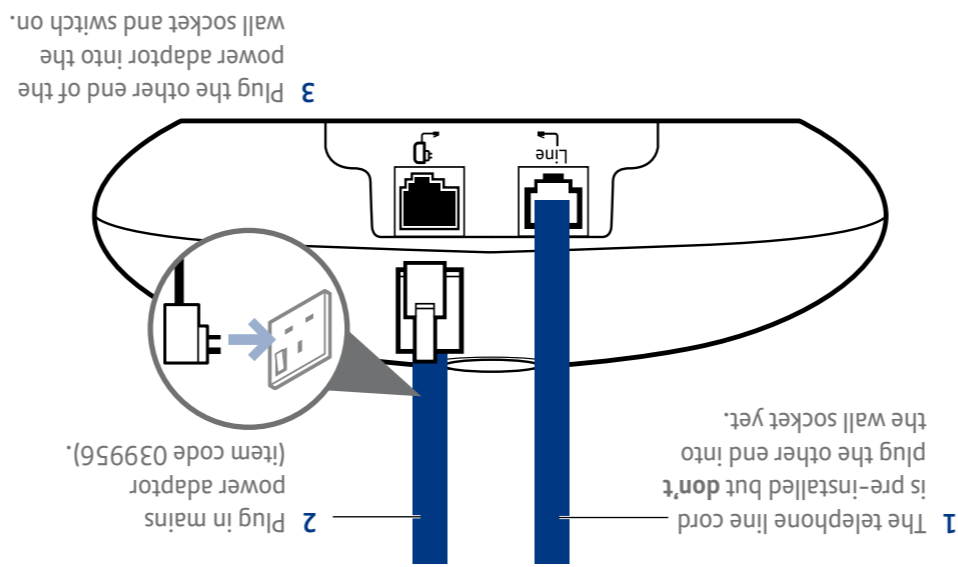

## 1 Plug in

**BT & British Gas**  
Working together, supporting energy saving products  
BT & British Gas have joined forces to help our customers find new ways to save energy around the home, so we can all do our bit for the environment & save money too!

### BT is a sustainability leader

To find out how we're making our products greener visit

[bt.com/betterworld/products](http://bt.com/betterworld/products)

### Offices worldwide

The services described in this publication are subject to availability and may be modified from time to time. Services and equipment are supplied subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of a contract.

© British Telecommunications plc 2009.  
Registered Office: 81 Newgate Street, London EC1A 7AJ.  
Registered in England No. 1800000.

Designed and produced by The Art & Design Partnership Ltd.

Printed in China / Issue 3 / ADP04-09



## BT Graphite 1100 User Guide



- 1 Plug in
- 2 Charge
- 3 Go!

 


Setting up is easy. Just follow the simple steps in this guide.

If you need further assistance, please visit our website [www.bt.com/producthelp](http://www.bt.com/producthelp) to view our advanced user guide or call our helpdesk on 0808 100 6556\*

\* Calls made from within the UK mainland network are free. Mobile and International call costs may vary.

**ⓘ** Important: Only use the cables and rechargeable batteries supplied in this box, or this product may not work. Any replacement rechargeable batteries must be of the same type.

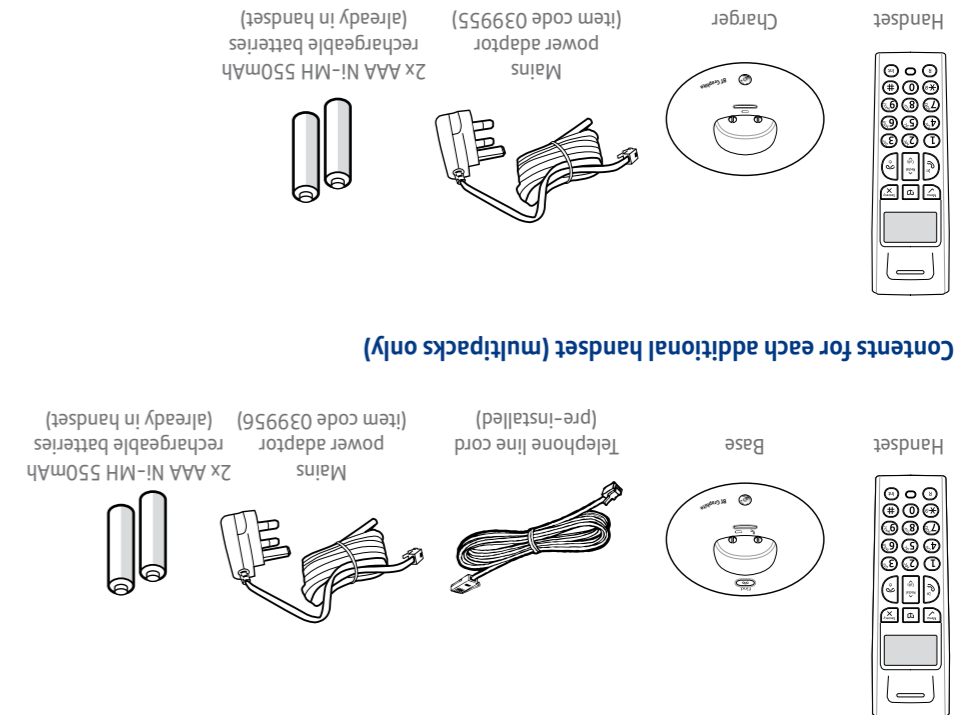


Contents for each additional handset (multi-packs only)

Check box contents

# Your phone
 
## Handset

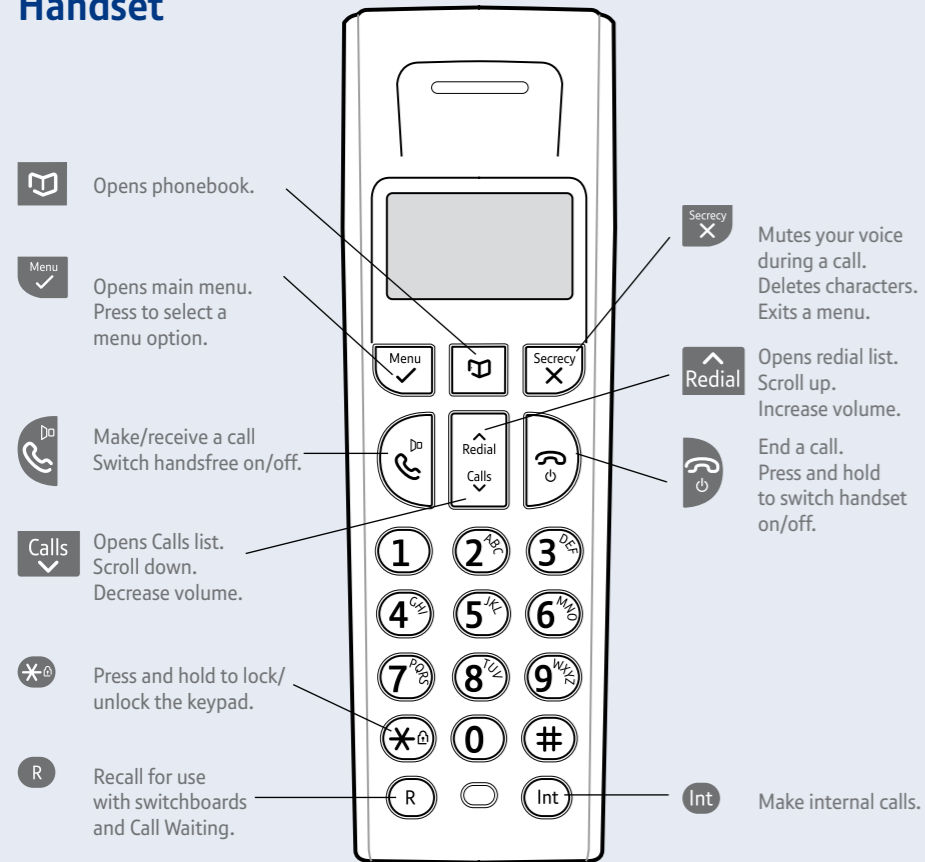

## Navigating the menus

Press **Menu** to enter the main menu.

Press **Redial** and **Calls** buttons to scroll through the menu options (when you reach the end of the list, the first option is displayed again). Press **Menu** to select an option, or press **Secrecy** to return to the previous menu.

To exit a menu and return to standby press **Secrecy** repeatedly.

### Menu map

PHONEBOOK	CLOCK/ALARM	SETTINGS	ADVANCED SET
(Menu only appears when phonebook is empty. With entries stored, press <b>Menu</b> again to enter the menu).	DATE / TIME	HANDSET TONE	REGISTRATION
ADD ENTRY	ALARM	HANDSET NAME	DE-REGISTER
MODIFY ENTRY	ALARM TONE	AUTO ANSWER	PIN CODE
DELETE ENTRY		BASE TONES	PHONE RESET
DELETE ALL			

Some menus are accessed by pressing the relevant feature button:

Press **Menu** to access the phonebook.

Press **Redial** to access the redial list.

Press **Calls** to access the calls list.

## 3 Go!

### Set date and time

Press **Menu**, scroll **Calls** to CLOCK/ALARM, press **Menu**. DATE/TIME is displayed, press **Menu**. Enter date in format (DD/MM), press **Menu**. If you make a mistake, press **Secrecy** to delete. Enter time in 24 hour format, press **Menu** to confirm.

If you have subscribed to a Caller Display service, the time will be set automatically when you receive your first call.

### Making calls

Press **Do** then dial the phone number. Press **Do** to end the call.

### Answering calls

If you have subscribed to Caller Display, the caller's details will be displayed before you answer (see below and also the full user guide online at [www.bt.com/producthelp](http://www.bt.com/producthelp) for details).

Lift the handset from the base or charger to answer incoming calls. If the handset is not on the base or charger, press **Do**.

### Handsfree

Press **Do** during a call to switch between earpiece and loudspeaker.

### Secrecy

During a call, press **Secrecy**. MUTE is displayed and your caller cannot hear you. Press **Secrecy** to resume your call.

### Redial

Press **Redial**, then scroll **Redial** or **Calls** to choose the number you want from the last 10 dialled numbers.

Press **Do** to redial the number.

### Phonebook

#### Storing new phonebook entries (up to 50 entries)

Press **Menu**. PHONEBOOK is displayed, press **Menu**.

If entries already stored the first entry will be displayed, you'll need to press **Menu** again. Otherwise display shows ADD ENTRY. Press **Menu**.

Display shows ADD NAME. Using the letters on the keypad, enter the name. You may need to press the same button a few times until the letter you want is displayed. For example, press **2** once for A, or twice for B. Press **Menu**.

Display shows ADD NUMBER. Enter the phone number and press **Menu** to confirm.

#### Dialling a phonebook entry

Press **Menu**. Scroll **Calls** to the entry you want and press **Do** to dial.

### Caller Display and the Calls list

If you must subscribe to a Caller Display service for this feature to work. Your network provider may charge you for this service.

#### View and dial from the Calls list

Press **Calls**, then **Redial** or **Calls** to scroll through the last 40 incoming calls.

Press **#** repeatedly to switch between the number and date/time of the call.

Press **Do** to dial entry displayed.

Press **Menu** for further options.

## Call Waiting

You must subscribe to a Call Waiting service for this feature to work. Your network provider may charge you for this service.

During a call, if another caller tries to reach you, you will hear a soft beep every 5 seconds.

To speak to the second caller, press **R**, your current caller will be put on hold. Press **R** to switch between both callers.

Or, press **Do** to end the current call. The handset will ring, press **Do** to connect to the waiting caller.

## Ringer volume and melody

### Change handset or base ringer volume (5 levels or off)

Press **Menu**, scroll **Calls** to SETTINGS. Press **Menu**, HANDSET TONE displayed, press **Menu** or scroll **Calls** to BASE TONES and press **Menu**.

RING VOLUME is displayed, press **Menu**. Press **Redial** or **Calls** to select required volume, press **Menu** to confirm.

### Change handset or base ringer melody

 
Press **Menu**, scroll **Calls** to SETTINGS. Press **Menu**, HANDSET TONE displayed, press **Menu** or scroll **Calls** to BASE TONES and press **Menu**.

Scroll **Calls** to RING MELODY, press **Menu**. Press **Redial** or **Calls** to select required melody, press **Menu** to confirm.

## Help

Most problems can be fixed with a few simple checks.

Problem	Solution
No dial tone	Only use the cables and batteries supplied. Make sure both the mains power adaptor cable and telephone line cord are plugged into the correct sockets.
Poor speech quality	Make sure the product is not located too close to other electrical appliances. This can also help improve the handset range from the base.
Battery icon not full/handset dead	Make sure you charge the batteries for 24 hours before use to ensure maximum battery performance.
Using broadband on the same phone line?	Make sure you plug the phone into the wall socket via an ADSL microfilter (not supplied), otherwise you may have problems with this product and your broadband service.

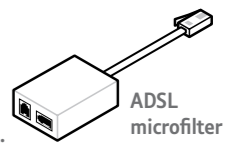

## Find out more

- New Frequently Asked Questions available at [www.bt.com/producthelp](http://www.bt.com/producthelp)
- If you need more detailed instructions, a full user guide is available to download from [www.bt.com/producthelp](http://www.bt.com/producthelp)
- If you cannot find the answer to your problem in the full online user guide, then please call our free Helpline on 0808 100 6556\*. Our dedicated advisors are more likely to be able to help you than the retailer where you made your purchase.
- This document is also available in other formats, such as Large print, Braille and Audio CD. If you would like a copy, please call 0808 100 6556\*.