



User Guide

BT FREESTYLE 6300



Welcome...

to your BT Freestyle 6300
Digital Cordless Telephone



- Digital call quality with a range of up to 300 metres outdoors and up to 50 metres indoors.
- 100 Name and number directory in the base and another 100 in the handset.
- Make, receive and transfer calls directly from the base using the built in loudspeaker.
- Caller Display* lets you see who is calling and keep track of unanswered calls.
- Call Waiting* lets you know, during a call, that another caller is waiting to get through.
- Redial any of the last 20 numbers from a handset or the last 10 numbers from the base.
- Use up to 5 handsets with your base without the need for additional wiring, creating a complete phone system on a single telephone line.

* Requires subscription to your network provider's Caller Display and Call Waiting services. A quarterly fee is payable.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

This User Guide provides you with all the information you need to get the most from your phone.

Before you make your first call you'll need to set up your phone. This doesn't take long and is easy to do. Just follow the simple instructions on the next few pages.

■ **Need help?**

If you have any problems setting up or using your BT Freestyle 6300 please contact the Helpline on **0870 605 8047**.

Alternatively, you may find the answer in 'Help' at the back of this guide.

Got everything?

- BT Freestyle 6300 base
- BT Freestyle 6300 handset
- 2 x NiMH AAA rechargeable batteries
- Mains power adaptor (item code 020376)
- Telephone line cord

If you have purchased a BT Freestyle 6300 multiple pack you will also receive the following for each additional handset:

- BT Freestyle 6000 handset
- BT Freestyle 6000 charger
- Mains power charger adaptor (item code 021299)
- 2 x NiMH AAA rechargeable batteries

In this guide

Getting started

Location	6
Setting up	6

Getting to know your phone

Handset buttons	8
Handset display icons	9
Base buttons	10
Base display icons	12
Navigating the menus	13
Handset menu map	14
Base menu map	15

Using the phone

Making and receiving calls with the handset	16
Make an external call	16
Preparatory dialling	16
End a call	16
Receiving calls	16
Earpiece volume	17
Amplify your caller's voice	17
Secrecy	17
Switch to handsfree during a call	18
Keypad lock	18
Making and receiving calls at the base	19

Make an external call	19
Preparatory dialling	19
Dial from the directory	19
Adjust loudspeaker volume	19
End a call	20
Receiving calls	20
Secrecy	20
Intercom	20
Redial from the handset	21
Redial from the base	22

Using the directory

Handset directory	24
Add a new directory entry	24
Entering names	25
Character map	26
View and dial a directory entry	27
Edit an entry	27
Delete an entry	28
Assign a ring melody to a directory entry	28
Copy a directory entry to another handset	29
Copy the entire directory to another handset	30
Base directory	31
View and dial a directory entry	32

Delete	32
Assign a ringer melody	32
Copy	33

BT Calling Features & the Calls list

Accessing the Calls list using the handset	35
Accessing the Calls list from the base	37
Call Waiting	39

Additional settings

Handset ringer volume	40
Handset ringer melody	40
Key beeps	41
Auto talk	41
Handset language	42
Set the time	42
Set the date	43
Set the alarm	43
Switch off an alarm that has been set ..	44
Change the time format	45
Base ringer volume	45
Base ringer melody	46
Set the dial mode	46
Change the recall mode	47
Change the system PIN	48
Restore default settings	49

Additional handsets & bases

Register a handset to a base	50
Select a base	51
De-register a handset	51
Make an internal call from a handset ..	52
Make an internal call from the base ..	52
Transferring calls	52
3-Way conference call	53

Help	55
-------------------	----

General information

Safety	59
Cleaning	60
Environmental	60
Product disposal instructions	61
BT Accessories and replacement items	62
Guarantee	62
Returning your phone	63

Technical information

How many telephones can you have? ..	64
Connecting to a switchboard	64
Access code and entering a pause ...	65
Recall	65
R&TTE	65
Declaration of Conformance	65

Getting started

WARNING

Do not place your BT Freestyle 6300 in the bathroom or other humid areas.

Handset range

The BT Freestyle 6300 has a range of 300 metres outdoors when there is a clear line of sight between the base and handset. When there is no clear line of sight between the base and handset, e.g. base indoors and handset either indoors or outdoors, the range could be reduced to 50 metres. Thick stone walls will severely affect the range.

Range indicator

The Ψ symbol on your handset display indicates when you are in range of the base. If the symbol flashes and you hear a warning beep, you are out of range and will need to move closer to the base.

IMPORTANT

Do not connect the telephone line until your handset is fully charged.

The base must be plugged into the mains power at all times.

Which socket?



Power socket



Telephone line socket

Location

You need to place your BT Freestyle 6300 close enough to a mains power and telephone socket so that the cables will reach.


Make sure it is at least 1 metre away from other electrical appliances to avoid interference.

Your BT Freestyle 6300 works by sending radio signals between the handset and base. The strength of the signal depends on where you site the base. Putting it as high as possible can help to provide the best signal.


Setting up


1. Plug the mains power cable into the base. Then plug the power adaptor into the wall socket and switch the power on. The **Power/In use** indicator on the base lights up.


Underside of base

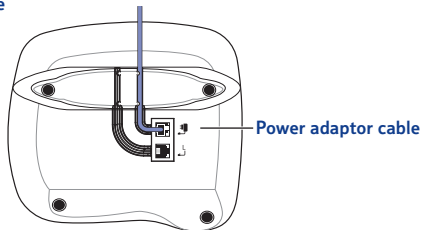

2. Remove the battery compartment cover and insert the 2 x AAA NiMH batteries (supplied) into the handset. Slide the battery compartment cover back into place.

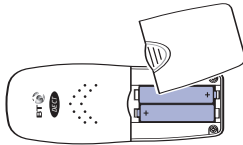

3. Charge the handset for at least 24 hours by placing it on the base. The red **Charging** indicator on the base lights up and remains lit while the handset is on the base (even when the battery is fully charged). When the handset is fully charged the display will show a full battery icon .
4. After 24 hours, plug the telephone line cord into your BT Freestyle 6300 base and the other end into the wall socket.

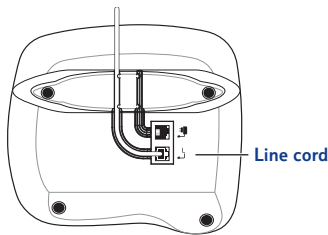

Your BT Freestyle 6300 is now ready for use.

Talk/Standby time

Under ideal conditions, fully charged handset batteries should provide up to 10 hours talk time or 100 hours standby on a single charge.


Battery performance

Please note that new NiMH batteries do not reach full capacity until they have been in normal use for several days.

To keep the batteries in the best condition, leave the handset off the charger for a few hours at a time (after the initial 24 hour charge). Running the batteries right down at least once a week will help them last as long as possible.


The charge capacity of rechargeable batteries will reduce with time as they wear out, so reducing the talk/standby time of the handset. Eventually they will need to be replaced. New batteries can be obtained from the BT Freestyle Helpline 0870 605 8047.

Battery low warning


When the battery charge is low the display will show **Battery Low** and an empty battery icon . You will also hear the battery low warning beep. Place the handset back on the base to recharge.

Getting to know your phone

Handset buttons

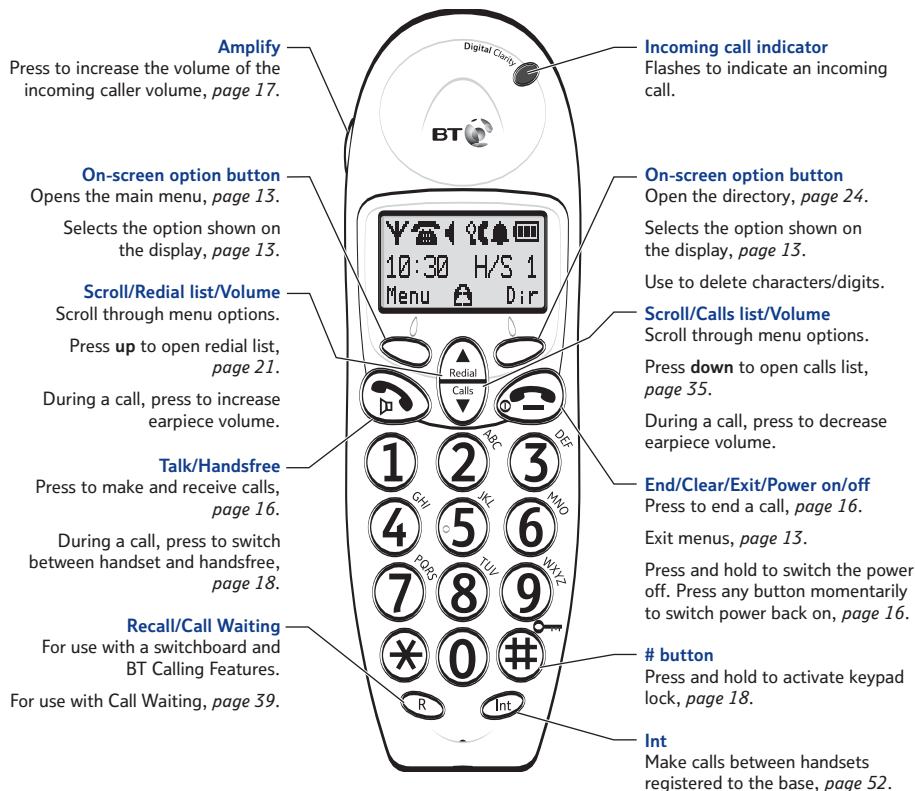

Handset display icons – These are the symbols you will see on your handset's screen.

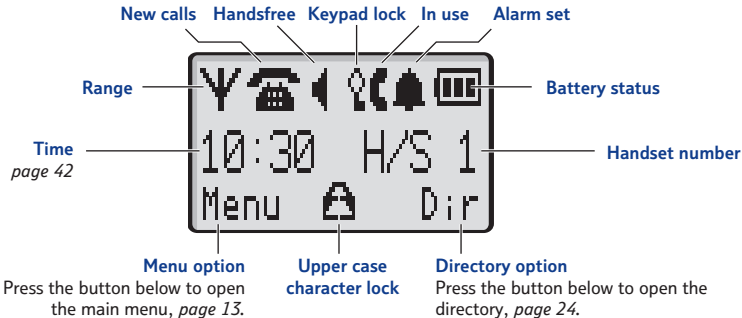

Range indicator
Indicates that the handset is registered and you are in range of the base.
Flashes when the base is out of range.

New calls indicator*
Displayed when you have new (unread) entries in the Calls list, *page 35*. The icon will continue to flash until you have viewed all new calls.

Handsfree
Indicates when handsfree is switched on, *page 18*.

Keypad locked
Indicates the keypad is locked, *page 18*.

Alarm set
Indicates an alarm is set, *page 43*.

In use
Displayed when making or receiving a call, *page 16*.

Battery status
Shows the battery charge level.

A 'scrolling' battery icon is displayed when the handset is on charge.

Fully charged.

Half charged.

Battery low.

Empty.

Upper case selected
Displayed when you have upper case character lock on, *page 25*.

* For this feature to work you must subscribe to your network provider's Caller Display service.

Base buttons

On-screen options

Select the option displayed on screen.
Use to delete characters/digits.

Talk


Press to make and receive calls via the base loudspeaker,
page 19.


Int

Lets you make an intercom call to a handset, *page 52.*
Used in call transfer, *page 52* and 3-way calls, *page 53.*

Note

The handset should be placed on
the base face down only. The red
charging light will come on.

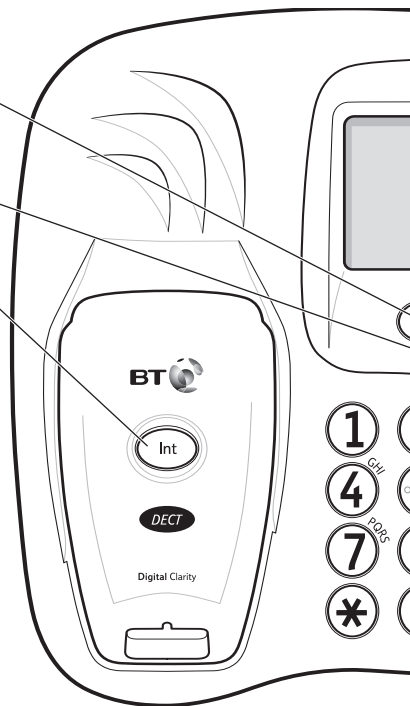


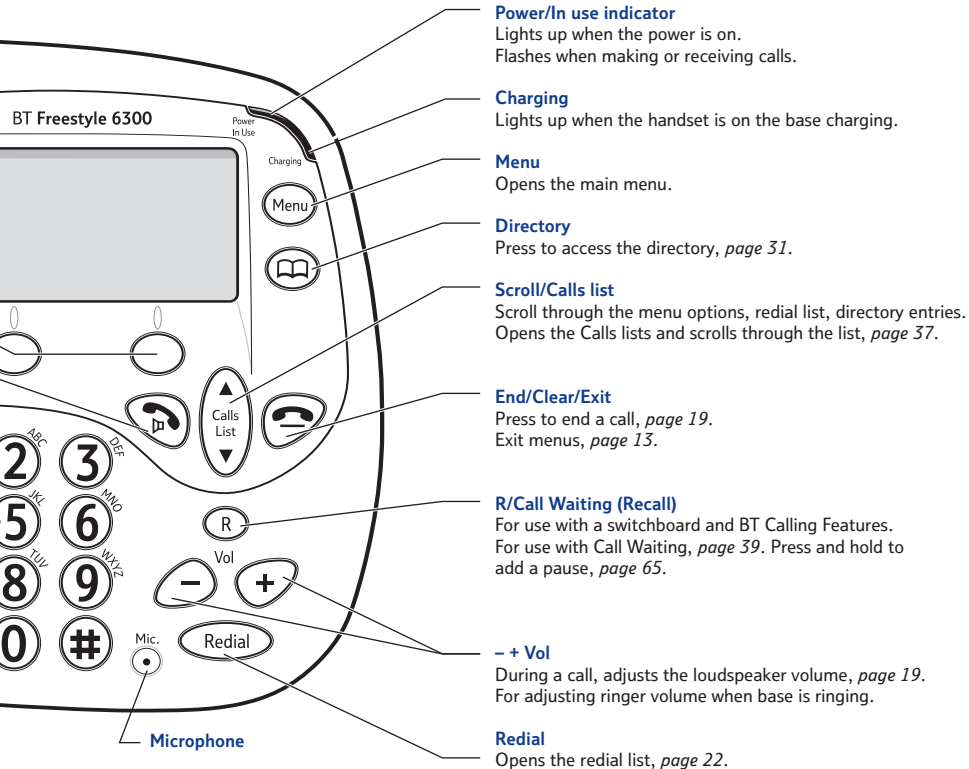

Base display icons

Flashing icon to indicate
new calls (if any have
been received).

Time and Date

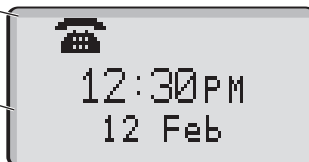**IMPORTANT**



When in standby, no menu options
are displayed on the base screen.



Navigating the menus

Your BT Freestyle 6300 has a menu system which is easy to use. Each menu leads to a list of options. Take a look at the menu map on the following page.

Handset

When the handset is in standby, press the **option** button under Menu to open the main menu.

Use the  or  buttons to scroll to the menu option you want. Then select **OK** for further options or confirm the setting displayed.


The option buttons and  or  buttons are also used when viewing the calls list and directory.



Select the option displayed by pressing the button underneath it.

For example, press the left-hand option button to select Menu and open the main menu, or press the right-hand option button to open the directory.


Base

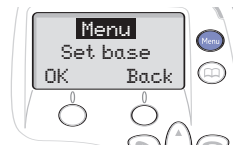

The base works in exactly the same way. Press the menu button then select the option displayed by pressing the button underneath it.

Exit or go back one level in the menu

To go to the previous level in the menu, select **Back**.

To cancel an operation and/or return to standby at any time, press .

If no button is pressed for 20 seconds the display will automatically return to standby.

Handset menu map



Set Handset

Ring Volume
Ring Melody
Key Beeps
Auto Talk
Language

Set Base

Ring Volume
Ring Melody
Dial Mode
Recall Mode
System PIN
Default

Set Time

Time
Date
Alarm
Time Format

Registration

Register H/S
Select Base
De-register

Directory menu *(page 24)*

First entry...

Options

New Entry

Show Number


Edit Entry

Set Melody

Delete Entry

Copy Entry

Copy All

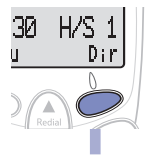

Base menu map




Set Base

Ring Volume
Ring Melody
Dial Mode
Recall Mode
System PIN
Default

Set Time

Time
Date
Alarm
Time Format

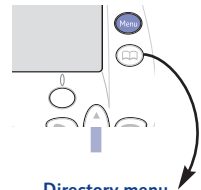

Directory menu (page 31)

First entry...

Options



New Entry

Show Number

Edit Entry


Delete Entry

Copy Entry

Copy All

Using the phone

Power On/Off

Press *and hold*  to switch the power off. Press any button momentarily to switch the power back on.


Dialling numbers quickly

Numbers can also be dialled direct from the directory (*page 27*), the dialled numbers list (*page 21*), or the calls list (*page 35*).

Call timer


The duration of your call is shown during and after your call has ended for a short while.


Auto Talk

If you would rather press  to receive a call when the handset is on the base, you need to switch Auto Talk off, see *page 41*.


Making and receiving calls with the handset

Make an external call


1. Press . When you hear the dialling tone, dial the telephone number.

The green In Use light on the base flashes and the  icon is displayed.

Preparatory dialling


1. Enter the number first. If you make a mistake as you dial, select **Clear** to delete the last digit. Press  to dial the number.

End a call

1. Press  or place the handset back on the base face down.

Receiving calls


Providing you have subscribed to your network's Caller Display service, the caller's number (or name if stored in the directory) is displayed. See *page 34*.

1. Press  or if the handset is on the base, simply lift it up and speak.

Earpiece volume

During a call you can adjust the volume of your caller's voice in the earpiece.

The new earpiece volume level remains set until changed again.



1. During a call, press  or  to increase or decrease the volume. The volume level is shown in the display, i.e. minimum = , maximum = .

Amplify your caller's voice

In addition to the earpiece volume settings, during a call you can amplify the incoming caller's voice.

Amplification is switched off automatically at the end of the call.

With amplification on, the earpiece volume can still be increased or decreased accordingly.

1. During a call, press , on the side of the handset. The display shows **Amplify On** for a few seconds and boosts the volume of the incoming caller's voice.
2. Press  again to switch amplification off and display shows **Amplify Off** for a few seconds.

Secrecy

During a call, you can talk to someone nearby without your caller hearing.

1. During a call, select **Secrecy**. The display shows **Secrecy** and flashes. Your caller cannot hear you.
2. Select **Off** to return to your caller.



IMPORTANT


Emergency calls cannot be made while the keypad is locked. You will need to unlock the keypad before you can dial out.

Switch to handsfree during a call

Handsfree lets you talk to your caller without holding the handset. It also enables other people in the room to listen to your conversation over the loudspeaker.

During a call:




1. Press *and release*  until the call is transferred to the loudspeaker. The display shows the  icon.

Press *and release*  *again* if you want to switch from handsfree back to the handset.

2. Press  to end the call.


Keypad lock

Lock the keypad to prevent any accidental button presses or dialling of numbers. You can still answer calls while the keypad is locked; the keypad will remain unlocked for the duration of the call.


1. Press *and hold*  to lock the keypad. The display shows **Keypad Locked** for a few seconds and the  icon.
2. To unlock the keypad select **Unlock**, then press  *within 2 seconds*.

Making and receiving calls at the base





Make an external call

1. Press . You will hear the dial tone over the loudspeaker. Dial the number.

Preparatory dialling

1. Enter the number. If you make a mistake press **Clear** to delete. Press  to dial.

Dial from the directory

1. Press , scroll  or  through the list of names and numbers.
2. Press  to call the number or **Back** to cancel.

Adjust loudspeaker volume

There are five levels to choose from.

1. During a call, press  or  to increase or decrease the volume.

The call timer is displayed on screen, starting a few seconds after the last digit is dialled.

When a handset is being used to make a call, the base display shows **Call in Progress**, instead of the time and date.

End a call

1. Press .

Receiving calls

When the phone rings:



1. Press . The call is taken via the loudspeaker.

Secrecy

Talk to someone else nearby without your caller hearing.

1. During a call, press **Secrecy**. The display flashes **Secrecy**. Your caller cannot hear you.
2. Press **Off** to return to your caller.






Intercom

1. Press  on the base. All registered handsets will ring. The first handset to press  will take the call and this will start an internal call between the base and the handset.






Redial from the handset

The last 20 phone numbers you have dialled are saved to the redial list. You can select any of the numbers to redial, delete or copy to the directory. Once the list is full and a new call is made, the oldest call is replaced.

Redial a number from the redial list

1. Press the redial button  to enter the redial list. The most recently dialled number is displayed.
2. Use  to scroll through the list until the number you want to redial is displayed. Once in the list you can scroll using  or .
3. Press  to redial the number.

Save a number from the redial list to the directory

1. Press . Then scroll  to the number you want to save. (Once in the list you can scroll using  or .
2. Select **Options**. Save Number is displayed. Select **OK**.
3. Enter Name is displayed. Enter a name using the keypad. Then select Save.
4. The display shows Entry Saved then returns to the first entry in the redial list.
5. Press  to exit.

If a call is made to a number already in the list, the previous occurrence will be deleted.

If a call is made to a number which is stored in the directory, the name will be displayed instead, see 'Directory', on page 24.






See 'Entering names' on page 25 for help entering names in the directory.

If you make a mistake, select **Clear** to delete the last character.



If the memory is full you will not know until you press **Save**.

If the name is displayed you have to press **Options** twice.

Delete a number from the redial list





1. Press . Then scroll  or  to the number you want to delete.
2. Select **Options** and scroll  to **Delete Call**. Select **OK**. The display shows **Call Deleted** and returns to the newest call in the redial list.
3. Press  to exit.

Delete all numbers from the redial list





1. Press  then select **Options** and scroll  to **Delete All Calls**. Select **OK**.
2. The phone emits a confirmation tone and the display shows **Empty**, then returns to standby.

Redial from the base






Redial the last 10 numbers called from the base.

1. Press . The most recently dialled number is displayed.
2. Scroll  or  through the list. Press  to dial.

Save a redial number to the base directory

1. Press . The most recently dialled number is displayed.
2. Scroll  or  to the number you want.
3. Press **Options**. Save number is displayed. Press **OK**.
4. Enter the name and press **Save** to store the number. Display shows Entry Saved and then returns to the newest call in the redial list.
5. Press  to exit.

Delete a number from the base redial list

1. Press . The most recently dialled number is displayed.
2. Scroll  to the number you want.
3. Press **Options** and scroll  or  to Delete Call. Press **OK**. Display shows Call Deleted and returns to the newest call in the redial list.
4. Press  to exit.

Delete all numbers from the base redial list

1. Press .
2. Press **Options** and scroll  to Delete All Calls. Press **OK**. Display shows Empty and then returns to standby.

If an entry in the redial list is also in the directory the name will be displayed instead of the number.

Selecting **Options** for such an entry will then display the number, and **Options** must be selected again to be able to save or delete.

If necessary, press Clear to edit

Using the directory

You can copy entries to the handset from another handset or from the base but you cannot copy entries from the handset to the base. Therefore, you may wish to enter entries in the base first and then copy them to the handset to save time, see page 33.

Directory full

If the directory is full when you try to add or copy an entry, the display will show **Directory Full**.

If you make a mistake, select **Clear** to delete digits.

Handset directory


You can store up to 100 entries in the handset directory. Each entry contains a name and number. Names can be up to 12 characters long and numbers up to 20 digits.

Add a new directory entry

1. From standby, select **Dir** to open the directory. If the directory is empty, **Enter Name** is displayed.

If there are already entries stored the first entry is shown. Select **Options**, **New Entry** is displayed. Select **OK**.
2. **Enter Name** is displayed. Enter a name using the keypad. Then select **Save**. See the following page for help on how to enter names in the directory.
3. **Enter Number** is displayed. Enter the telephone number.

If you subscribe to your network's Caller Display service and want names in your directory displayed instead of the phone numbers, you must store the full telephone number including the area code.

4. Select **Save**. The display shows **Entry Saved**, then the new added entry.
5. Add more entries using the above sequence or press  to exit.

Entering names


To enter names, you use the letters on the keypad.

For example, press **8** for the letter T, or **6** *three times* for the letter Û. See the character map below.

If the next character you want to enter is on the same button as the last, wait a moment for the cursor to move right.

To change between UPPER and lower case

To change between upper and lower case, press the  button.

The  icon is displayed when upper case is selected. Characters will remain in upper or lower case until changed again.

Even if lower case is selected, the first letter of every word will be displayed as a capital letter.

To insert a space

Press **1** to insert a space.

To delete characters




If you make a mistake, select **Clear** to delete characters.


Handset character map

Each successive button press displays the characters shown.






[illegible]

View and dial a directory entry

1. Select **Dir** to open the directory. The first directory entry is displayed.
2. Use  and  to scroll alphabetically through the directory and find the entry you want to dial.
3. Press  to dial the displayed entry.

If you wish, you can see the telephone number. Select **Options**, scroll  to Show Number and select **OK**.

Edit an entry






1. Select **Dir** to open the directory and scroll  or , or quick-search, to the entry you want to edit.
2. Select **Options**, then scroll  or  to Edit Entry and select **OK**.
3. Select **Clear** to delete any incorrect name characters, then enter new ones and select **Save** when you have finished. The telephone number is displayed.
4. Select **Clear** to delete any incorrect telephone number digits, then enter new ones and select **Save** to confirm. The display shows Entry Saved then shows the edited entry.
5. Press  to exit.

Quick-search a name

Press the keypad button with the first letter of the name you want. For example, press **7** three times to search for names beginning with R.





Please note this feature is only available if you have subscribed to a Caller Display Service.




Delete an entry

1. Select **Dir** to open the directory and scroll  or , or quick-search, to the entry you want to delete.
2. Select **Options**, then scroll  or  to **Delete Entry** and select **OK**.
3. The displays shows **Delete Entry?**. Select **Yes** to confirm the deletion (or **No** to go back). The display shows **Deleted** and returns to the directory.
4. Press  to exit and return to standby.

Assign a ringer melody to a directory entry







You can assign a different ringer melody to selected entries in your directory, for example, family members or friends. When one of these people call, you will be able to identify them from the different ringer melody.

1. Select **Dir** and scroll  or , or quick-search, to the entry you want to assign a melody.
2. Select **Options**, then scroll  or  to **Set Melody** and select **OK**. The current setting is displayed and will be played (unless set to 'off').

3. Scroll  or  to hear the choice available (“Off” and melodies 1-10). When you have chosen one, select **OK**. The display shows *Saved* and returns to set melody.
4. Press  to exit.

Copy a directory entry to another handset

If you have more than one handset registered to your Freestyle 6300 base you can copy entries, or the entire directory, between handsets.

1. Select **Dir** to open the directory and scroll  or , or quick-search, to the entry you want to copy.
2. Select **Options**, then scroll  or  to **COPY Entry** and select **OK**.
3. Scroll  or  to choose the handset to copy the entry to and select **OK**. The display shows *Copying to Handset x*, during the transfer.
4. The receiving handset briefly shows *Copying from Handset X* (where X is the handset number that the copied entries are coming from). Once an entry has been successfully copied it shows the name of the entry for a few seconds. The display then returns to standby when the entry has been copied.


If the copy is refused or cannot be completed, the display will show *COPY Failed*.

If the directory entry is amended and then copied to another handset it does not overwrite the target phone's entry but creates an additional entry.





When you copy the entire directory to another handset it will add to the entries already stored.

IMPORTANT

If you are trying to copy more entries into the list than there is space for (maximum 100 entries) then the directory entries to be copied will *replace* the existing entries on the destination handset.

5. At the first handset, choose another handset to copy the entry to or press  to exit.


Copy the entire directory to another handset

1. Select **Dir** and the first name in the directory is displayed. Select **Options** then scroll  to **Copy All** and select **OK**.
2. Scroll  or  to choose the handset to copy the directory to and select **OK**. The display shows **Copying to Handset x**, during the transfer.
3. The receiving handset briefly shows **Copying from Handset X** (where X is the handset number that the copied entries are coming from). Once an entry has been successfully copied it shows the name of the entry for a few seconds. The display then returns to standby when the directory has been copied.
4. At the first handset, choose another handset to copy the directory to or press  to exit.

Base directory

You can store up to 100 name and number entries in the base. Names can be up to 12 characters and numbers up to 20 digits.





Add a new directory entry via the base

1. Press , then follow the steps shown for the handset on *page 24*. Please note that the base has a different character map from the handset.







Button	Character												
①		space	.	,	:	;	!	?	i	¿	'	"	1
②		A	B	C	a	b	c	2					
③		D	E	F	d	e	f	3	%				
④		G	H	I	g	h	i	4	_				
⑤		J	K	L	j	k	l	5	-				
⑥		M	N	O	m	n	o	6	(
⑦		P	Q	R	S	p	q	r	s	7	/		
⑧		T	U	V	t	u	v	8	:				
⑨		W	X	Y	Z	w	x	y	z	9)		
⑩		0	@	&									
*		*	€	£	\$	¥							
#		#											

Entries are stored in alphabetical order.









View and dial a base directory entry

1. Press . The first entry is displayed. Scroll  or  to the entry you want.
2. Press  to dial.








Delete an entry

1. Press  then scroll  or  to the entry you want.
2. Press **Options** and scroll  or  to Delete Entry. Press **OK**. Delete Entry? is displayed.
3. Press **Yes** to confirm. Display shows Deleted, then returns to the first entry in the directory.
4. Press  to return to standby.






Assign a ringer melody

1. Press  then scroll  or  to the entry you want.
2. Press **Options** and scroll  or  to Set Melody. Press **OK**.
3. Scroll  or  to hear the choice available (Off and melodies 1-5).
4. Press **OK** to select the current melody.
5. Press  to return to standby.

Copy a base directory entry to a handset

1. Press  then scroll  or  to the entry you want.
2. Press **Options** and scroll  or  to Copy Entry.
Press **OK**.
3. Scroll  or  to select the handset and press **OK**.
4. The receiving handset shows Copying from Base.

Copy entire base directory to a handset

1. Press .
2. Press **Options** and scroll  or  to Copy All.
Press **OK**.
3. Scroll  or  to select the handset and press **OK**.
4. The receiving handset shows Copying from Base.

IMPORTANT

If you are trying to copy more entries into the directory than there is space for (maximum 100), the directory entries being copied will replace the existing entries on the handset.

You cannot copy directory entries from a handset to the base.
You can only copy from base to handset.

BT Calling Features & the Calls list

IMPORTANT

To use Caller Display you must first subscribe to the service from your network provider. A quarterly fee is payable. (Although a quarterly fee is payable with BT as the network provider, other providers may bill differently).

For more information, call BT free on 0800 800 150.

It may take a couple of seconds for the display to show the telephone number or name for an incoming call. The display will initially display **External Call** followed by the number.

Caller information not available

For some incoming calls, the telephone number of the caller is not available and so cannot be displayed.

In this case some explanatory information will be displayed.

Withheld

The number has been withheld or is unavailable.

Operator

The call has been made via the operator.

Ringback

Ringback call.



Caller Display


If you have subscribed to a Caller Display service, your caller's number will be shown on your handset display (provided it is not withheld) prior to answering the call.

If the caller's number matches an entry stored in the directory, the name will be displayed instead.

Calls list






The Calls list stores details of the last 30 calls in the order they were received. The caller's details are stored in the Calls list whether you answered the call or not. If a call is received when the list is full, the oldest entry will be deleted automatically.


When you have received new calls the  icon will be displayed (flashing on the standby screen). When a new call is received on the Call list, the  icon will flash on the display (in standby mode). 'New calls' are entries in the calls list that have not yet been viewed.

To stop the  icon flashing, you need to view all the new calls.




Accessing the Calls list from the Handset

View and dial an entry in the Calls list using the handset

1. Press  to open the Calls list. The most recently received call is displayed. **New** will be displayed on the title bar when a call is new (i.e. has not yet been viewed).
2. Use  and  to view other entries in the list. To see the date and time of the call, select **Options**. The date and time of the call will be displayed. Select **Back** to return to the entry.
3. Press  to dial the displayed entry. The number will be dialled automatically.
Or, press  to exit the Calls list.

When all new calls in the list have been viewed, the  icon on the standby screen will disappear.



Save a Calls list entry to the directory using the handset

1. Press  to open the Calls list. Then scroll  or  to the entry you want to save.






If the name is displayed you have to press **Options** twice.

See 'Entering names' on *page 25* for help entering names in the directory.



If you make a mistake, select **Clear** to delete the last character/s.

2. Select **Options**. The date and time of the call is displayed. Select **Options** *again* and then scroll  to **Save Number** and select **OK**.
3. Enter Name is displayed. Enter a name using the keypad. Then select **Save**.
4. The display shows Entry Saved. Press  to exit.

Delete a Calls list entry using the handset

1. Press . Then scroll  or  to the entry you want to delete.
2. Select **Options**. The display shows the time and date of the most recent call (or the telephone number if it had been displayed as a directory name, in which case select **Options** again).
3. Select **Options** again and scroll  to **Delete Call**. Select **OK**. The handset gives a confirmation tone as the call is deleted and the display returns to the most recent entry in the list.
4. Press  to exit.






Delete all numbers from the Calls list using the handset


1. Press , then select **Options**. The display shows the time and date of the most recent call (or the telephone number if it had been displayed as a directory name, in which case select **Options** again).
2. Select **Options** again and scroll  to Delete All Calls. Select **OK**. The handset gives a confirmation tone and the display briefly shows **Empty** before returning to standby.

If the name is displayed, you need to select **Options** again.

Accessing the Calls list from the Base

View and dial an entry in the base Calls list







1. Press  to open the calls list. The number (or name if stored in the base directory) is displayed. Press **Options** to view the date and time of the call.
2. Scroll  or  through the list. **New** on the title bar indicates unviewed calls.
3. Press  to dial the number or  to exit the list.

When all new calls have been viewed, the flashing  icon on the screen will disappear.






If the name is displayed, you need to select **Options** again.

The number will be saved in the base directory.

Save a Calls list entry to the base directory



1. Press  to open the calls list.
2. Scroll  or  to the entry you want.
3. Press **Options** to display the date and time, then **Options again** and then scroll  or  to Save Number and press **OK**.
4. Enter the name and then press **Save**. Display shows Entry Saved.
5. Press  to exit.

Delete a calls list entry

1. Press  to open the calls list.
2. Scroll  or  to the entry you want.
3. Press **Options** *twice* then scroll  to Delete Call and press **OK**.
4. Press  to exit.

If the name is displayed, you need to select **Options again**.

Delete entire calls list

1. Press  to open the calls list.
2. Press **Options** *twice* then scroll  to Delete All and press **OK**. The display briefly shows Empty before returning to standby.

If the name is displayed, you need to select **Options again**.

Call Waiting



With Call Waiting, during a call, if another caller is trying to reach you, you will hear a soft beep every 5 seconds.

If you have also subscribed to a Caller Display service, the caller's number (or name if stored in the directory) will be displayed.



Instead of the engaged tone, the second caller will hear an announcement asking them to hold the line.

To use Call Waiting

To answer the second call, without disconnecting from your first caller:

1. Press . The first caller will be put on hold and you will be connected to the second caller.
2. Press  again to return to the first caller, and then press it each time you want to switch between the two callers.

To disconnect the first call:

1. Press  to end the first call. The handset will then ring.
2. Press  and continue your conversation with the second caller.

Call Waiting works in the same way for the base as it does for the handset.

IMPORTANT

To use Call Waiting you must first subscribe to the service from your network provider. A fee is payable. For more information on BT Calling Features call BT free on 0800 800 150.

The Call Waiting beep is not audible to the person you are speaking to.

Additional settings

The default ringer volume is 5.




At each volume setting, a one second ringtone sample is played, to demonstrate the volume level.

The default ringer melody is Melody 5.

A sample of each melody is played.







Handset ringer volume

The handset has 5 ringer volume settings from 1 (low) to 5 (high) and Off.

1. Select **Menu**, Set Handset is displayed. Press **OK**.
2. The display shows Ring Volume. Select **OK**.
3. The current setting is displayed. Use  and  to change the level, then select **OK**. The display shows Saved.
4. Press  to exit.

Handset ringer melody





The handset has 10 ringer melodies to choose from; 5 normal (settings 1-5) and 5 polytones (settings 6-10). You also can set a different melody for internal and external calls.

1. Select **Menu**, the display shows Set Handset. Select **OK**.
2. Scroll  to Ring Melody and select **OK**.
3. Use  or  to choose Internal or External, then select **OK**. The current melody is displayed.
4. Scroll  or  to hear the choice of melodies available. When you have chosen one, select **OK**. The display shows Saved.
5. Press  to exit.


Key beeps

You can set your handset to beep with each button press.





The default key beeps setting is On.

1. Select **Menu**, the display shows SetHandset. Select **OK**.
2. Scroll  to Key Beeps and select **OK**.
3. Use  or  to choose On or Off, then select **OK**.
The display shows Saved.
4. Press  to exit.

Auto talk

When the handset is on the base, you can answer a call just by picking it up. When auto talk is switched off, you will have to press  to answer a call.

The default Auto Talk setting is On.

1. Select **Menu**, the display shows SetHandset. Select **OK**.
2. Scroll  to Auto Talk and select **OK**.
3. Use  or  to choose On or Off, then select **OK**.
The display shows Saved.
4. Press  to exit.

Time & date auto-set





If you subscribe to your network's Caller Display service, the date and time are set automatically when your BT Freestyle 6300 receives its first call.

The time is always set in 24-hour clock, regardless of the time format setting.




The default time format is 24-hour. However, you can use the 12-hour clock if you wish.

Handset language



You can change the language shown on the display.


1. Select **Menu**, the display shows SetHandset, select **OK**.
2. Scroll  to Language and select **OK**.
3. Use  or  to choose English, Français, Deutsch, etc then select **OK**.
4. Press  to exit.

Time, date and alarm**Set the time**




1. *At the base:* Press  then scroll  or  to select Set Time.

Or



At the handset: Press **Menu**, scroll  or  to Set Time and press **OK**.



2. Time is displayed. Select **OK**. The default time format (24 Hr) and time are displayed.
3. Enter the correct time. As new digits are entered they will overwrite the existing time.
4. Select **OK**. The displays shows Saved.
5. Press  to exit.

Set the date




1. *At the base:* Press  then scroll  or  to display Set Time and select using **OK**.

Or



At the handset: Press **Menu**, scroll  or  to Set Time and press **OK**.

2. Scroll  to Date and select **OK**. The current date is displayed.
3. Enter the correct date (day then month). As new digits are entered they will overwrite the existing date.
4. Select **OK**. The display shows Saved.
5. Press  to exit.

Set the alarm


1. *At the base:* Press  then scroll  or  to display Set Time and select using **OK**.

Or

At the handset: Press **Menu**, scroll  or  to Set Time and press **OK**.

2. Scroll  to Alarm and select **OK**.




Alarm set

When the alarm is set the  icon is displayed.

The alarm does not repeat, so once the alarm goes off you will need to switch it on again each time if you want the alarm to go off every day. The time of the last alarm is saved.




When the alarm sounds

The volume starts low and increases in steps to maximum after approximately 30 seconds. Press any button to silence the alarm. If no button is pressed, the alarm will stop automatically after a minute.



3. Use  or  to choose On and select **OK**. The current setting is displayed.
4. Enter a new alarm time. As new digits are entered they will overwrite the existing time. Select **OK**. The display shows Alarm On.
5. Press  to exit.





If you have more than one handset, you can set a different alarm time on each. The alarm will only go off on the handset on which it was set. Press any button on the handset to stop the alarm ringing.

Switch off an alarm that has been set

1. *At the base:* Press  then scroll  or  to display Set Time and select using **OK**.




Or

At the handset: Press **Menu**, scroll  or  to Set Time and press **OK**.



2. Scroll  to Alarm and select **OK**. Then use  or  to Off and select **OK**. The display shows Alarm Off.
3. Press  to exit.






If you set the alarm at the base, the alarm will only go off at the base. Press any button on the base to stop the alarm ringing.

Change the time format

1. *At the base:* Press  then scroll  or  to display Set Time and select using **OK**. (This will only change the base time format).


Or

At the handset: Press **Menu**, scroll  or  to Set Time and press **OK**. (This will only change the handset time format).


2. Scroll  or  to Time Format and select **OK**.
3. Use  or  to choose 12 or 24 Hour and select **OK**. The displays shows Saved, before returning to Time Format.
4. Press  to exit.

Base ringer volume

The base has 5 ringer volume settings from 1 (low) to 5 (high) and Off.

1. *At the base:* Press . Set Base is displayed. Select using **OK**.

Or




At the handset: Press **Menu**, scroll  to Set Base and press **OK**.

IMPORTANT

You can change the base setting from the base or any registered handset.

The default ringer volume is 5.

A sample of the volume level is played.



2. The display shows Ring Volume. Select **OK**.
3. The current setting is displayed. Use  and  to change the level, then select **OK**. The display shows Saved, before returning to Ring Volume.
4. Press  to exit.





Base ringer melody

The base has 5 ringer melodies to choose from.

1. *At the base:* Press  then press **OK** to select Set Base.

Or

At the handset: Press **Menu**, scroll  or  to Set Base and press **OK**.

2. Scroll  to Ring Melody and select **OK**.
3. Scroll  or  to hear the choice of melodies available. When you have chosen one, select **OK**. The display shows Saved.
4. Press  to exit.

Set the dial mode






1. *At the base:* Press **Menu** and then press **OK** to select Set Base.

At each different setting a one second melody sample is played.


Your BT Freestyle 6300 is set to Tone dialling. This is suitable for most domestic use. It is unlikely you will need to change this setting unless you are connected to a switchboard which requires Pulse dialling.

Or

At the handset: Press , scroll  to Set Base and press **OK**.





2. Scroll  or  to Dial Mode and select **OK**.
3. Use  or  to choose Tone or Pulse, then select **OK**. Saved is displayed briefly.
4. Press  to exit.

Change the recall mode

1. *At the base:* Press . Set Base is displayed, press **OK**.

Or

At the handset: Press . Scroll  to Set Base, press **OK**.

2. Ring Volume is displayed. Scroll  to Recall Mode, press **OK**.
3. Timed Break is displayed. Scroll  or  to select between Timed Break and Earth recall and press **OK**.
4. If Timed Break is selected, you can then select between Recall 1 and Recall 2, press **OK** to confirm.
5. The display will show Saved and then return to the previous screen. Press  to exit.

IMPORTANT


If you change the system PIN, keep a record of the new number by writing in the space provided on page 63.



Change the system PIN

The system PIN is required when registering additional handsets and bases with your BT Freestyle 6300 (see page 50). It acts as a security device to prevent unauthorised changes to your phone system. The default system PIN is **0000**, so you may choose to change this to a more personal number.


1. *At the base:* Press  then press **OK** to select Set Base.

Or


At the handset: Press **Menu**, scroll  to Set Base and press **OK**.


2. Scroll  to System PIN and select **OK**.
3. The display shows Old PIN. Enter the current system PIN (default: **0000**). The digits you enter are displayed as underscores (i.e. _ _ _ _). Select **OK**.
4. The display shows New PIN. Enter your new system PIN, then select **OK**.
5. The display shows Confirm. Enter your new system PIN again, then select **OK**. The display will show System PIN Changed. If the PIN was entered incorrectly, New PIN Does Not Match is displayed and you are taken back to the beginning.
6. Press  to exit.

Restore default settings

1. *At the base:* Press  then press **OK** to select Set Base. (This will only restore the base default settings).

Or

At the handset: Press **Menu**, scroll  to Set Base and press **OK**. (This will restore both handset and base default settings).

2. Scroll  to Default and select **OK**.
3. Display shows PIN? Enter the 4 digit PIN (default 0000) and press **OK**.

The handset power switches off and the base will beep then the handset will return to the standby display.

Default Settings	
Earpiece volume	3
Handset and base ringer volume	5
Handset and base ringer melody	5
PIN code	0000
Handset name	H/S1
Handset language	English
Keybeeps	ON
Auto talk	ON
Dial mode	Tone
Pause after dialling	3 seconds

Additional handsets & bases

IMPORTANT





Before registration, make sure the handset batteries are fully charged and that you are close to the base.

You can use up to four additional handsets with your BT Freestyle 6300 – all using the same phone line. This allows you to expand your phone system without the need to install telephone extension sockets for each new handset.

Your BT Freestyle 6300 handset can also be registered with up to 4 DECT compatible bases. You can then select the base you would prefer to use.

Each additional handset is supplied with its own charger and user guide, but the following information will tell you how to register and use an additional handset with your BT Freestyle 6300.






Register a handset to a base

1. *At the handset:* Select **Menu**, scroll  or  to **Registration** and select **OK**.
2. The display shows **Register H/S**. Select **OK**.
3. The display shows **Base 1 2 3 4**. Enter the base number you want to register the handset to, using the keypad.
4. The display shows **PIN?**. Enter your system PIN (default: **0000**), then select **OK**.
5. *At the base you want to register to,* press and hold  for approximately 5 seconds until you hear a confirmation beep, then *release* . The handset display will show **Search X** (X being the number of the base selected). The base display will show **Registration**.





The handset will be automatically assigned the next available handset number, which is shown in the display.

Select a base

If your BT Freestyle 6300 handset is registered to more than one base, you can select which base to use.

1. *At the handset*, select **Menu**, scroll  to **Registration** and select **OK**.
2. Scroll  or  to **Select Base** and select **OK**. The base that your handset is currently connected to is displayed.
3. Scroll  or . All the bases that the handset is registered to are marked with a **#** symbol. Once you have chosen a base, select **OK**.
4. The display shows **Registered To Base X** (where X is the base number the handset is registered to).

De-register a handset

1. *At the handset*, select **Menu**, scroll  to **Registration** and select **OK**.
2. Scroll  to **De-register** and select **OK**.
3. Enter your system PIN (default: **0000**), then select **OK**.
4. Scroll  or  to choose a handset to de-register. Select **OK**. The display shows **Handset x de-registered**.




You cannot de-register the handset you are using. To de-register this handset, another registered handset must be used.

As you cannot de-register the handset you are using it will not include its own number when in de-registration mode.




Make an internal call handset to handset only

If you have two or more handsets registered to your base, you can make internal calls between handsets.

Two handsets can be holding an internal call while a third is on an external call.

1. Press . The display shows **Handset:** then enter the handset number you want to call (e.g. **1-5**).
2. The receiving handset displays the number of the handset calling, eg. **Handset: 1**. Press  to answer the internal call or remove the handset from the base.
3. Press  on either handset to end the call.




Make an internal call from the base to another handset

1. Press  on the base. All registered handsets will ring and display **Call**. The first handset to press  will take the call.
2. Press  on either handset or base to end the call.

Transferring calls

You can transfer an external call to another handset registered to the base.




During your call:

1. Press . Your external caller is put on hold and the display shows **Handset:** then enter the handset number you want to call (e.g. **1-5**).
2. When the receiving handset answers, press the  to transfer the call. Your handset returns to standby. If the receiving handset does not answer, press  to return to the external call.

3-Way conference call (from the handsets only)


During an external call you can invite another handset to join the conversation.

During your call:




1. Press . Your external caller is put on hold. The display shows **Handset:** then enter the handset number you want to call (e.g. **1-5**).
2. When the receiving handset answers, press *and hold* the  for approximately 2 seconds to begin the conference call.
3. Press  on either handset to leave the conference call. The second handset will remain connected to the external caller.

The  icon flashes to indicate your external caller is on hold.

Switch between external and internal calls

When the receiving handset answers, you can press  to switch between the external and internal calls, before transferring.

3-way conference call (from the base only)

1. Press  on the base. All registered handsets will ring.
2. Press  on the handset that you wish to use for the conference call.
3. Conf. is then displayed on the left hand side option button base display. Press **Conf** and the conference call will begin.
4. Press  on either handset or base to leave the conference call. The remaining handset or base will remain connected to the external caller.

Many common problems are caused by the telephone and power cables being incorrectly connected, not connected at all, or the power being turned off.

Please check that your BT Freestyle 6300 has been correctly set up, see page 6, before ringing the BT Freestyle Helpline.

Replacing the handset batteries

After time, you may find that the handset batteries are running out of charge more quickly. This is a standard sign of wear and the batteries will need replacing. New batteries should be AAA size, Rechargeable Nickel Metal Hydride (NiMH), capacity 550mAh.

1. Press down on the top of the battery compartment cover and slide it off. See illustration on page 7.
2. Remove the old batteries and replace with 2 new ones, then replace the battery compartment cover.

No display

- The batteries may be flat, dead or incorrectly inserted. Recharge or replace the batteries.

BT Freestyle Helpline 0870 605 8047

Call the dedicated BT Freestyle Helpline:

- if you are having difficulties using your BT Freestyle 6300
- if you need replacement batteries or mains power lead

Lines open 8am – 8pm,
Monday to Saturday and
10am – 3pm Sunday

New rechargeable batteries can be obtained from the BT Freestyle Helpline 0870 605 8047.

BT accepts no responsibility for damage caused to your BT Freestyle handset by using any other type of batteries.

WARNING

Do not immerse batteries in water or throw them into a fire. Dispose of old batteries responsibly; don't discard them with ordinary domestic refuse.

Cannot dial out or receive calls

- The batteries may need recharging.
- Has there been a power cut? If so, place the handset back on the base for 10 seconds and try again. If it still does not work disconnect the batteries and mains power for 10 minutes, then reconnect and try again.

You have a dial tone, but the phone will not dial out

- You may need to change the dial mode from tone to pulse, *see page 46*.
- If you are connected to a switchboard, check whether you need to dial an access code.

Handset does not ring

- The ringer volume may be switched off, *see page 40*.
- Make sure the handset is registered to the base, *see page 50*.

⚡ icon is flashing

- Is the handset registered correctly to the base?
See page 50.
- Check that the handset is within range of the base.

icon is flashing

- The batteries are low, place the handset on the base to recharge.

You hear the busy tone when you press

- Make sure the handset is in range of the base.
- Another handset may be in use.

No Caller Display information is displayed

- Have you subscribed to a Caller Display service from your network provider, *see page 34*.
- The caller may have withheld their number.

Name not shown for a calling number which is included in the directory

- An exact number match was not found in the Directory. Check that you have stored the full number, including the dialling code.

You can call BT on 151 if you suspect you may have a faulty line.

Cannot register a handset to a base

- You can register a total of 5 handsets to your BT Freestyle 6300 base and you can register your BT Freestyle 6300 handset to up to 4 bases. Check that you have not exceeded these limits.
- Check that you have entered the correct base security PIN (default: **0000**). *See page 48.*
- Check that you are at least one metre away from other electrical equipment to avoid interference when registering.

Base unit does not ring, but the lights are on

- Have you connected the telephone line correctly?
- Is the base ringer set to off? *See page 45.*
- You may have a faulty line or socket. Try using another socket or line.

Buzzing noise on my phone or on other electrical equipment nearby

- Sometimes your BT Freestyle 6300 can interfere with other electrical equipment if it is placed too close. Move it at least one metre away from such appliances.

IMPORTANT

This equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

Safety

General

- Only use the power supply included with the product. Using an unauthorised power supply will invalidate your guarantee and may damage the telephone. The item code for the mains power supply is 020376. If you have purchased a BT Freestyle 6300 multiple pack, the item code for the charger mains power supply is 021299.
- Only use approved AAA NiMH rechargeable batteries.
- Do not open the handset or base. This could expose you to high voltages or other risks. Contact the BT Freestyle Helpline on 0870 605 8047 for all repairs.
- Radio signals transmitted between the handset and base may cause interference to hearing aids.
- It is recommended that advice from a qualified medical expert be sought before using this product in the vicinity of emergency/intensive care medical equipment.
- It is recommended that if you have a pacemaker fitted you check with a medical expert before using this product.
- Your product may interfere with other electrical equipment, e.g. TV and radio sets, clock/alarms and computers if placed too close. It is recommended that you place your product at least one metre away from such appliances to minimise any risk of interference.

- Never dispose of batteries in a fire. There is a serious risk of explosion and/or the release of highly toxic chemicals.

Cleaning

Simply clean the handset and base with a damp (not wet) cloth, or an anti-static wipe. Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock.

Environmental

- Do not expose to direct sunlight.
- The product may heat up when the batteries are being recharged. This is normal. However, we recommend that you do not place the product on antique/veneered wood to avoid damage.
- Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp conditions, such as bathrooms.
- Do not expose your product to fire, explosive or other hazardous conditions.
- There is a slight chance that your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord for the duration of the storm.

Product disposal instructions

The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.



The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product as per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

BT Accessories and replacement items

For a full range of accessories and replacement items for BT products, please call 0870 240 5522 or visit www.withandwithoutwires.com.



Guarantee

Your BT Freestyle 6300 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the BT Freestyle 6300, or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is required.
- The equipment is returned to BT or its agent as instructed.
- This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.
- This guarantee does not affect your statutory rights.

Within the 12 month guarantee period:

If you experience difficulty using the product, prior to returning it, please read the 'Help' section beginning on *page 55*, or contact the BT Freestyle Helpline on 0870 605 8047, 8am–8pm, Monday to Saturday and 10am–3pm Sunday.

In the unlikely event of a defect occurring, please follow the Helpline's instructions for replacement or repair.

For your records

Date of purchase:

Place of purchase:

Serial number:

For guarantee purposes proof of purchase is required so please keep your receipt.

Enter your base PIN here:

[/ / /]

(see page 48 for more information)

Outside of the 12 month guarantee period:

If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network. We recommend that you contact BT's approved repair agent, Helpdesk Solutions on 08702 405029 or a local qualified repairer.

Returning your phone

If the Helpline is unable to remedy your problem they will ask you to return the product. Where possible, pack the product in its original packaging. Please remember to include all parts, including the line cords, power supply units and the original batteries. (Please note that we cannot take responsibility for goods damaged in transit.) Please obtain and keep proof of posting from the Post Office, or the carrier you use.

Technical information

How many telephones can you have?

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your BT Freestyle 6300 has a REN of 1. A total REN of 4 is allowed. If the total REN of 4 is exceeded, the telephones may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 4.

Any additional handsets and chargers that you may register have a REN of 0.

- Only use the approved base mains power adaptor supplied, item code: 020376. If you have purchased a BT Freestyle 6300 multiple pack the charger mains power adaptor is item code 021299.
- Only use approved batteries AAA NiMH rechargeable batteries.

Connecting to a switchboard

This product is intended for use within the UK for connection to Public Telephone Network and compatible switchboards, which support tone and pulse dialling and Timed Break Recall. If in doubt please consult your network service provider.

Access code and entering a pause


With some switchboards, after dialling the access code you may have to wait for a moment while the switchboard picks up an outside line so you will need to enter a pause in the dialling sequence.

The stored number may appear like this:

9	P	08706058047
Access code	Pause	Number

1. When storing a number in the directory, at the point you want to insert a pause, press and *hold down*  on the handset or if using the base, press and hold the .

Recall

The  (Recall) button is used when connected to certain switchboards (PBXs) and with some BT Calling Features, or equivalent services available via your Network Provider.

R&TTE

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

Declaration of Conformance

Hereby, Suncorp Technologies declares that this BT Freestyle 6300 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The Declaration of Conformance for the BT Freestyle 6300 is published on the website:

<http://www.suncorptech.com/bt>

Visit us at www.bt.com



Offices worldwide

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2006.
Registered Office: 81 Newgate Street, London EC1A 7AJ.
Registered in England No. 1800000.
BT Freestyle 6300 (02/06) Issue 3 Ed 2
Designed and produced by The Art & Design Partnership Ltd.
Printed in China

