

YOU MUST
SUBSCRIBE TO YOUR
NETWORK PROVIDER'S
SERVICES BEFORE THESE FEATURES WILL
WORK. TO USE SMS YOU MUST SUBSCRIBE
TO A *CALLER DISPLAY SERVICE AND YOU MUST
NOT WITHHOLD YOUR NUMBER.
NOTE: SOME OTHER NETWORK PROVIDER LINES MAY
NOT BE COMPATIBLE WITH THIS SMS SERVICE.
*A QUARTERLY FEE IS PAYABLE



This equipment is not designed for making emergency telephone calls when the power fails.
Alternative arrangements should be made for access to emergency services.

This product is intended for connection to analogue public switched telephone networks
and private switchboards in the United Kingdom.

BT Synergy 3200 SMS

Digital Cordless SMS Telephone

User Guide

**Please open this page for an 'at a glance'
guide to your Synergy 3200 SMS**

At a glance

Handset

Liquid Crystal Display

Display shows you incoming caller's details, the name and number you have dialled and status of the handset.

Also used to display SMS text messages.

Secrecy/Power button

In standby, press and hold to switch off your handset.

During a call press to stop your caller hearing you, so you can talk to someone close by.

Also used as a delete, edit and exit button.

Talk button

Use to make, receive and end calls.

Keypad

Handsfree button

Lets you make and receive calls using the loudspeaker.

Up/Down & volume buttons

Use to adjust the handset earpiece speech volume and handset and base ringer volume.

Also lets you access and scroll through the directory, redial and calls list, and enter a pause when storing numbers in the directory.

Menu button

Lets you open the menu and confirm menu selections.

SMS button

Press to enter the SMS menu or if you have new SMS messages press this button to access messages directly.

Conf/# button


Lets you select FasTxT (predictive text).

Also enables you to hold a 3-way conversation.

Recall/Int button


Lets you make internal calls.

Also used when connected to a switchboard/PBX and with some BT Select Services.

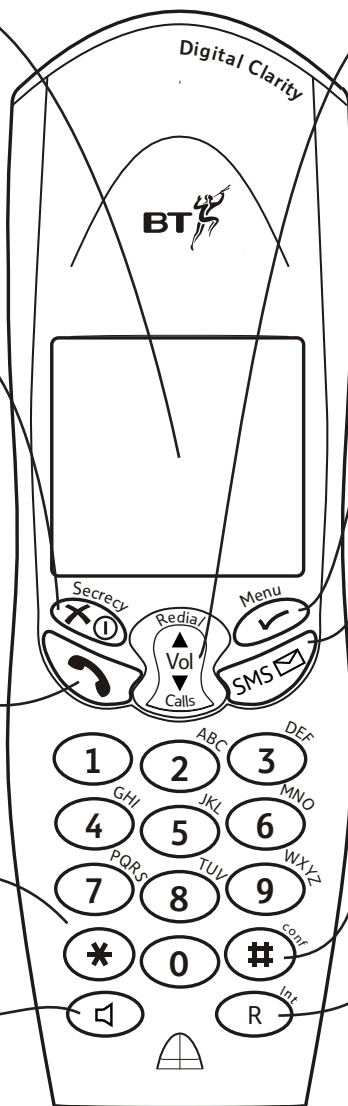

Base

Charging light
ON – Handset charging.

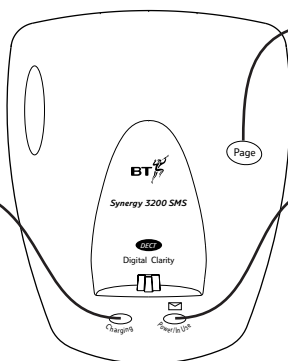


Page button
Lets you page the handset.
Also used to register handsets.

Power/In use light
ON – Standby.
Flashes – In registration mode.
Flashes – During a call.
Flashes – When the phone rings.
Flashes – To indicate new SMS messages.

Explanation of the display icons

Standby display

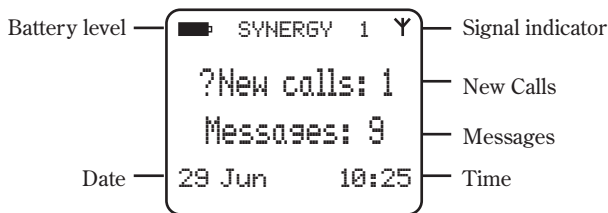

Icon	Meaning
	Battery exhausted
	Battery weak
	Battery half-full
	Battery full
	Handset off-hook
EXT	External call
INT	Internal call
HANDSET+?	New number in Calls list
	Keypad locked
	Signal strength
	Signal strength icon is permanently displayed when the handset is registered to the base.
	Flashes when handset is not registered to any base.
	Flashes when you have new SMS messages.


Quick Guide Information for the handset settings.

Function	Key combination
Answer/End a call	
Make a call	
Redial a number	scroll through
Store a number in the memory	to Ed. Phonebook enter name enter number to continue or to end.
Dial a number in the memory	to Phonebook scroll to entry if necessary
Adjust the earpiece/handsfree volume	During the call or until the required volume is reached.
Secrecy on/off	During the call to switch on, press again to switch off.
Transfer call to another handset	enter handset number
Three way conversation	Dial external phone no. enter handset number or to return to external caller press
Access Redial and Calls list	for 5 last numbers called CALLS for details of 20 last calls received.
Read New SMS message	When is flashing to open first message.
*Read stored SMS message	select Inbox/Outbox to message you want to read.
*Send SMS message	select New message type message phone no.
Set handset ringer volume	to Handset Menu to Ring Volume to set level
Set base ringer volume	to Setup to Base Volume to set level


Note

**If you have no unread messages you can press the SMS button as a short cut to the SMS functionality.*


Menu Structure

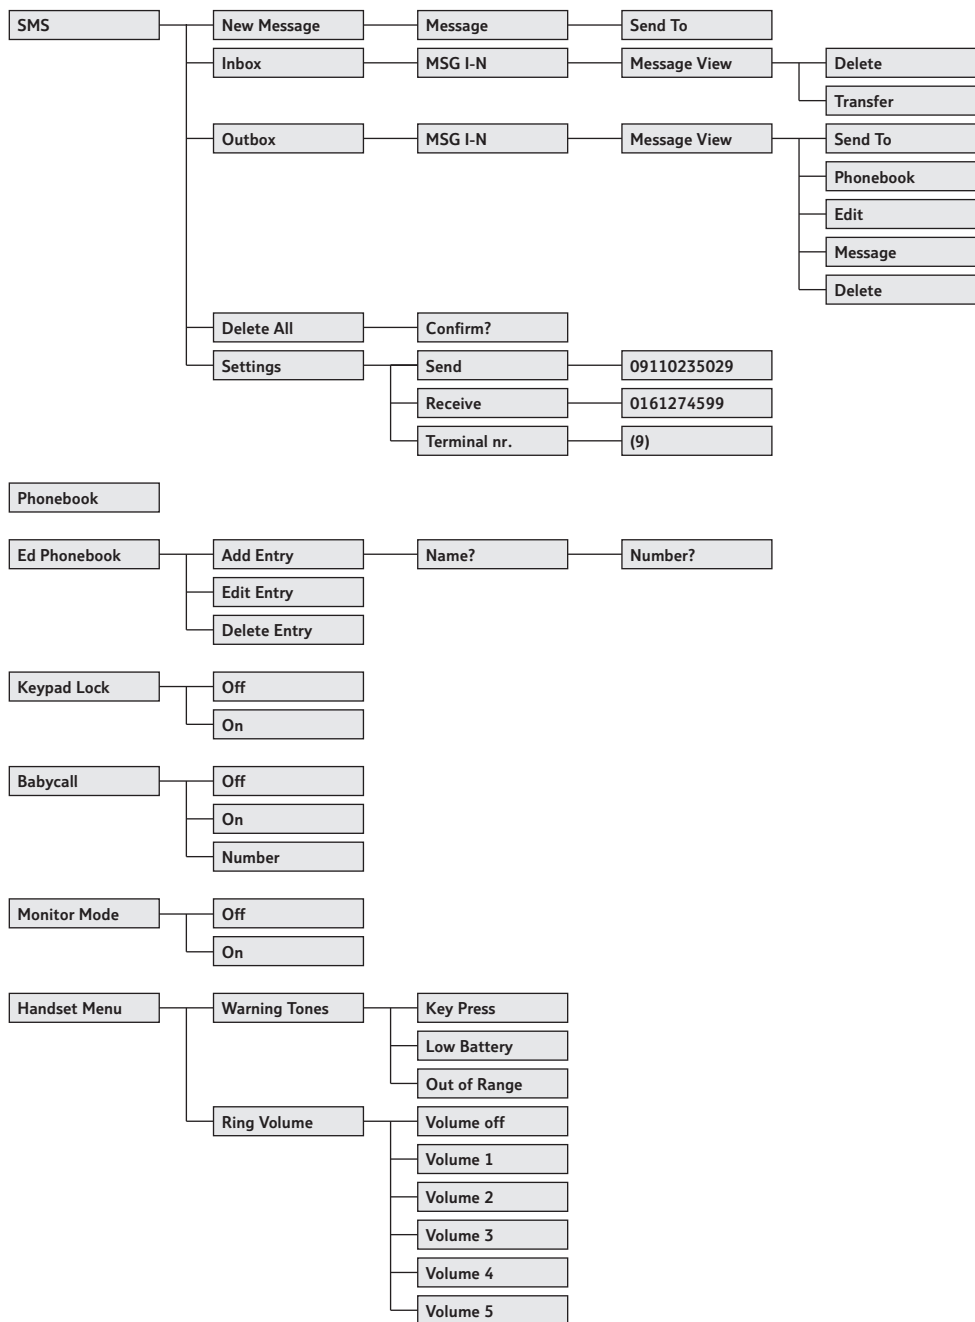

Menu Structure

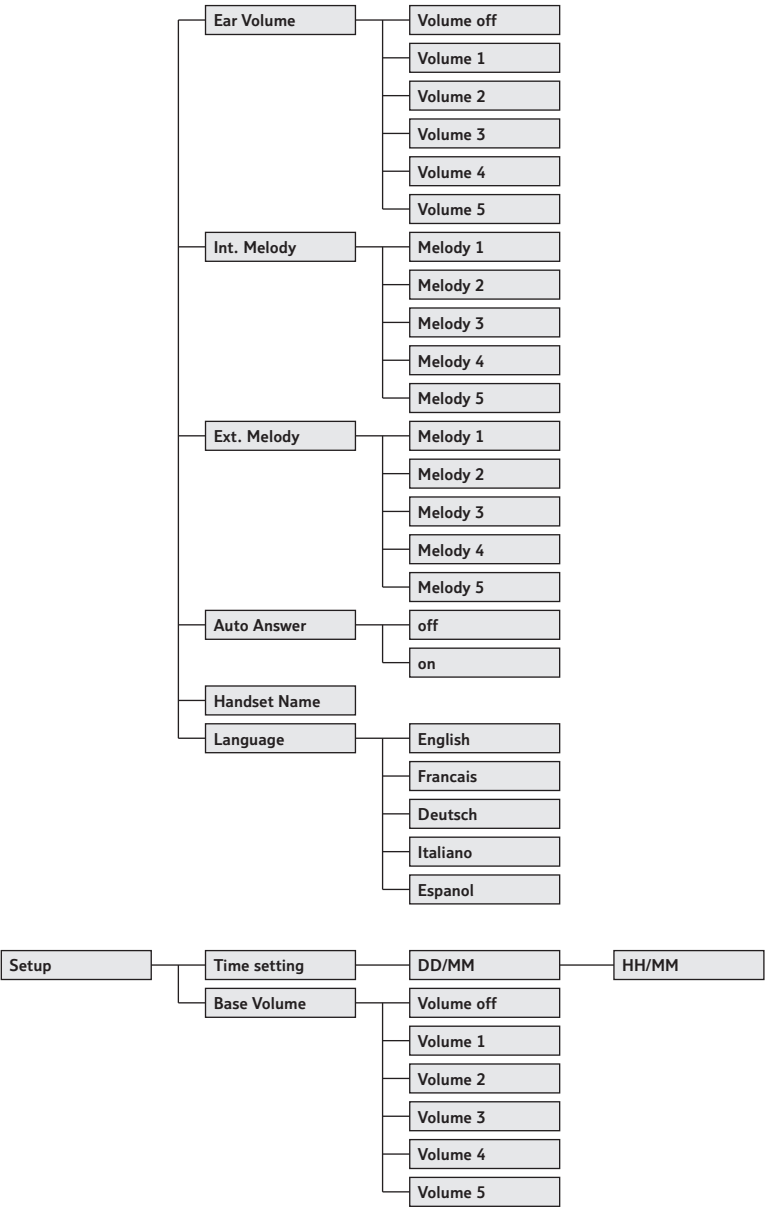

Menu Structure

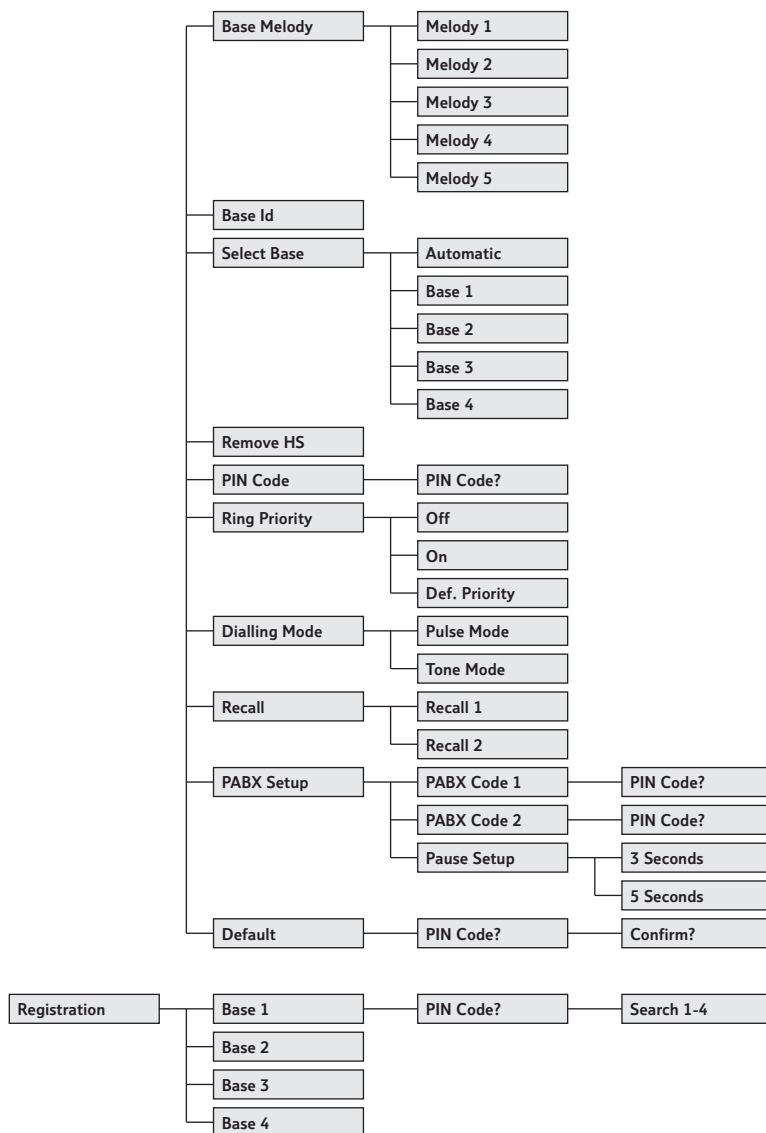

Important. If you make a mistake you can return to the previous menu heading by pressing the ✕ button. If you press and hold the ✕ button at any time you will return to the idle screen. After 30 seconds if no buttons are pressed the handset will automatically return to the idle screen.

In this guide

Note

For instructions on SMS text messaging, please see the separate Using SMS user guide.

At a glance

Handset	1
Base station	2
Display icons	2
Quick Guide	3
Menu structure	4

Introduction

Unpacking your Synergy 3200 SMS	9
For your records	9
Safety information	10

Setting up

Plan the location	11
-------------------	----

Using the telephone

Making and receiving calls	14
Call timer	14
Handsfree	15
Redial	15
Secrecy	16
Name and number	
Phonebook	16
Paging handsets	19
Baby call	19
Room monitor mode	20

Handset settings

Base settings

Caller Display and Call Waiting

Caller Display	28
Calls list	29
Call Waiting	30

Using additional handsets and bases

Internal calls	34
Transferring calls	34

Help

General information

Guarantee	40
Technical information	41
Switchboard compatibility	41
Switchboard external line access code	41
Recall	41

Index

Note

In this user guide, we've included helpful tips and useful notes. They are shown in a white box like this.

Introduction

Your Synergy 3200 SMS has been designed for ease of use and made to the high standards set by BT.

Please read the instructions carefully before use and keep this user guide for future reference.

DECT


By purchasing the Synergy 3200 SMS you now own a product which combines the advantages of cordless operation with the performance of a high quality corded telephone. It complies with the Digitally Enhanced Cordless Telecommunications (DECT) standard and offers unparalleled quality and features.

You can use up to 5 handsets with your Synergy 3200 base station without the need for additional wiring.

This user guide applies to both single and multiple handset systems. The internal call functions described in this guide apply only to Synergy 3200 base stations with more than one handset connected.

Important


If you wear a hearing aid, please note that the Synergy 3200 works by sending radio signals between the base station and the handset. These signals may interfere with some hearing aids, causing a humming noise.

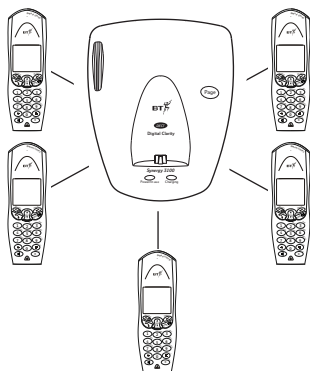

Unpacking your Synergy 3200 SMS

If anything is missing, please contact your place of purchase immediately.


One Synergy 3200 SMS
base station



One Synergy 3200 SMS
handset



2 x NiMH AAA
re-chargeable batteries



One power supply for
base station



One telephone line cord



One belt clip



For your records

Date of purchase:

Place of purchase:

Serial number:

For guarantee purposes proof of purchase is required so please keep your receipt.

Enter your Base station PIN here:

--	--	--	--

See *page 26* for more information.

Safety information

General

Only use the power supply included with the product. Using an unauthorised power supply will invalidate your guarantee and may damage the telephone. The item code for the mains power supply is 872260.

Do not open the handset or base station. This could expose you to high voltages or other risks. Contact the Synergy Helpline **08706 058 047** for all repairs.

Radio signals transmitted between the handset and base may cause interference to hearing aids.

It is recommended that advice from a qualified medical expert be sought before using this product in the vicinity of emergency/intensive care medical equipment.

It is recommended that if you have a pacemaker fitted you check with a medical expert before using this product.

Your product may interfere with other electrical equipment, e.g. TV and radio sets, clock/alarms and computers if placed too close. It is recommended that you place your product at least one metre away from such appliances to minimise any risk of interference.

Never dispose of batteries in a fire. There is a serious risk of explosion and/or the release of highly toxic chemicals.

Cleaning

Simply clean the handset and base station with a damp (not wet) cloth, or an anti-static wipe. Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock.

Environmental

Do not expose to direct sunlight.

The product may heat up when the battery pack is being recharged. This is normal. However, we recommend that you do not place the product on antique/veneered wood to avoid damage.

Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.

Do not submerge any part of your product in water and do not use it in damp conditions, such as bathrooms.

Do not expose your product to fire, explosive or other hazardous conditions.

There is a slight chance that your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord for the duration of the storm.

Setting up

Follow these steps to set up your Synergy 3200 SMS ready for use

Plan the location


Position your Synergy 3200 SMS within 2 metres of a power socket and phone socket otherwise extension cables will be required.

Make sure it is at least 1 metre away from other electrical products to avoid interference.

Do not place your Synergy 3200 SMS product in the bathroom or other humid areas.

1 Connect the power supply to the base

Plug the power adaptor into the mains power socket and switch on. The green Power/In Use light comes on.

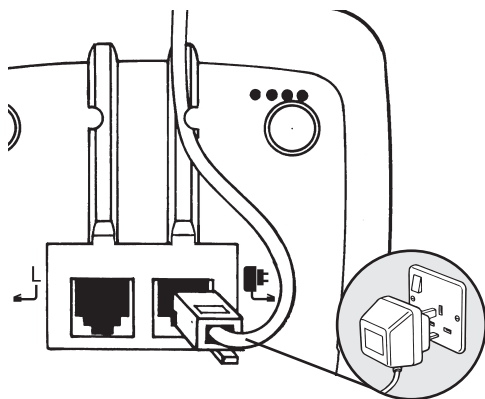


Note

The base station must be plugged into the mains power socket at all times.

2 Install the batteries

2 x NiMH AAA rechargeable batteries are supplied.

Install the batteries as shown.

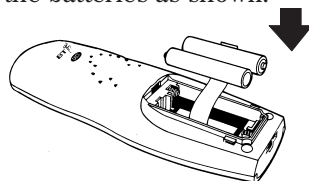

Slide the battery compartment cover into place (the battery cover may be found in the packaging with the batteries).

3 Charge the handset batteries for at least 16 hours

Before you use your Synergy 3200 SMS for the first time, it is important to have the handset batteries fully charged. The batteries need to charge continuously for at least 16 hours to reach full charge.

Place the handset on the base. The red charging light will come on. The handset comes pre-registered to the base station as SYNERGY 1. This is shown on the display. The Y icon is also shown on the display and the battery icon.

Once the handset is fully charged, the display shows a full battery symbol.

BATTERY LEVELS



WEAK

HALF-FULL

FULL

Battery low warning

If the handset battery symbol is empty and flashing, and you hear a warning beep every 10 seconds, you will need to recharge your handset before you can use it.

Note

The Y symbol on your handset display indicates when you are in range of the base station. If the symbol flashes and you hear a warning beep, you are out of range and will need to move closer to the base station.

The handset has a range of 300 metres outdoors and up to 50 metres indoors. The stated range of this product is measured in open field conditions. Walls, ceilings and metal structures will reduce the maximum range.

Battery performance

Under no circumstances should non-rechargeable batteries be used. Only use the approved batteries, type: rechargeable Nickel Metal Hydride (NiMH); Size AAA; Capacity 550 mAh; 1.2V. Using unapproved batteries will invalidate your guarantee and may damage the telephone.

To keep your batteries in the best condition, leave the handset off the base station for a few hours at a time (after the initial 16 hour charge).

Fully discharging the batteries at least once a week will help them last as long as possible.


However, charge capacity of rechargeable batteries will reduce with time as they wear out, so reducing talk/standby time of the handset. Eventually they will need to be replaced. New batteries can be obtained from the BT Synergy Helpline on 08706 058 047.

After charging your handset for the first time, subsequent charging time for the battery is approximately 6-8 hours a day. Batteries and handset may become warm during charging. This is normal.

Under ideal condition the handset batteries should give about 14 hours talk time or 350 hours standby on a single charge. (This does not mean you can unplug the base station or leave it for this length of time without charge.)

Please note however, that new NiMH batteries do not reach full capacity until they have been in normal use for several days.


4 Connect the telephone line cord to the base station

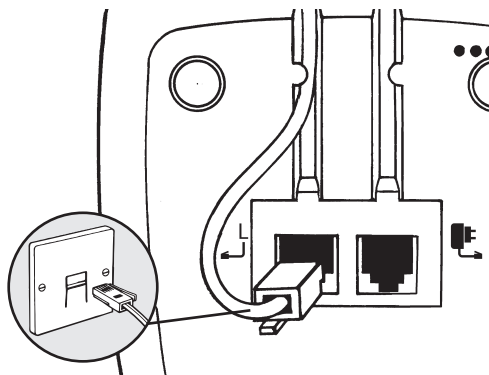

Note


It is recommended that you do not connect the telephone line cord to the phone socket until your handset is fully charged. This will prevent the risk of the batteries discharging during a conversation which could cause you to lose a call.

5 Connect the telephone line cord

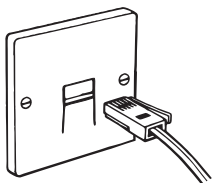

6 Attach the belt clip (optional)

Fit the belt clip onto the back of the handset if required.

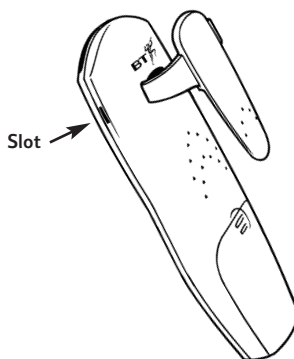

Customer Helpline

*If you have any difficulties setting up your Synergy 3200 SMS please call the Helpline on **08706 058 047**.*

Your Synergy 3200 SMS is now ready for use.

Using the telephone

To switch the handset on and off



Press *and hold* the **POWER** button to switch the handset off.




To switch the handset on, press *and hold* the **POWER** button again.

Call timer

Your handset will automatically time the duration of all external calls.

The handset display shows the call duration both during your call and for a few seconds after it is complete.

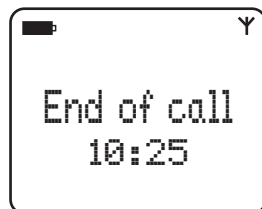

Making and receiving calls

To make an external call



Press the **TALK** button.



Enter the number you want.

Or

Preparatory dialling



Enter the number to be dialled.

The number is shown in the display.



If you make a mistake, press the **X** button to remove the incorrect digit.



When you have entered the number correctly, press the **TALK** button to dial the number.

To end a call



Press the **TALK** button.

Or

Place the handset back on the base.

To receive a call

When the phone rings the display will show **External Call** and the EXT symbol will flash.

If you have subscribed to a Caller Display Service, the number of the caller (and name if stored in the phonebook) will be displayed.



Press the **TALK** button to answer the call.

Or

If the handset is on the base, simply lift it up and speak.

To adjust the earpiece/handsfree volume

During a call:

You can adjust the earpiece/loudspeaker volume. There are 5 levels to choose from.



Press the **UP** or **DOWN** button until you reach the required level.

In standby mode:

Press the **Menu** button.



Press the **DOWN** button until you reach Handset Menu.



Press the **Menu** button.



Press the **DOWN** button until you reach Ear Vol.



Press the **Menu** button.

Press the **DOWN** button to select the volume required 1-5.

Handsfree

Handsfree allows you to talk to your caller without holding the handset. It also enables other people in the room to listen to your conversation.

To use handsfree

To make a call, answer a call or during a call you can switch to handsfree mode.



Press the **HANDSFREE** button.

Display shows the icon to indicate handsfree is active.



To switch handsfree off, press the **HANDSFREE** button again.



To end the call, press the **TALK** button.

Redial

You can redial up to 5 of the last numbers called. They are stored in the redial list. If you have stored a name to go with a number in the phonebook, the name will be displayed instead. See 'Name and Number Phonebook', page 16.

To redial the last number called



Press the **TALK** button.



Press the **UP** button. The last number is redialled.

(Please note that if you press the **UP** button again it will adjust the earpiece volume.)

To dial a number from the redial list



Press the **REDIAL** button to enter the redial list.



Continue pressing the **UP** button to view the next number. The most recently dialled numbers are shown first.



Press the **TALK** button when the number (or name) you want to call is displayed. The number is dialled automatically.

Secrecy

When on a call, you can talk to someone in the same room without your caller hearing.

To switch secrecy on / off



During a call, press the **X** button. The display will show **Secrecy on**. Your caller cannot hear you.



Press the **X** button again to resume your call.

Name and number Phonebook

You can store up to 40 of your most frequently used names and numbers in the Phonebook. Names can be up to 8 characters long and numbers up to 20 digits.

To store a name and number in the Phonebook



Press the **✓** button.



Press the **DOWN** button to reach **Ed. Phonebook**.



Press the **✓** button.



Press the **✓** button to select **Add Entry**.

The display shows **NAME**.



Enter the name using the letters on the keypad. Names can be no longer than 8 characters.

Entering names



Use the keypad letters to enter names, e.g. if you wish to store the name **TOM**:



To enter the letter T, press the **8** button once.



To enter O, press the **6** button *three times* and wait for the cursor to move across.



To enter M, press the **6** button once.



If you enter a character or digit incorrectly, press the **X** button to delete it.



Press the **✓** button to confirm. The display shows **NUMBER**.



Enter the telephone number you want to store.



Press the **✓** button to confirm. Display shows **Stored**. You will hear a confirmation beep.



Press the **✓** button to continue storing entries in the phonebook.

Or



Press and hold the **X** button to return to the standby screen.

Note

*Press the **1** button once to insert a space, twice to insert the number 1, three times to insert an underscore and four times to insert a hyphen.*

The character options available are shown in small font at the top of the display. Please refer to the character map on page 2 of the Using SMS user guide.

To enter a pause in a stored number

You may want to enter a pause when storing international numbers, charge card numbers or if you connect your telephone to a switchboard. (For more information on switchboard use, *see page 41*.)



When storing the number, press *and hold* the **UP** button until a **P** is displayed at the point where you want to enter the pause.

You may enter as many pauses as required.

To dial a number from the Phonebook



Press the **✓** button.



Press the **DOWN** button to reach Phonebook.



Press the **✓** button to enter the Phonebook.



Use the **UP** or **DOWN** button to find the entry you want.

Or



To search alphabetically, press the relevant keypad number, e.g. to find TOM, press the **8** button and scroll through the entries under T.



Press the **TALK** button to dial the number (or name) displayed. The number is dialled automatically.

Note

You can scroll in either direction to search through the list.

To edit Phonebook names and numbers



Press the **✓** button.



Press the **DOWN** button to reach Ed. Phonebook.



Press **✓** to enter the Phonebook.



Press the **DOWN** button to reach Edit Entry.



Press the **✓** button. Display shows Edit Entry and the list of stored names and numbers.



Press the **UP** or **DOWN** button to scroll to the entry you want to change.



Press the **✓** button. The name will be displayed.



Use the **X** button to delete unwanted letters. You can enter new letter as shown in 'Entering names' on page 16.



Press the **✓** button to store the new name. You will hear a confirmation beep.



The number will be displayed.

Edit the entry using the **X** button to delete and by entering new numbers.



Press the **✓** button to store the new number. You will hear a confirmation beep.



Press and hold the **X** button to return to standby.

Note

*You can also edit an entry using the **UP** or **DOWN** buttons.*

To delete a Phonebook name and number



Press the **✓** button.



Press the **DOWN** button to reach Ed. Phonebook.



Press **✓** to enter the Phonebook.



Press the **DOWN** button to reach Delete Entry.



Press the **✓** button. Display shows Delete Entry and the list of stored names and numbers.



Press the **UP** or **DOWN** button to scroll to the entry you want to delete.



When you have found the name to delete, press the **✓** button.

The number will be displayed along with **Delete Entry?**



Press the **✓** button. Display shows **Deleted** and you hear a confirmation beep.



Press and hold the **X** button to return to standby.

Paging handsets

You can alert handset users that they are wanted, or locate a missing handset. (Paging calls cannot be answered by a handset.)

To page a handset from the base



Press the **PAGE** button on the base.

The handset(s) will ring.



To end paging, press the **PAGE** button again.

Or



Press any button on the handset.

The display will show **Paging**.

Baby call

The baby call feature allows you to enter a chosen telephone number which can then be used as an emergency quick dial number. When baby call is switched on you can press any button on the handset (except the **✓** button) and your baby call telephone number will be automatically dialled.

This could be used for example by a baby sitter.

To set your baby call telephone number



Press the **✓** button.



Press the **DOWN** button to reach **Babycall**.



Press the **✓** button.



Press the **DOWN** button to scroll to **Number**.



Press the **✓** button.



Enter your chosen telephone number.



Press the **✓** button to confirm.

You will hear a confirmation beep.



Press and hold the **X** button to return to standby.

To switch baby call on



Press the **✓** button.



Press the **DOWN** button to reach **Babycall**.



Press the **✓** button.



Press the **DOWN** button to scroll to **On**.



Press the **✓** button to confirm.

You will hear a confirmation beep.

If you have switched Baby call on, the display will show **Babycall** until you switch it off.

To switch baby call off



Press the **✓** button.

Your handset will take you straight to **Babycall** in the menu.



Press the **✓** button.



Press the **UP** button to scroll to **Off**.



Press the **✓** button.

You will hear a confirmation beep.

Room monitor mode

If you have at least two handsets registered to your Synergy 3200 SMS base station you can leave one handset in a room and monitor the noise in the room by making an internal call to the handset.

This could be used for example in a child's bedroom.

To switch the room monitor on or off



Press the **✓** button.



Press the **DOWN** button to reach **Monitor mode**.



Press the **✓** button.



Use the **UP** or **DOWN** button to select either **Off** or **On**.



Press the **✓** button to confirm.

You will hear a confirmation beep.

If you have chosen **On**, the display will show **Monitor mode** until you switch it off.

To use the room monitor

Enter the handset number of the handset you want to monitor, i.e. the handset you have left in the room to be monitored.



Press *and hold* the **INT** button.



To exit monitor mode, press the **TALK** button.

Handset settings

Time and date

Providing you have subscribed to your network's Caller Display service, the date and time is set automatically when your Synergy 3200 SMS receives its first call. When new handsets are registered to the base, they will also receive the current date and time.

If the base station power is cut, the date and time is saved on the handset.


The date and time can also be adjusted manually.

To set the time and date



Press the  button to enter the menu.



Use the **DOWN** button to scroll to **Setup** and press the .




Press the  button to select **Time Settings**. The display shows the date setting.



Enter the day and month, e.g. **17 June** = 17 Jun.



Press the  button to confirm and the display shows the time setting.



Enter the time using the 24 hour clock, e.g. **4.30pm** = 16.30.



Press the  button to confirm.


To adjust the handset ringer volume

There are 5 levels to choose from (**1-5**), or you can turn the ringer off altogether.



Press the  button to enter the menu.



Use the **DOWN** to scroll to **Handset Menu** and press the .



Press the **DOWN** button to scroll to **Ring Vol** and press the .



You will hear the current setting and it will be shown on the display.



Use the **UP** or **DOWN** button to select the required volume (Volume 1-5 or Volume OFF). You will hear a sample ring.



Press the  button to confirm.


Note

*When the phone is ringing you can adjust the ring volume by pressing the **UP** or **DOWN** button.*

To set the external or internal ringer melody

There are 5 melodies to choose from and you have the option to choose a different melody for external and internal calls.

Press the  button to enter the menu.


Use the **DOWN** to scroll to **Handset Menu** and press the  button.

Press the **DOWN** button to scroll to **Int. Melody** or **Ext. Melody**.

Press the  button.

You will hear the current melody setting and it will be shown on the display.

Use the **UP** or **DOWN** button to select the required melody. You will hear a sample melody.


Press the  button to confirm the new melody. You will hear a confirmation tone.

You can now either select a different melody or press and hold the **X** button to return to standby.

To switch the keypad lock on

Locking the keypad prevents numbers from being dialled accidentally while carrying the handset around.

Press the  button to enter the menu.

Use the **DOWN** button to scroll to **Keypad Lock** and press the  button.

Press the **DOWN** button to select **On**.

Press the  button to confirm.

To switch the keypad lock off

Press the  button to enter the menu.

Press the  button.

Press the **UP** button to select **Off**.

Press the  button to confirm.

To switch the keypad and warning beeps on and off



Press the **✓** button to enter the menu.



Use the **DOWN** button to scroll to Handset Menu and press the **✓** button.



Display will show Warning Tones, press the **✓** button.



Use the **UP** or **DOWN** button to select the tones you want – Key Press, Low Battery or Out of Range.



Press the **✓** button to confirm.



Use the **UP** or **DOWN** button to select either On or Off.



Press the **✓** button. You will hear a confirmation beep.

Important

*Press and hold the **X** button at any time to exit the menu and return to the standby screen.*

To switch auto-talk on/off

When the handset is on the base or the charging unit you can answer the call without pressing the **TALK** button.

The handset is defaulted to auto-talk ON.



Press the **✓** button to enter the menu.



Use the **DOWN** button to scroll to Handset Menu and press the **✓** button.



Press the **DOWN** button to scroll to Auto Answer.



Press the **✓** button.



Use the **UP** or **DOWN** button to turn auto-answer On or Off.



Press the **✓** button to confirm.

To name a handset

The handset name is pre-set to SYNERGY, however you can personalise each handset by giving it a name. The name can be up to a maximum of 8 characters.



Press the button to enter the menu.



Use the **DOWN** button to scroll to Handset Menu and press the button.



Press the **DOWN** button to scroll to Handset Name and press the button.



Press the **X** button to delete the name already set.



Enter the name you want using the keypad. Correct any mistakes by pressing the **X** button, then press the button to confirm.



You will hear a confirmation beep.

To set the handset language

If you wish you can change the language used on the handset display. You can choose from English, French, German, Italian or Spanish.



Press the button to enter the menu.



Use the **DOWN** button to scroll to Handset Menu and press the button.



Press the **DOWN** button to scroll to Language and press the button.



Use the **UP** or **DOWN** button to scroll through the languages: English, Francais, Deutsch, Italiano or Espanol.



Press the button to confirm.

You will hear a confirmation beep.

Base settings


To adjust the base ringer volume

There are 5 levels to choose from (1-5), or you can turn the ringer off altogether.



Press the  button to enter the menu.



Use the **DOWN** button to scroll to **Setup** and press the  button.



Press the **DOWN** button to scroll to **Base Volume** and press the  button.



You will hear the current setting and it will be shown on the display.




Use the **UP** or **DOWN** button to select the required volume (Volume 1-5 or Volume OFF). You will hear a sample ring.



Press the  button to confirm.




Press *and hold* the  button to return to standby.

To adjust the base ringer melody



Press the  button to enter the menu.



Use the **DOWN** button to scroll to **Setup** and press the  button.



Press the **DOWN** button to scroll to **Base Melody** and press the  button.




Use the **UP** or **DOWN** button to select the required melody (Melody 1-5). You will hear a sample melody.



Press the  button to confirm.





Press *and hold* the  button to return to standby.

To change the base station PIN code

If you change the base station PIN, keep a record of the new number by writing in the space provided on *page 9*. You will need to use your base station PIN for registering handsets and for some other optional settings.


Press the  button to enter the menu.

Use the **DOWN** button to scroll to **Setup** and press the  button.

Use the **DOWN** button to scroll to **PIN Code** and press the  button.

Display will show **PIN Code?**

Enter your 4-digit PIN (original setting 0000).


Press the  button. Display will show **NEW Code?**

Enter your **NEW** 4-digit PIN.

Press the  button. Display will show **Confirm Code**.

Enter your **NEW** 4-digit PIN again.

Press the  button. You will hear a confirmation beep.


Press *and hold* the  button to return to standby.


To select a base station

If a handset is registered to more than one base station you can select which base your handset will use.

For more information on registering your handset to another base, *see page 31*.

Press the  button to enter the menu.

Use the **DOWN** button to scroll to **Setup** and press the  button.

Use the **DOWN** button to scroll to **Select Base** and press the  button.

Use the **UP** or **DOWN** button to select the base you want (BASE 1-4).

Press the  button. You will hear a confirmation beep.

To default/reset the handset and base to their original settings

Please note that if you reset your Synergy 3200 SMS the Phonebook, Redial and Calls list will be deleted.



Press the button to enter the menu.



Use the **DOWN** button to scroll to **Setup** and press the button.



Use the **DOWN** button to scroll to **Default** and press the button.



The display will show **PIN?**



Enter the base PIN (original setting 0000)



Press the button. You will hear a confirmation tone at the base and handset. The handset display will flash **BASE 1** and then **SYNERGY 1**.

Your Synergy 3200 SMS is now reset to the factory settings.

The default settings are:

Earpiece volume	3
Handset & Base ringer volume	3
Internal and External Handset and Base melody	1
PIN code	0000
Handset name	SYNERGY
Handset language	English
Button beeps	ON
Battery low indicator beeps	ON
Out of range warning beeps	ON
Auto answer	ON
Dialling mode	Tone
Pause after picking up line/dial-out code	3 seconds
Phonebook	Empty
Redial list	Empty
Calls list	Empty

Caller Display and Call Waiting

Important

To use Caller Display and Call Waiting you must first subscribe to the service from your network provider. A quarterly fee is payable.

For more information on BT's Select Services, call BT free on 0800 800 150.

Caller Display

If you subscribe to a Caller Display service you can see who is calling you on your handset display, as well as the time and date of their call.

If you have stored a name to go with the number in your handset phonebook, the name will be displayed as well.

Please ensure that you have stored the full telephone number, including the area code, otherwise the name will not match the number stored in the phonebook.

Whether you take a call or not, the caller's details are stored in the Calls list. You can display, scroll through and dial numbers on the list and copy them into the phonebook.

Caller information not available

With some incoming calls the telephone number of the caller is not available and cannot therefore be displayed.

In this case, your Synergy 3200 SMS provides you with some explanatory information about the type of call received. This will be one of the following.

UNAVAILA

The number is unavailable.

WITHHELD

The caller has withheld their number.

RINGBACK

Ringback call.

OPERATOR

The call has been made via the operator.

PAYPHONE

The caller is ringing from a payphone.

INTERNAT

International call.

Calls list

The Calls list contains the telephone numbers of your last 20 callers.

New calls in the Calls list are indicated by the flashing  ? symbol.

If a call is received when the Calls list is full then the oldest entry will be deleted automatically.

To enter the Calls list




Press the **DOWN** button to enter the Calls list. The  symbol is displayed.



Use the **UP** or **DOWN** button to scroll backwards and forwards through the Calls list.



If the name of your caller has been stored in the phonebook, this will be displayed. Press the  button and the number will be displayed.



Press the  button to go back to the Calls list.

To call back a number from the Calls list



Press the **DOWN** button to enter the Calls list.



Use the **UP** or **DOWN** button to scroll to the number you want to call.



When the name and/or number is displayed, press the **TALK** button. The number will be dialled automatically.

To store a number from the Calls list into the Phonebook




Press the **DOWN** button to enter the Calls list.



Use the **UP** or **DOWN** button to scroll to the number.




When the number you want to store is displayed, press the  button.

The display shows **Add Entry** and **Delete**.



Press the **UP** or **DOWN** button to select **Add Entry**.




Press the  button. The number is entered into the phonebook. The display shows **Add Name**.



If required, use the keypad buttons to enter the name as shown under '*Entering Names*', *page 16*.



Press the  button to confirm. The name and number are now stored in the Phonebook.

IMPORTANT

Once stored in the Phone book, the entry will be deleted from the Calls list.

To delete a number from the Calls list



Press the **DOWN** button to enter the Calls list.



Use the **UP** or **DOWN** button to scroll to the number you want to delete.



When the number you want to delete is displayed, press the **✓** button.

The display shows **Add Entry** and **Delete**.



Press the **UP** or **DOWN** button to select **Delete Entry** and press the **✓** button.



The number is deleted from the Calls list.

Call Waiting

Providing you have subscribed to your network provider's Call Waiting Service, you will hear a soft beep every 5 seconds if an incoming call arrives while you are already on the phone. This beep is not audible to the person you are speaking to. The second caller's number (and name if already stored in the Phonebook) will appear on the handset display.

Instead of the engaged tone, the second caller will hear an announcement to hold on as you are aware that there is a second call.

To use Call Waiting



You can answer the second call without disconnecting your first caller, by pressing the **R** button. The first caller is put on hold.



When you have spoken to your second caller, you can return to the first caller by pressing the **R** button again. In this way you can switch back and forth between the two calls without disconnecting either.



If you want to disconnect the first caller, press the **TALK** button after speaking to the first caller. The handset will then ring.




Press the **TALK** button again to connect to your second caller.

The second caller will only be charged for their call from the moment you answer and not while they are waiting for your initial contact.

Using additional handsets and bases

Up to 5 handsets can be registered and operated from any one Synergy 3200 SMS base. This allows you to make internal calls between two handsets while a third is making an external call.

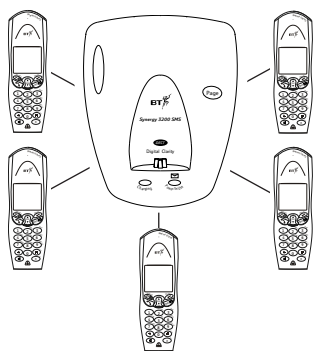

Each handset can be registered on up to 4 bases.

Each additional handset you purchase must be registered with the base.

Your handset supplied is pre-registered as Synergy 1 to its base (**Base 1**).

Note

Remember to charge the batteries of new handsets for at least 16 hours before use.

If the display shows Not Sub and the Y symbol is flashing, your handset is not yet registered with the base.

To register a handset to the base

At the base:

Page

Press and hold the base **PAGE** button for at least 10 seconds, until you hear the validation tone (two beeps), then release the button.


At the handset:

Menu

Press the  button to enter the menu.

Redial/
Vol
Calls

Menu

Press the **UP** or **DOWN** button to scroll to **Registration** and press the  button.


The display will show **Base 1-4**. There will be a tick to indicate the other bases that the handset is already registered to.



Enter the base number (**1-4**) that you want to register the handset to.



SMS

Enter your 4-digit PIN (original setting 0000) and press the  button.

The display will show **Base search 1, 2, 3, 4** and the Y symbol will flash as the handset tries to locate the base.

When the handset locates the base, the handset will be automatically selected and shown on the display.

(If the handset does not locate the base, the handset will return to the previous menu. Try to register again by using a different base number. Ensure that you are close to the base).



Press the  button to confirm. The handset is registered.

Note


Your 4 digit PIN number is 0000 unless you have already allocated a new PIN number as explained on page 26.

To de-register a handset from the base




Press the  button to enter the menu.



Press the **DOWN** button to scroll to **Setup** and press the  button.



Press the **DOWN** button to scroll to **Remove HS** and press the  button.

The display will show **PIN?**



Enter your 4-digit PIN (original setting 0000).



Press the  button.




Press the **UP** or **DOWN** button to scroll to select the handset you want to de-register (Handset 1-5).



Press the  button. Display shows **Confirm?**



Press the  button. You will hear a confirmation beep. Once deregistered, the handset will display **Not Sub.**


To register a handset to a different make of base station

The base must be GAP compatible.

To put the base in registration mode, see the base station user guide.

At the handset:


Press the  button to enter the menu.


Press the **UP** or **DOWN** button to scroll to **Registration** and press the  button.

The display will show **BASE 1-4**. The numbers that are flashing indicate the other bases that the handset is registered to.

Enter the base number (**1-4**) that you want to register the handset to.


Press the  button.

Enter your 4-digit PIN (original setting 0000) and press the  button.

The display will show **Base search 1, 2, 3, 4** and the  symbol will flash as the handset tries to locate the base. When the handset locates the base, the handset will be automatically selected and shown on the display.

(If the handset does not locate the base, the handset will return to the previous menu.

Try to register again by using a different base number. Ensure that you are close to the base.)

Press the  button to confirm. The handset is registered.


Note

Your 4-digit PIN number is 0000 unless you have already allocated a new PIN number as explained on page 26.

To see the base station identity number


This is the individual code number of the base.

Press the  button to enter the menu.

Press the **DOWN** button to scroll to **Setup** and press the  button.

Press the **DOWN** button to scroll to **Base Id**.

Press the  button. The identity number is displayed.

Press *and hold* the  button to return to standby.

Internal calls

If you have more than one handset registered to the base you can make internal calls between handsets.

To make an internal call to another handset



Press *and hold* the **INT** button until Internal Call is displayed.



Enter the number of the handset you wish to call, (1-5). The handset will be called.



To end the call, press the **TALK** button.

Transferring calls

You can transfer an external call to another handset registered to the base.

To transfer an external call between handsets

During an external call:



Press *and hold* the **INT** button until Internal Call is displayed.



Enter the number of the handset that you want to transfer the call to (1-5).

Your caller will be put on hold.

When the internal handset is answered, (if you want to you can talk to the handset user first), press the **TALK** button. The call will be transferred.



If the call to the second handset is not answered you can speak to your caller again by pressing *and holding* the **INT** button.



Three-way conversation

You can talk to one external caller and another internal caller at the same time on your handset.

During a call with an external caller:



Press *and hold* the **INT** button. Your caller is put on hold and you hear a tone.



Enter the number of the handset you want to transfer the call to.



When the internal handset is answered, press *and hold* the **#** button for about 3 seconds. You can now start your three-way conversation.



If the internal handset user does not answer your call, press *and hold* the **INT** button to return to your external caller.



Press the **TALK** button to end the call.

Note

*When on a three-way call, the call with the internal handset can only be ended by the handset that set it up. To do this press the **#** button.*

Handset ring priority

This allows you to make the base or one of the handsets ring before the others when you receive an external call.

You can select which base or handset will ring and how many rings it can make before the others start to ring.



Press the **✓** button to enter the menu.



Use the **DOWN** button to scroll to **Setup** and press the **✓** button.



Use the **DOWN** button to scroll to **Ring Priority** and press the **✓** button.



Use the **DOWN** button to scroll to **Def. Priority** and press the **✓** button.



Use the **DOWN** button to display the option you want, either **Base** or the handset number you require, eg **Handset 3**.



Press the **✓** button. The display shows **Rings** followed by a number between 1 and 9.



Use the **DOWN** button to scroll to the number of rings you require.



Press the **✓** button. The ring priority is set.


To switch ring priority setting on/off

Once the ring priority has been set, you can switch it on or off to provide normal ringing.




Press the  button to enter the menu.



Use the **DOWN** button to scroll to **Setup** and press the  button.



Use the **DOWN** button scroll to **Ring Priority** and press the  button.




Use the **DOWN** button scroll to select **On** or **Off**.



Press the  button.



Press *and hold* the  button to return to standby.

Help

Replacing the handset batteries.

After a time, you may find that the handset batteries are running out of charge more quickly. This is a standard sign of wear and the batteries will need replacing.

For spare AAA NiCad rechargeable batteries please contact the Synergy Helpline **08706 058 047**.


Do not immerse the batteries in water or throw them into a fire, or dispose of them with ordinary domestic refuse.

BT accepts no responsibility for damage caused to your Synergy handset by using any other type of battery.

Replacing the batteries

Slide off the battery compartment cover.

Install the batteries as shown.

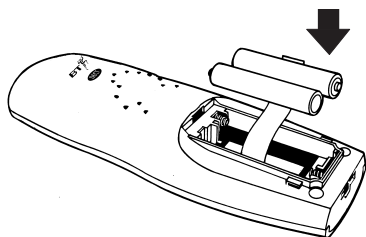

Slide the battery compartment cover back into place.

Customer Helpline

*If you are still experiencing difficulty, call the Synergy Helpline on **08706 058 047**.*

<i>Telephone problems</i>	<i>Possible cause</i>	<i>Solution</i>
No display appears.	The batteries may be flat or dead.	Recharge or replace the batteries.
	The handset may be switched off.	Switch the handset on, <i>see page 14</i> .
No dial tone.	The telephone line cord may not be plugged into the phone socket or the base station may not be connected to the power supply.	Check that the telephone line cord is plugged in and that the base station is connected to the mains power and is switched on.
You cannot link up with the base station.	The base station may not be connected to the power supply.	Check that the mains power cable is connected at the base and switched on.
	Is the display flashing Y ? You are out of range of the base.	Move closer to the base station.
	The batteries could be low or flat.	Charge the handset batteries or replace them if necessary.
	Your handset could be registered to the wrong base.	If using more than one base station, check that you are connected to the correct base. <i>See page 26</i> .
No ring on the handset.	The ringer volume may be switched off.	To adjust the ringer volume on the handset. <i>See page 21</i> .
	Base station may not be properly connected.	Check that the base station is plugged into the phone socket and that the base station is plugged into the mains power and switched on.
Buzzing noise on my radio, TV, computer or hearing aid.	Sometimes, your Synergy 3200 SMS can interfere with other electrical equipment if it is placed too close.	It is recommended that you place your Synergy 3200 SMS and other Synergy/ DECT GAP compatible handsets at least one metre away from such appliances to avoid any risk of interference.
The base station is not charging the handset	Power adaptor might not be properly plugged into the base station.	Check that the base station is plugged into the mains socket and switched on.
	You could be using the wrong power adaptor.	Check you are using the correct power adaptor, item code 872260.
	The handset might not be in the charger correctly.	Check that your handset has slotted correctly into the base station charger.
	The batteries may not be fitted correctly.	Make sure the batteries are correctly fitted into the handset.

<i>Telephone problems</i>	<i>Possible cause</i>	<i>Solution</i>
Cannot adjust an option in the base station.	Someone else might be making changes via another handset?	Try again when the other handset user has finished.
SMS messages cannot be sent and screen displays unable to send.	The base station power supply or telephone line cord might not be properly connected.	Check that the base station power supply is plugged into the mains socket and switched on and that the telephone is plugged into the telephone wall socket.
	There might be a fault on the line.	Check your telephone line is working properly.
	You might have deleted the server number in error.	Call the Synergy SMS Helpline for assistance on 0906 302 0069 (calls are charged at 50p per minute open from 9am to 5:30pm Mon–Fri).
	Your SMS memory might be full.	Delete unwanted text messages, see your Using SMS guide.
	More than one SMS product plugged into the line.	Remove other products.

Customer Helpline

*If you are still experiencing difficulty, call the Synergy Helpline on **08706 058 047**.*

General information

Guarantee

Your Synergy 3200 SMS is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below the guarantee will provide for the repair of, or at BT's or its agent's discretion, the option to replace the Synergy 3200 SMS or any component thereof, (other than the batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is provided.
- The equipment is returned to BT or its agent as instructed.
- This guarantee does not cover the batteries and any faults or defects caused by accidents, misuse, fair wear and tear, neglect, storm damage, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.
- This guarantee does not affect your statutory rights.

Within the 12 month guarantee period:

If you experience difficulty using the product, prior to returning your product, please read the Help section beginning on *page 37*, or contact the Synergy 3200 Helpline for assistance.

Helpline **08706 058 047**, 9am to 5.30pm Monday to Friday.

In the unlikely event of a defect occurring, please follow the Helpline's instructions for replacement or repair.

Outside of the 12 month guarantee period:

If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network. We recommend that you contact BT's approved repair agent, TecLogic on **01672 564444** or a local qualified repairer.

Instructions for returning the product:

If the Helpline is unable to remedy your problem they will ask you to return the product. Where possible, pack the product in its original packaging. Please remember to include all parts, including line cords, power supply units, and the original batteries. (Please note that we cannot take responsibility for goods damaged in transit.) Please obtain and keep proof of posting from the Post Office.

Technical information

How many telephones can you have?

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any other telephone line. Your Synergy 3200 SMS has a REN of 1. A total REN of 4 is allowed, if the total REN of 4 is exceeded, the telephones may not ring.

With different telephone types there is no guarantee of ringing, even when the REN is less than 4.

Only use approved power supply, item code 872260.

Only use approved AAA NiMH rechargeable batteries.

Switchboard compatibility

This product is intended for use within the UK for connection to the public telephone network and compatible switchboards, which support tone dialling and timed break recall. If in doubt please consult your service provider.

Switchboard external line access code

You may need to enter an access code (e.g. 9) in order to get an outside line. So that the switchboard has time to pick up an outside line, you may also need to add a Pause after the access code.

Recall

To use the recall button



This is used when connected to certain switchboards and for some BT Select Services or those services available via your network provider.


To set the dialling mode




Your Synergy 3200 SMS is set to tone dialling. If required, you can switch to pulse dialling.

Press the  button to enter the menu.



Use the **DOWN** button to scroll to **Setup** and press the  button.




Use the **DOWN** button to scroll to **Dialling Mode** and press the  button.




Use the **UP** or **DOWN** button to select either **Tone** or **Pulse**.



Press the  button. You will hear a confirmation beep.



Press *and hold* the  button to return to standby.

To automatically insert an access code followed by a pause

With some switchboards it may be necessary to insert a pause after entering the switchboard access code, e.g. **9, 11** etc to enable you to get an outside line.

If you use your Synergy 3200 SMS with two separate switchboards, you can set two separate access codes. Then you can simply select which switchboard you are using your phone with.

This feature can also automatically insert a pause between the access code and the phone number stored in the Phonebook.

You can then select which switchboard you want your Synergy 3200 SMS to work with.

Press the  button to enter the menu.

Use the **DOWN** button to scroll to **Setup**.

Press the  button.

Use the **DOWN** button to scroll to **PABX Setup**.

Press the  button.

Use the **DOWN** button to scroll to **Pabx 1**.

Press the  button.

Display shows **PIN Code?**



Enter the PIN (original code 0000).

Press the  button.

Display shows **PABX Setup**.



Enter the switchboard access code you want.

Press the  button to confirm.

You can now also choose the length of the pause to be inserted – 3 or 5 seconds.



Use the **DOWN** button to scroll to **Pause Setup**.


Press the  button.



Use the **UP** or **DOWN** button to select 3 or 5 seconds.

Press the  button to confirm. You hear a confirmation tone.



Press *and hold* the  button to return to standby.

Index

Note

For instructions on SMS text messaging, please see the separate 'Using SMS user guide'.

Additional handsets	31	Calls list	29
Auto-talk on/off	23	call back	29
Baby call	19	delete	30
Base settings		enter	29
default/reset	27	store	29
melody	25	Call timer	14
PIN number	26	Call waiting	30
ringer volume	25	Change handset batteries	11
select which base station	26	Date – set	21
Batteries		Delete	
charging	11	calls list	29
install	11	phonebook entries	18
low warning	12	De-register	32
performance	12	Dialling mode	41
replacing	37	Display icons	2
Belt clip	13	Earpiece volume	15
Button beeps on/off	23	End a call	14
Caller Display	28	Guarantee	40
Calls		Handset settings	
end	14	default/reset	27
handsfree	15	keypad beeps on/off	23
internal	34	keypad lock on/off	22
make	14	language setting	24
preparatory dialling	14	name handset	24
receive	15	on/off	14
redial	15	ring priority	35
secrecy	16	ringer melody	22
three-way conversation	35	ringer volume	21
transfer	34		

Handsfree	15	Recall	41
Help	37	Receive a call	15
Helpline	13	Redial	15
I nternal calls	34	Register handset to the base	31
K eypad beeps on/off	23	REN (Ringer Equivalence Number)	41
Keypad lock on/off	22	Reset handset/base	27
L anguage	24	Returning your Synergy 3200	40
Location of product	11	Ring priority	35
M ake a call	14	Ringer melody	
Melody – ringer	22	base	25
Menu structure	4-6	handset	22
Monitor mode	20	Ringer volume	
N ame a handset	24	base	25
O n/off		handset	21
auto-talk	23	Room monitor	20
baby call	20	S afety information	10
handset	14	Secrecy	16
keypad beeps	23	Select services	28
keypad lock	22	Setting up	11
room monitor	20	SMS – see separate	
secrecy	16	Using SMS user guide	
P ause – insert	17, 42	Storing a number	16
Paging handsets	19	Switchboard access code	41
Phonebook		Switchboard compatibility	41
delete	18	T echnical information	41
dial	17	Telephone line cord	13
edit	18	Three-way conversation	35
enter	17	Time – set	21
pause	17	Transfer calls	34
store	16	U npacking	9
PIN base	26	V olume	
Power supply	11	base ringer	25
Preparatory dialling	14	earpiece	18
		handset ringer	21
		handsfree speaker	15

R&TTE

This product is intended for use within the UK for connection to the public telephone network and compatible switchboards.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

Declaration of Conformance.

Hereby, Suncorp Technologies, declares that this Synergy 3200 SMS is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The Declaration of Conformance for the Synergy 3200 SMS is published on the web site <http://www.suncorptech.com/bt>



Offices worldwide

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

Touchtone™ is a registered trade mark of British Telecommunications plc in the UK.

© British Telecommunications plc 2002.
Registered Office: 81 Newgate Street, London EC1A 7AJ.
Registered in England No. 1800000.
Designed by: The Art & Design Partnership Limited.
Printed in China. Synergy 3200 SMS. Issue 1 (10/02) 4

